

# **INSTALLATION GUIDE**

s = 0



Customer For more information about TOOLKISS<sup>®</sup> products please visit WWW.TOOLKISS.COM

(2) +1(832)3768443

service:

🔀 sales@toolkiss.com

**Do not return product to the store.contact TOOLKISS**<sup>®</sup> **directly** with any questions.



#### **IMPORTANT SAFETY INSTRUCTIONS**

When using an electrical furnishing, basic precautions should always be followed, including the following: Read all instructions before using (this furnishing).

 
DANGER – To reduce the risk of electric shock:

1. Always unplug this furnishing from the electrical outlet before cleaning or servicing.

WARNING – To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1. Unplug from outlet before putting on or taking off parts.
- 2. Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
- 3. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- 4. Never operate this furnishing if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
- 5. Keep the cord away from heated surfaces.
- 6. Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 7. Never drop or insert any object into any opening.
- 8. Do not use outdoors.
- 9. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 10. To disconnect, turn all controls to the off position, then remove plug from outlet.
- 11. For grounded products the following st tement:
- "WARNING: Risk of Electric Shock Connect this furnishing to a properly grounded outlet only.

See Grounding Instructions."This product is for use on a nominal 120-volt circuit and has a grounding plug that looks like the plug illustrated as below, Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.



12. Mount furnishings at the correct height.

13. Mount only approved work surfaces and secondary surfaces (shelves) in accordance with instructions. Failure to do so may cause instability, collapse, or failure of electrical components.

[Applicable to furnishings that are not provided with a work surface and/or secondary surfaces (shelves)].

#### SAVE THESE INSTRUCTIONS

#### "SUITABLE FOR DAMP LOCATIONS [CONVIENTAUX EMPLACEMENTS HUMIDES]

For Household / Residential Use Only [POUR L'USAGE MÉNAGER / RÉSIDENTIEL SEULEMENT]"



#### ALL SIZE FOR YOUR CHOICE!

SKU	SIZE	Power wattage	Outut voltage	Input cuttent/A	Output cuttent/A	VERTICALLY & HORIZONTALLY	ANTI-FOG	THREE TEMPERATURE	DIMMING	POWER PLUG	WALL SWITCH CONTROL	LIGHT MEMORY	BOTTEN NUMBER	CERTIFIED
TK19035	32x24	24w	12V	0.5A	2A	×	×	<b>~</b>	× -	~	×	× -	2	KS-3224-24-N
TK19036	36x28	36w	12V	0.7A	3A	<ul> <li>Image: A second s</li></ul>	<b>~</b>	<ul> <li>Image: A second s</li></ul>	<b>~</b>	<b>~</b>	<ul> <li>Image: A set of the set of the</li></ul>	<b>~</b>	3	KS-3628-36-N
TK19166	36x24	36w	12V	0.7A	3A	<ul> <li></li> </ul>	×	×	×	×	×	<b>~</b>	3	KS-3624-36-N
TK19037	36x30	36w	12V	0.7A	3A	×	×	×	×	×	×	×	3	KS-3630-36-N
TK19066	40x24	36w	12V	0.7A	ЗA	×	×	× 1	×	~	×	<b>~</b>	3	KS-4024-36N
TK19086	40x32	36w	12V	0.7A	3A	×	×	<ul> <li>Image: A set of the set of the</li></ul>	×	×	×	×	3	KS-4032-36-N
TK19068	48x36	60w	12V	0.7A	5A	<ul> <li></li> </ul>	×	<b>~</b>	×	$\checkmark$	×	×	3	KS-4836-48-N
TK19169	55x30	80w	12V	0.7A	8A	<ul> <li>Image: A set of the set of the</li></ul>	×	<ul> <li>Image: A set of the set of the</li></ul>	×	~	×	× 1	3	KS-5530-48-N
TK19088	60x28	60w	12V	0.7A	5A	×	×	×	×	×	×	×	3	KS-6028-60-N
TK19089	60x36	60w	12V	0.7A	5A	×	×	<ul> <li></li> </ul>	×	~	×	×	3	KS-6036-48-N
TK19080	72x32	100w	24V	1.11A	4.2A		×	×	<b>~</b>	~	×	<b>~</b>	3	KS-7232-48-M
TK19081	72x36	150w	24V	1.66A	6.3A		×	<ul> <li></li> </ul>	× 1	×	<ul> <li>Image: A set of the set of the</li></ul>	×	3	KS-7236-60-M
TK19061	72x32	100w	24V	1.11A	4.2A		~	<b>~</b>	×	$\checkmark$	×	×	3	KS-7232-C-M
TK19062	72x36	100w	24V	1.11A	4.2A		×	<b>~</b>	×	×	×	<b>~</b>	3	KS-7236-C-M
TK19063	84x32	100w	24V	1.11A	4.2A		×	<b>~</b>	× 1	×	×	×	3	KS-3278-F-M
TK19065	96x36	150w	24V	1.66A	6.3A		<b>~</b>	× .	×	~	×	×	3	KS-3299-F-M
TK19268	48x36	100w	24V	1.11A	4.2A	×	×	<b>~</b>	×	×	×	<b>~</b>	3	i 1
TK19289	60x36	150w	24V	1.66A	6.3A	<ul> <li></li> </ul>	×	<ul> <li></li> </ul>	× 1	×	×	×	3	1
TK23601	20x28	36w	12V	0.7A	3A	<ul> <li></li> </ul>	×	<b>~</b>	× .	<b>~</b>	×	×	2	!!
TK23602	24x36	48w	12V	0.6A	4A	×	~	<b>~</b>	× -	~	×	× 1	3	i 1
TK23603	24x32	48w	12V	0.6A	4A	<b>~</b>	×	<ul> <li>Image: A set of the set of the</li></ul>	× 1	×	×	× 1	2	i i
TK23604	40x24	48w	12V	0.6A	4A	×	×	<b>~</b>	×	~	×	×	3	!!
TK23605	36x28	48w	12V	0.6A	4A	×	×	×	×	~	~	×	3	1
TK23606	36x36	60w	12V	0.7A	5A	<ul> <li></li> </ul>	×	<ul> <li>✓</li> </ul>	Y	×	×	<b>×</b>	3	i i
TK23607	24x40	60w	12V	0.7A	5A	<b>~</b>	<b>~</b>	<b>~</b>	×	×	×	<b>~</b>	3	!!
TK23608	48x32	60w	12V	0.7A	5A	×	~	×	×	~	×	×	3	i 1
TK23609	60x28	150w	24V	1.66A	6.3A	×	<ul> <li>Image: A second s</li></ul>	<ul> <li>✓</li> </ul>	Y	×	<b>~</b>	<b>~</b>	3	i i
TK23600	60x30	150w	24V	1.66A	6.3A	×	<b>~</b>	<b>~</b>	×	×	×	×	3	!!
TK23610	48x40	100w	24V	1.11A	4.2A	×	×	<b>~</b>	×	~	×	×	3	1
TK23611	60x40	100w	24V	1.11A	4.2A	×	×	<b>×</b>	<b>~</b>	~	×	<b>~</b>	3	i i
TK23612	72x40	150w	24V	1.66A	6.3A		<b>~</b>	×	×	~	×	×	3	!!
TK23615	84x40	150w	24V	1.66A	6.3A		<b>~</b>	× .	×	<b>~</b>	×	×	3	
TK23617	110x40	200w	24V	2A	7.5A	i i		<ul> <li>1</li> </ul>	i 🖌 i		Y	<b>`</b>	3	i i



### WARNING AND SAFETY INSTRUCTIONS

Before assembling your LED Lighted Mirror fixture, please make sure that you carefully read through this instruction sheet, refer back to them during installation to ensure your product is fitted safely and correctly. Keep these instructions for future use.

#### WARNING Risk of Fire and Electric Shock

- All fittings must be installed in accordance with current IEE wiring regulations. If in doubt, consult a qualified electrician.
- Switch off the electrical supply at the main circuit board BEFORE installation and maintenance.
- Suitable for indoor use only. This product should be positioned well awayfrom curtains and fabrics. Never cover the mirror.
- Regularly check the cord, the transformer and all other parts for damage. If any part is damaged the product should not be used.

#### **INSTALLATION SAFETY**

- Inspect the product immediately upon receipt for the transit damage ormissing parts. Handle the product with care and protect against knocks to all sides and edges of the glass.
- Ensure there are no hidden pipes or cables in the wall before drilling.
- Wear suitable eye protection when drilling. Takecare if drilling ontiled surfaces in case the drill slips.


## 

The light source of this product is non-changeable light diodes (LED). Do not disassemble the product, as the light diodes can cause damage to the eyes.

NOTE: The important safeguards and instructions that appear in this manual are not meant to cover all possible conditions and situations that may occur. It must be understood that common sense, caution and care, are factors that can't be built into any product. These factors must be supplied by the person(s) caring for and operating the fixture. Do not install this fixture in hazardous locations.



#### Give powerful tools for a kiss

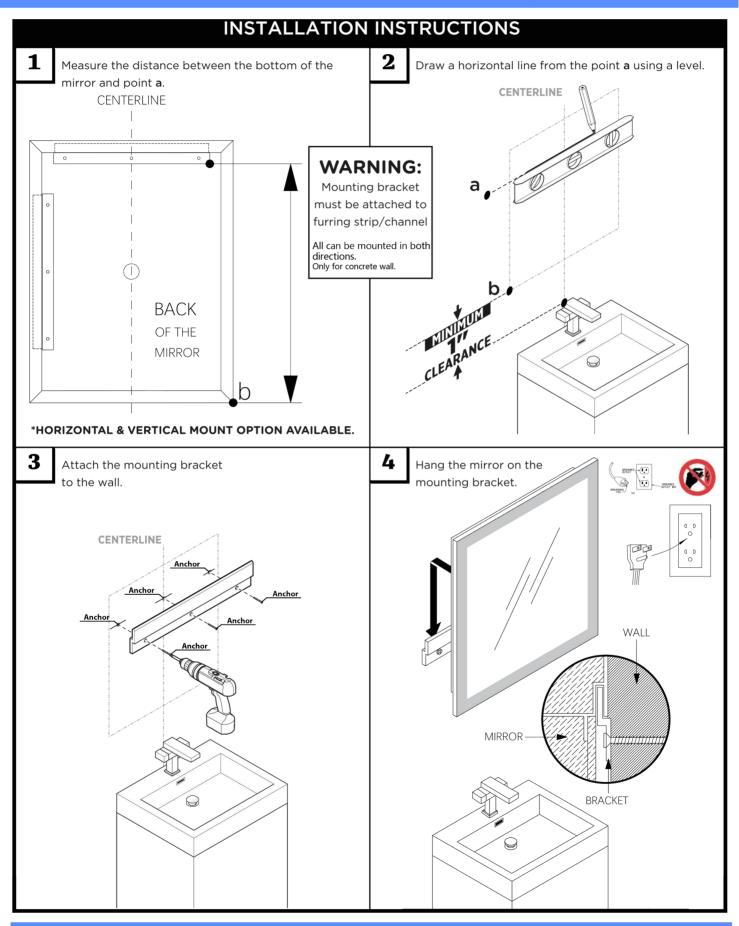





Give powerful tools for a kiss

#### CHECK PRODUCT LIST AFTER OPENING THE PACKAGE

**TOOLS YOU MAY NEED** 

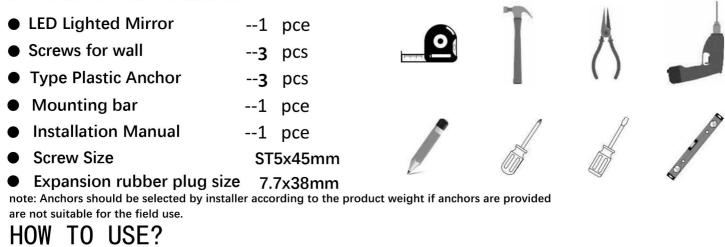


POWER 0N/0FF (<1S)

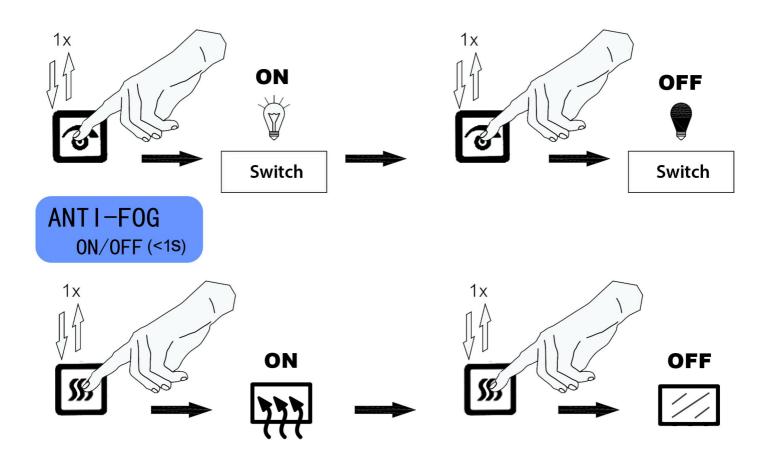






Give powerful tools for a kiss


## COLOR TEMPERATURE ADJUSTABLE

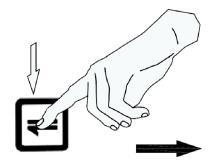

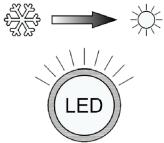

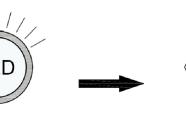


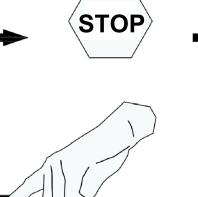

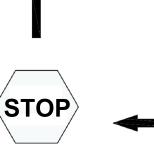






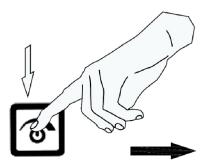








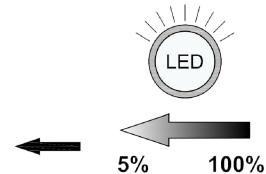

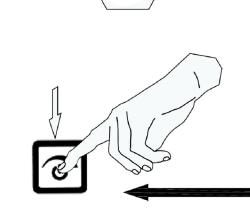

STOP

STOP