



SKU # 1004 176 661  
OMS THD SKU # 1004 088 999  
Model # TY168-1924



**Thank you!**

We appreciate the trust and confidence you have placed in Home Accents through the purchase of this 24in 40 LED Lighted DAY OF THE DEAD. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Accents!

1-877-527-0313  
HOMEACCENTSHOLIDAY.COM

Parts List		
Locater	Name	Qty.
A	Back Half of Head	1
B	Front Half of Head	1

Hardware List		
Locater	Name	Qty.
C	Ground Stake	4
D	Plastic Tie	10
E	Spare Fuse	2
F	Spare Bulb	2

**ASSEMBLY INSTRUCTIONS**  
**24in 40 LED Lighted Day Of The Dead**

**USE AND CARE GUIDE**

**PLANNING ASSEMBLY**

Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while laying flat on the ground versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center.

**\*Assembly of this product may require more than one person.**

**Pre-Operation**

**CAUTION:** Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.

**CAUTION:** The lighting string on this product is rated at 2.4 Watts (0.02 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

**Care and Cleaning**

- a. Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections, and wires. If the product is placed somewhere other than the ground it should be well secured and flat.
- b. Carefully disassemble the unit taking caution not to cut any electrical wires.
- c. Wipe the unit with a damp cloth and allow the unit to dry before storing.
- d. Store the product neatly in a cool, dry location protected from sunlight.

**Guarantee**


**What is Covered**

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 days limited guarantee due to defects in material and workmanship. Return the product with purchase receipts to the location of purchase for refund within 90 days of purchase.

**What is Not Covered**

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDs, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m.-6 p.m., EST, Monday-Friday


**Diagram of Parts**

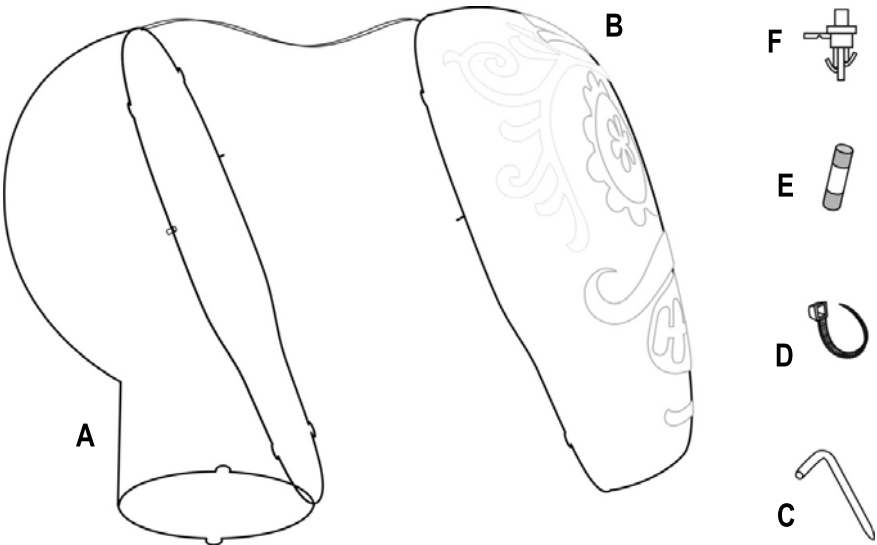

# ASSEMBLY


## 1 Assembling the Head

Align the two halves of Head (A,B) with each other then place the connecting rods on one half into the connecting holes on the other half.

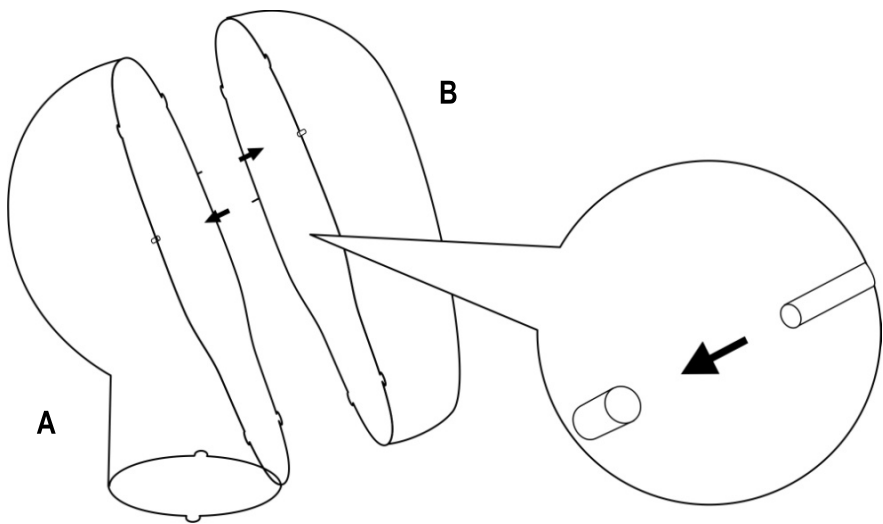

## 2 Securing the Head

Fasten two halves of Head (A,B) together at the connecting loops with the Plastic Ties (D).

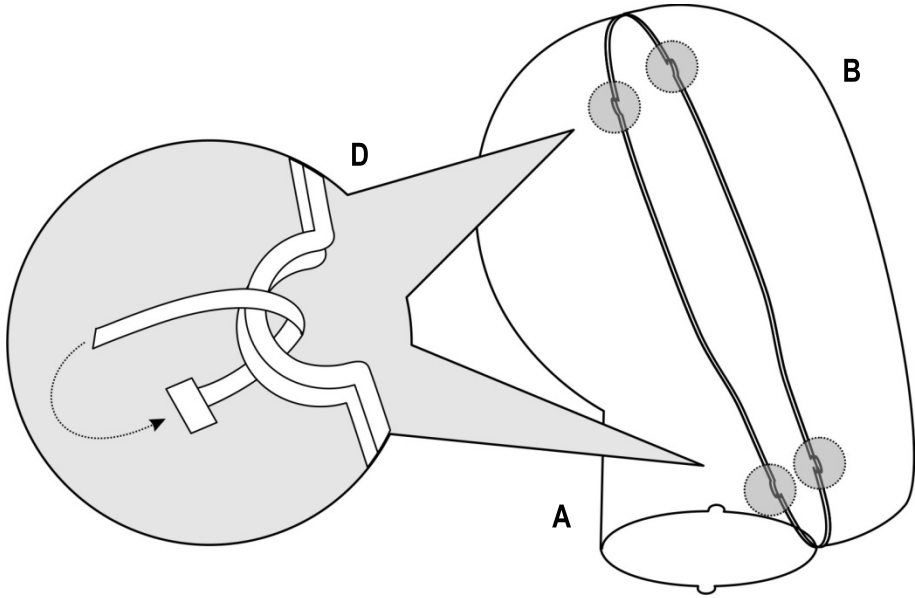

## 3 Assembling the Ground Stakes

Insert Ground Stakes (C) over the metal frame (per diagram below) then firmly into the ground.

