
ELECTRONIC TANKLESS WATER HEATER

INSTALLATION DIAGRAM FOR TITAN SCR-3 SERIES N-160

IMPORTANT!

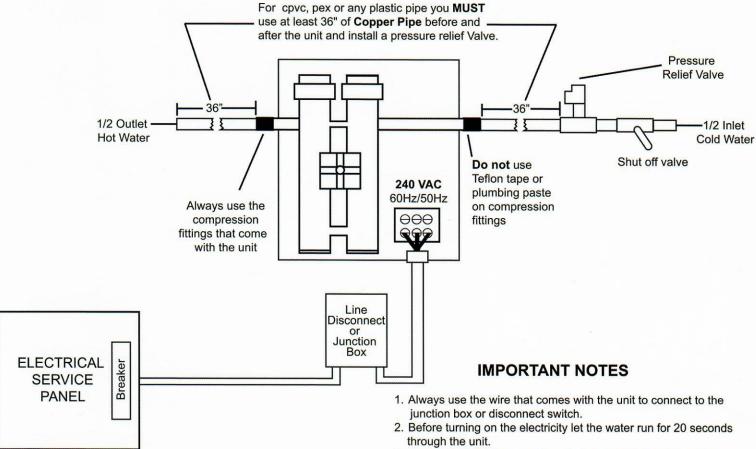

- Always flush all the water lines before connecting the unit to the copper pipes.
- 4. Note that excessive heat from soldering on copper pipes near the heater may cause internal damage.
- DO NOT OPEN the unit under any circumstances unless you contact a technician at Niagara Industries to diagnose the problem.

UNIT SPECIFICATIONS AND TEMPERATURE RISE CHART

MODEL	MAXFLOW	KW/HR	VOLTS	AMPS	BREAKER	WIRE	1.0 gmp	1.5 gpm	2.0 gpm	2.5 gpm	3.0 gpm	3.5 gpm	4.0 gpm
N-160	4.0 gpm	16	240	66	70	6ga	109 deg	73 deg	55 deg	44 deg	36 deg	31 deg	27 deg



Take the information on your mobile device

