



FARBERWARE®

FARBERWARE®



Farberware is a registered trademark of Farberware Licensing Company, LLC
Manufactured and sold pursuant to a license from Farberware Licensing Company, LLC
© 2019 Farberware Licensing Company, LLC. All rights reserved

4.4 CU FT COMPACT REFRIGERATOR

Use and Care Manual
Important Safeguards
For service call 877-648-5973





SAFETY

Your safety and the safety of others is very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can cause serious injury to you and others.

All safety messages will follow the safety alert symbol.

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

Appliance Specifications:

115 Volts, 60 Hertz
110 Watts



THIS PRODUCT IS FOR USE IN 120V AC OUTLET ONLY.

OVER 100 YEARS OF EXCELLENCE

Farberware has been an innovator in housewares and a household name for over a century. To this day, the Farberware family of products are designed with the consumer in mind and manufactured to the highest standards.

CONGRATULATIONS ON YOUR PURCHASE OF THE FARBERWARE® 4.4 CU FT COMPACT REFRIGERATOR

FEATURES INCLUDE:

- Full-width chiller compartment
- Glass shelves for easy cleaning
- Can and 2-liter bottle door racks
- Adjustable thermostat control
- Interior light
- Manual defrost
- Reversible door, can be installed to open left or right
- Adjustable leveling feet
- Perfect for dorm room, apartment, office or game rooms

SPECIFICATIONS AND PARAMETERS

- Climate Class: SN-ST
- Refrigerator Capacity: 4.4 cubic feet
- Current: 1.3 A
- Rated Voltage: 115 V
- Rated Frequency: 60 Hz
- High Side: 150 psi
- Low Side: 60 psi
- Energy Consumption (kWh/year): 228
- Refrigerant (oz): R600a/1.02 oz.
- Foaming Agent: Cyclopentane
- Interior Temperature: 32° F - 50° F
- Dimensions: 21.9" L x 19.3" W x 33" H
- Weight: 53 lbs.



IMPORTANT SAFEGUARDS

A person who has not read and understood all operating and safety instructions is not qualified to operate this appliance. All users of this appliance must read and understand this Instruction Manual before operating or cleaning this appliance.

When using electrical appliances, basic safety precautions should always be followed, including:

1. **Read all instructions before operating this appliance.**
2. DO NOT TOUCH the hot surfaces. Use handles or knobs.
3. This appliance is NOT A TOY.
4. Keep out of reach of children.
5. Unsupervised young children and cognitively challenged individuals should never operate this appliance.
6. Close supervision is necessary when any appliance is used by or near children.
7. To protect against electrical shock do not immerse cord, plug or any part of this unit in water or other liquids.
8. Do not operate this appliance when parts are missing or broken.
9. Unplug from outlet when not in use, before removing parts and before cleaning. Allow to cool before putting on or taking off any parts and before cleaning.
10. DO NOT operate any appliance with a damaged cord or plug, after the appliance malfunctions, or if the appliance has been damaged in any manner. Return the appliance to the nearest repair shop for examination, repair or adjustment.
11. The manufacturer does not recommend the use of accessory attachments other than what is provided by the manufacturer. Use of attachments may cause injuries.
12. DO NOT use the appliance for other than its intended use.
13. DO NOT use outdoors. FOR HOUSEHOLD USE ONLY.
14. DO NOT place on or near a hot gas or electric burner or in a heated oven.
15. DO NOT put any parts of this appliance in dishwasher.
16. DO NOT allow cord to hang over edge of a table or counter, or touch hot surfaces.
17. Always attach plug to appliance first, then plug cord in the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.

ADDITIONAL IMPORTANT SAFEGUARDS

Operating Safety Precautions

1. Read all instructions before operating this appliance.
2. Before connecting appliance to power supply, let the unit stand upright for 24 hours.
3. Check appliance for presence of foreign objects prior to use.
4. **NEVER** put anything living into the refrigerator for risk of severe injury or death.
5. **DO NOT** cover or block any ventilation openings on the appliance.
6. Keep the internal temperature as high as you can, which will reduce energy consumption and save you money.
7. **DO NOT** continuously open and close the refrigerator and chiller door during normal use.

8. Keep the drawers, stabilizing rods and shelves consistent with their original placement in the refrigerator.
9. The electrical circuit requirements are 115 volt and 60 Hz. It is recommended that a separate circuit serving only this product be provided.
10. **DO NOT** interrupt the power by pulling the power supply cord and/or pulling the power plug out of its socket directly.
11. **DO NOT** damage the refrigerant tubing.
12. All maintenance on this unit should be done by an authorized repair technician.
13. **DO NOT** put bottled beverages in the chiller, as they may break and/or explode.
14. **DO NOT** put sealed containers of hot soups, sauces or foods into the refrigerator without cooling off first. Hot soups, sauces or foods placed into the refrigerator will grow bacteria and can cause food poisoning.
15. **DO NOT** store explosive substances such as aerosol cans with a flammable propellant in this appliance. This appliance is intended for household use and similar uses such as:
 - Staff kitchen areas in shops, offices and other working environments
 - Farm houses and by clients in hotels, motels, bed and breakfasts and other residential environments
 - Catering and similar non-retail applications
16. **DANGER! RISK OF CHILD ENTRAPMENT!** Before you throw away your old refrigerator or chiller, **TAKE OFF THE DOORS!** Leave the shelves and drawers in a place so that children may not easily climb inside.
17. **DO NOT** dispose of this appliance as unsorted municipal waste. Dispose of appliance in accordance with federal or local regulations.
18. It is best to not store objects that are magnetic, heavy or filled with water or other liquids on top of this appliance. Electronic components may not work if water gets inside of this appliance. Do not store valuable objects, objects that are adversely affected by temperature or serum, bacterin, etc. inside or on top of the appliance.
19. **SPECIAL SAFETY NOTICE:**
 - If a gas leak is suspected in the location, do not unplug or plug in the appliance as it may cause sparks or fire.
 - Don't splash water on the back of the appliance, as it may cause malfunction or electric shock.
 - Don't store flammable materials such as ether, benzene, gas or glue in the refrigerator.
20. **CAUTION!** Risk of fire or explosion if refrigerant tubing is punctured. Follow the handling instructions carefully. Flammable refrigerant used.

Instructions for the Electrical Cord and Plug

 1. **ELECTRICAL SHOCK HAZARD:** Failure to follow these instructions can result in death, fire, or electrical shock.
 - Plug into a grounded 3 prong outlet.
 - DO NOT remove ground prong.
 - DO NOT use an adapter.
 - DO NOT use an extension cord.
 2. This unit **MUST** be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.



This unit is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

3. **WARNING:** Improper use of the grounding plug can result in a risk of electric shock. **If the plug does not fit fully into the outlet, contact a qualified electrician. Do not attempt to modify the plug in any way.**
4. A short power supply cord is provided to reduce the risk resulting from becoming entangled or tripping over a long cord.
5. The manufacturer does not recommend using this machine in countries that do not support 120V AC even if a voltage adapter, transformer, or converter is in use.

SAVE THESE INSTRUCTIONS!

PARTS & ASSEMBLY

PARTS

Your REFRIGERATOR requires very little assembly. Before using, remove all packing materials from the inside of the refrigerator, and peel off the protective film on the outside of the refrigerator. Check the refrigerator for any damage, such as misaligned or bent door, damaged door seals and sealing surfaces, broken or loose door hinges and latches and dents inside the refrigerator or on the door. If there is any damage, **DO NOT** use the refrigerator. Return damaged item to the store where it was purchased.



THERMOSTAT DIAL & LIGHT





HOW TO OPERATE

Before first use, remove all adhesive tape from the drawers, shelves, trays and drain tube plug.

INSTALLATION

1. The refrigerator should be placed on a completely flat surface. Allow 1 foot of space on each side of the refrigerator and between the refrigerator and the wall. Also allow at least 8 inches of space between the top of the refrigerator and the ceiling.
2. Choose a location for your refrigerator that is not exposed to sunlight, high temperature or humidity, as humidity may stain and damage the refrigerator.
3. The appliance can be adjusted by rolling the two legs in the bottom front of the refrigerator if it becomes unstable. Raise the refrigerator by rolling the two legs clockwise.
4. The surface of the location where the refrigerator is installed should be firm and flat. If refrigerator is not secured in a proper location, noise and vibration may occur. The noise may be increased if the floor is not firm. If you have to position the refrigerator on a carpeted floor, place a sheet underneath the refrigerator, such as plywood or a plastic mat, to prevent heat emissions from ruining the carpet.
5. Make sure that legs are pressed firmly into the floor and allow the refrigerator to lean backward slightly so that the doors remain closed.

PLACEMENT OF FOOD

1. There should always be some space between items inside for air circulation.
2. Food should be kept in sealed containers to avoid becoming dry, spoiled or creating odors in the refrigerator.
3. Hot food should be cooled down before placing into the appliance. Otherwise, bacteria will grow in food.
4. Reducing the frequency of opening the doors can lower the electronic consumption.

NOTE: Do not use any electronic equipment inside the appliance.

ADJUSTING TEMPERATURE

The temperature of the refrigerator can be controlled manually by the knob. However, the number shown on the knob does not correlate to the degrees. The higher the number, the lower the interior temperature of the refrigerator will be.

| | | |
|------------------|-----------------------------------|--|
| 0 = OFF | 1-2 = Higher (warmer) Temperature | |
| 3-5 = Normal Use | 6-7 = Lower (colder) Temperature | |

DEFROSTING

Heavy frost will effect the efficiency and performance of the refrigerator and can create increased energy consumption. If the frost inside of the chiller gets as thick as ¼ inch, you must defrost the refrigerator. Follow these steps to defrost the chiller:

1. Remove all food from the refrigerator and chiller.
2. Uninstall the drawers and shelves.
3. Unplug the power supply cord.
4. Open the doors and wait for the appliance to thaw completely.
5. Clean up the water with dry towels.

NOTE: DO NOT use any other equipment or method to force the defrost process. It may ruin the cooling system.

DISCONNECTING THE APPLIANCE

After a power failure the refrigerator can keep food cool for several hours if doors are kept shut.

If the power fails, do not put additional food into the refrigerator or open the doors.

If you plan to have your power shut off for an extended period of time, make sure to remove all perishable food from the refrigerator or chiller first.

If you stop use of your refrigerator for an extended period of time, unplug the appliance from the outlet.

Always wait at least five minutes after unplugging the power supply cord before plugging it back in.

PACKING AND MOVING

Save packing materials if possible and remember how materials are packed in the box. Repack refrigerator and accessories carefully.

DO NOT lift or pull the doors or door handles during transportation.

When moving, do not tilt appliance more than 45 degrees. Be very careful not to bump the refrigerator into anything.

Allow appliance to stand upright for at least 24 hours before plugging into the electrical outlet.



HELPFUL TIPS

- **The refrigerator does not work.**
It may not be properly connected to the power supply, or the voltage may be too low.
- **The refrigerator does not work as efficiently as expected.**
It may be caused by heavy frost, the temperature setting being too warm, or by frequently opening and closing the door.
- **It makes strange noises.**
The noises may be caused by the refrigerator not being stabilized. Make sure the surface that the refrigerator is on is flat and firm. Noise can also be caused by resonance between the refrigerator and objects near it.
- **The compressor keeps working for a long period of time.**
The temperature may be too high. This can also be caused by the frequent opening and closing of the doors, or by the door being left open. Try moving the temperature setting between 4-1.
- **The inside of the refrigerator has a bad odor.**
Food with a strong odor should be packed in tightly closed containers before storing in the refrigerator or chiller. Make sure to regularly clean out your refrigerator and make sure that you do not leave spoiled food in the refrigerator.
- **Water is leaking from the bottom of the refrigerator.**
The drain tube is probably jammed. Contact a qualified technician to repair it.
- **Heavy frost occurs in the back of the appliance.**
Putting humid or hot food into the refrigerator or chiller may cause this problem. Or it may be caused by a lot of moisture in the environment.
- DO NOT place objects on top of the refrigerator that are magnetic, heavy or filled with water. Electronic components may not work properly if water gets inside. DO NOT store valuables or objects sensitive to temperature inside the refrigerator or chiller.

CLEANING & MAINTENANCE

To prolong the life of your REFRIGERATOR, please follow these simple instructions for maintenance. This appliance should be maintained and cleaned frequently. For your safety, pull plug from socket before cleaning.

- **Interior Maintenance**
Clean the interior of the appliance with clean, soapy water. Wipe dry with a non-abrasive cloth or towel.
- **Outer Maintenance**
Wipe outside of refrigerator with a dry, non-abrasive cloth or towel.
- **Door Gasket**
It is easy to damage the door gaskets with oil, sauce, etc. Be very careful when cleaning.
- **Changing the Light Bulb**
Remove the screw holding the light bulb cover in place, then remove the bulb by unscrewing it in the counterclockwise direction. Replace with a new 10 watt appliance bulb by screwing it in the clockwise direction. Make sure that it is secure, but take care to not overtighten. Refit the light bulb cover over the new bulb and reinstall the screw.

ONE YEAR LIMITED WARRANTY

This warranty applies to products purchased and used in the U.S. and Canada. This is the only express warranty for this product and is in lieu of any other warranty or condition.

This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. This warranty is valid for the original retail purchaser or gift recipient from the date of initial retail purchase and is not transferable.

Keep your original sales receipt as proof of purchase is required to make a warranty claim.

IMPORTANT: This warranty does not cover damages resulting from use not in conformity with the printed directions, accident, misuse or abuse, alternation, the affixing of any attachments not provided with the product, loss of parts, or subjecting the appliance to any but the specified voltage. (Read directions carefully.) This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than as specified on the rating label (e.g., 120V ~ 60 Hz).

Englewood Marketing LLC excludes all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. **Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty.** This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states or provinces do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you.

To make a warranty claim or if service is required, please call our CUSTOMER SERVICE NUMBER.

For faster service, please have the model, type, and series numbers ready for the operator to assist you.

Customer Service Number
In the US 877-648-5973
Englewood Marketing LLC
Email: CustomerService@emllc-USA.com