 


CORDLESS ROMAN SHADE


INSTRUCTION

PREPARATION

1 Check the Hardware


- | | | |
|---|---|---|
|  |  |  |
| A Cordless Roman Shade x 1 | B Mounting Bracket
23" - 39" = 2
47" - 48" = 3 | C Spacer
23" - 39" = 2
47" - 48" = 3 |
|  |  |  |
| D Screw
23" - 39" = 4
47" - 48" = 6 | E Anchor
23" - 39" = 4
47" - 48" = 6 | F Support Rod
Screws x 2 |

 2 Gather other necessary tools



3 Getting Started


Outside Mount

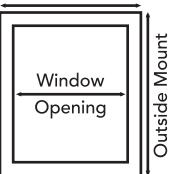

OUTSIDE WINDOW FRAME

Measure window width, including frame.
Measure window opening.
Blind should overlap window opening 2" or more.
Attach bracket to window frame or wall.

Inside Mount

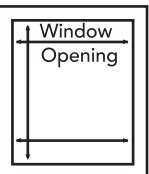

INSIDE WINDOW FRAME


Accurately measure the width of your window opening.
Select size that is nearest to this dimension.

INSTALLATION | OUTSIDE MOUNT (A)

A1 Marking Holes

Mark the screw holes at the back or top of the **bracket B**.


- Pre-drill holes for mounting screws and use level at top of brackets to ensure straight alignment.

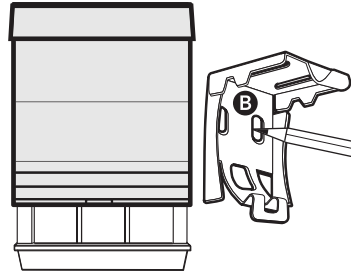

A2 Installing Brackets

Attach the **brackets B** with the **screws D** provided and tighten the screws in place.

- For wider widths and added support, install the center support **bracket** when provided. Install at approximate center of the headrail.
- When mounting **brackets** on wall board or plaster, use the **anchors**.

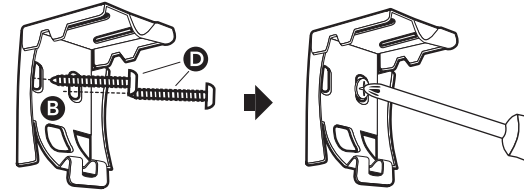

A3 Inserting

Insert the top front of the **head rail A** into the front lip of the **brackets B**. Push the rail into place.




INSTALLATION | INSIDE MOUNT (B)

B1 Marking Holes

Mark the screws holes at the back or top of the **bracket B**.


- Pre-drill holes for mounting screws.
- For wider widths and added support, install the center support bracket when provided. Install at approximate center of the headrail.

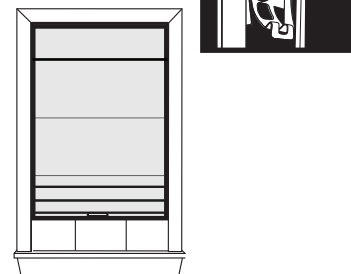

B2 Installing Brackets


Attach the **brackets B** with the **screws D** provided and tighten the screws in place.

- Use the provided **spacers C** when attaching the **brackets** to the ceiling or when the depth of the recess exceeds 1-1/2 inches.
- When mounting **brackets** on wall board or plaster, use the **anchors**.

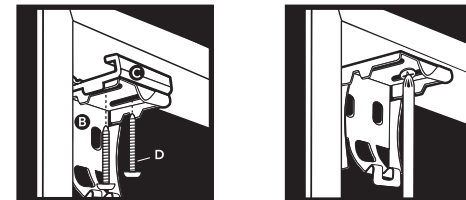

B3 Inserting


Insert the top front of the **head rail A** into the front lip of the **brackets B**. Push the head rail into place.

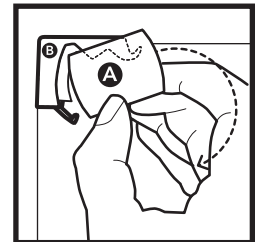

NOTE

The spacer provides the minimum required space above the mounting bracket to install the headrail of the shade.


Use the spacers when mounting to the ceiling.

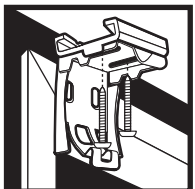


4

Attaching support Rods


Swing support rods into square brackets that are attached to the back of the shade. Snap in place by pressing firmly sideways and install support rod screws **F** to lock into position.

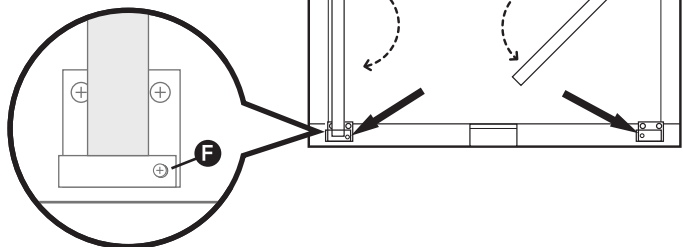

Quick How-to-use Guide

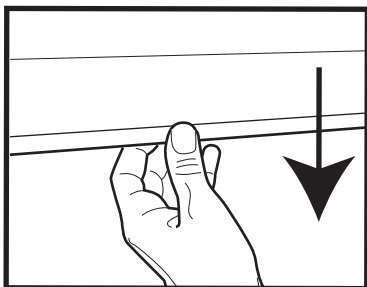

To lower your blinds, simply pull to the desired position and release.

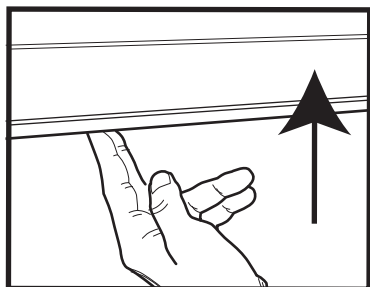

To raise your blinds, push up to desired position and release.



Cleaning your Shade

Periodic cleaning is suggested. For best results, use a vacuum cleaner. For spot-removal use a mild fabric cleanser, suitable for polyester and follow the manufacturers directions.



Chicology Ready-Made Products Warranty

Limited One Year Warranty from the Date of Purchase

What is Covered :

- All of our Cordless Roman Shades are warranted against manufacturer defects in materials or workmanship provided that you are the original purchaser of the product, and the product was installed according to our instructions.

What is Not Covered :

- Normal wear and tear.
- Consumer damages caused by accidents, alterations, abuse of the product, exposure to salt air, misuse, or damages from pets or insects.
- Damages resulting from removal and reinstallation in the same or any other window or application, or failure to follow instructions, such as measurement, installation, cleaning, and maintenance.
- Any products that, with the passage of time, has yellowing or cracking of plastic parts
- Wrong measurements are not covered by the warranty and are not refundable.

To report shipping damages :

If damage occurred during shipping, please email support@chicology.com immediately and report within 14 calendar days or else you may be denied for your damaged product.

Obligations to the consumer :

The obligations of Chicology are limited to the repair or replacements of parts or products found to be defective. Chicology will determine if the product is defective or not and may replace the product. If the product is found to have manufacture defects, we will repair or replace the product. Colors do vary from lot to lot, and may not match original product exactly. Discontinued items will be replaced with the most current product of the same price.

Your Rights under State law :

This limited warranty gives you specific legal rights, and you may have other rights, which vary from state to state.

Contacting us :

If you believe your product has a manufacturing defect, please email us at support@chicology.com