

SHINE VERTICAL SLOW JUICER

SJV-107 **OPERATION MANUAL**



Please read this manual carefully before using

TABLE OF CONTENTS

1. General Safety Regulations	3
2. Product Introduction	4
3. How to Assemble	5
4. Using the Slow Juicer	6
5. How to Disassemble	7
6. Cleaning and Maintenance	8
7. Before Using	9
8. Troubleshooting	10

1. GENERAL SAFETY REGULATIONS

Special Notice:

To ensure the safe usage of this machine and to avoid injury and property damage to you and to others, please read this instruction manual carefully and follow all of the safety warnings and precautions. Failure to follow the safety warnings may lead to accidental injury or damage. Do not allow unattended children or persons with disabilities to use this machine.

Safety Warnings:

- This appliance is for household use only. It is not for commercial use.
- It is strictly prohibited to use this appliance during non-load operation or overloaded operation.
- Do not touch moving parts during operation or injury may occur.
- Do not use this appliance on a tilted or unstable table or surface.
- Do not use finger, spoons, knives, chopsticks, or other foreign objects to push produce into the Feeding Chute.
- Do not use damaged or malfunctioning electrical sockets or fire or personal injury may occur.
- Do not use the appliance near high temperatures or fire or personal injury may occur.
- If the plug, power cord, or other parts are damaged, stop using the appliance immediately. Contact the service center for repair or replacement before use.
- Before disassembling the appliance, make sure that the power is off and the appliance is unplugged.
- Damage to the power cord must be repaired or replaced by the manufacturer or its authorized service center.
- Keep out of the reach of children. Do not let children or disabled persons operate the appliance unattended.
- Do not use accessories that did not come with this appliance.
- Before using the appliance, please confirm that the power is in accordance with the specification of this appliance to avoid damage or other risks.
- Ensure that each of the parts are clean and undamaged before using the appliance.
- Clean immediately after use.
- If the appliance does not work, refer to the Troubleshooting section of this guide. If the appliance still does not function normally, contact your service center for maintenance or repair. Do not disassemble the appliance by yourself.
- This appliance is not designed to grind dry goods such as rice, dried soybeans, or grains.
- Keep this appliance at least 12 in. / 30 cm away from other appliances.

2. PRODUCT INTRODUCTION

Components Name & Function




No	Name	Function
①	Juicing Screen	Separates the juice from the pulp.
②	Auger Housing	Where all the magic happens.
③	Main Body	The powerhouse of the juicer.
④	Pusher	Lets you get pushy with your produce when it does not want to go down.
⑤	Feeding Chute	Specially designed to help autofeed your produce into the juicer.
⑥	Auger	Designed to harness the power of the motor to crush through the toughest produce.
⑦	Slicer	Lets you slice fruits and vegetables faster than a fruit ninja.
⑧	Brush	Multitasking tool that makes cleanup a breeze.
⑨	Pulp Container	Catches pulp.
⑩	Juice Container	Catches juice.

Specification:

Model NO	Rated Voltage	Rated Frequency	Rated Power	Continuous Working Time
SJV-107	110-120V or 220-240V	50/60Hz	200W	up to 10 minutes/use

3. HOW TO ASSEMBLE

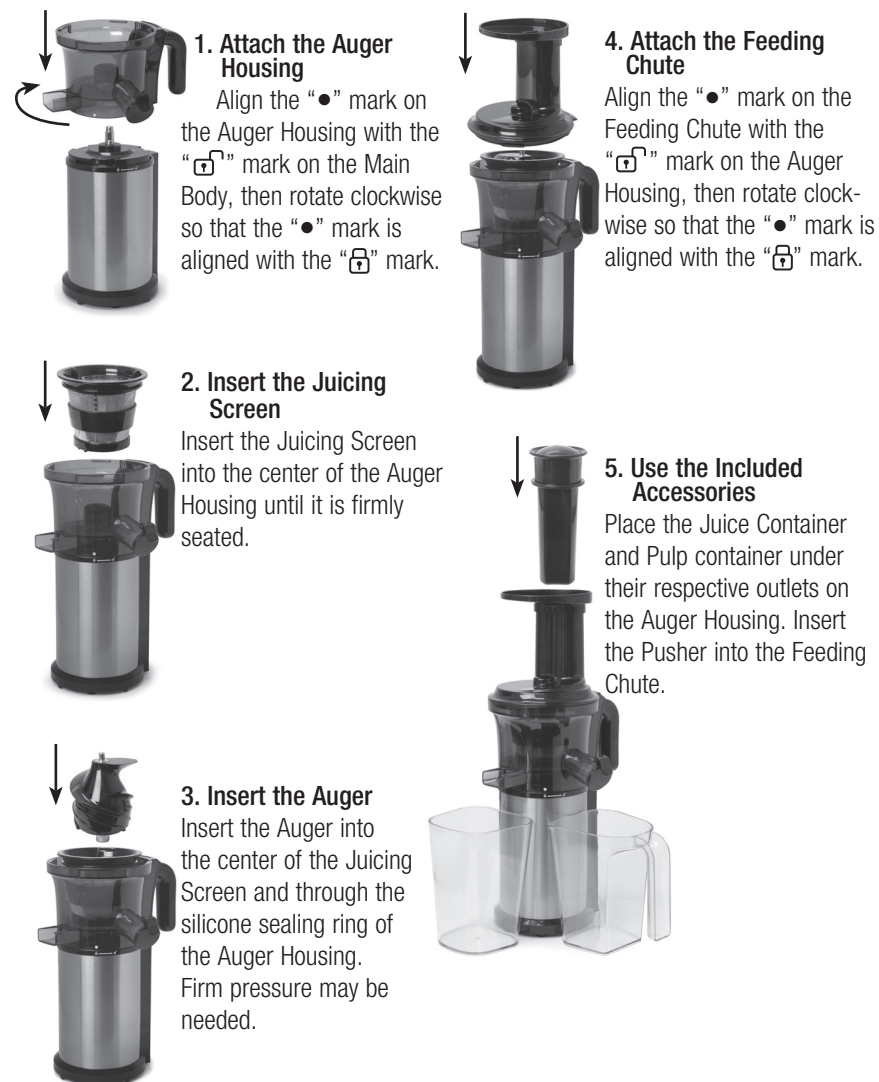

4. USING THE SLOW JUICER

Please thoroughly clean all non-electrical parts with soap and water before using the juicer for the first time. Use a damp cloth or sponge to clean the Main Body. Do not submerge or use running water to clean the Main Body.

The juicer has a built-in safety switch that will prevent the juicer from operating unless all the parts are assembled correctly.



Power Switch:

ON: Press the top portion of the Power Switch to the ON position to start the motor. Press the bottom portion of the Power Switch to turn off the motor.

REV: Press and hold the bottom portion of the Power Switch in the REV position to run the motor in reverse. This is helpful to clear out any hard produce that may cause the juicer to stop.

5. HOW TO DISASSEMBLE



1. Remove Feeding Chute
Rotate the Feeding Chute counterclockwise until the "•" mark is aligned with the "☐" mark. Remove the Feeding Chute by pulling upwards.



3. Remove the Juicing Screen
Pull the Juicing Screen straight up and out of the Auger Housing.



2. Remove Auger
Pull the Auger straight up and out of the Juicing Screen and Auger Housing.



4. Remove the Auger Housing
Rotate the Auger Housing counterclockwise until the "•" mark is aligned with the "☐" mark on the Main Body. Remove the Auger Housing by pulling upwards.

6. CLEANING AND MAINTENANCE

1. Clean the following parts with soap and running water. These parts may be soaked for easier cleaning. Use both ends of the Brush to thoroughly clean and remove any left over pulp.



2. Use a damp cloth or sponge to clean the Main Body. Do not submerge or use running water to clean the Main Body.

7. BEFORE USING

Precaution	Reason
Do not use ice.	Ice can get harder when it is squeezed and damage the juicing parts.
Do not use hard or dried food.	Certain hard or dried foods can damage the juicing parts.
Cut fibrous produce into 1-inch pieces.	Long and stringy fibers can wrap around the Auger and cause the juicer to stall or damage to the juicing parts.
Do not put hard pits or seeds into the juicer.	Hard pits and seeds can damage the juicing parts. Please remove pits and seeds from the produce before juicing.
Only use the included Pusher to push food into the Juicer.	Other objects such as knives or spoons can damage the juicing parts.
Do not operate the juicer for more than 10 minutes at a time.	Overusing the juicer can cause the motor to overheat. Please wait 5-10 minutes between operations.
Do not put the pulp through a second time.	Re-juicing the pulp can cause the juicer to back up and damage the juicing parts.
Enjoy your juice as soon as possible.	We recommend drinking your juice immediately for the best taste and nutrition.
Squeaking sounds are normal.	It from friction as the pulp rubs against the moving parts of the juicer.
Feed the juicer slowly.	Please keep the juice level in the Auger Housing under the MAX line or the juice may overflow.

8. TROUBLESHOOTING

The motor does not turn on.	<ul style="list-style-type: none">• Check that the power cord is plugged into a working socket.• Check that all parts have been assembled correctly.• Contact your customer service center.
Trouble removing the Feeding Chute.	<ul style="list-style-type: none">• Check whether there is a lot of pulp in the Auger Housing. If so, turn the juicer on to remove the excess pulp.• Check whether there is any hard objects stuck in the Feeding Chute. The REV button may help dislodge it.• Contact your customer service center.
The juicer stops during operation.	<ul style="list-style-type: none">• Use the REV button to dislodge any stuck pulp or produce.• Feed the juicer at a slower pace.• Cut your produce into smaller pieces.• Contact your customer service center.
Leak from the bottom of the Auger Housing.	<ul style="list-style-type: none">• Check to see if the silicone sealing ring is in place at the bottom center of the Auger Housing.• Check to see if there is any damage to the silicone sealing ring.• Feed the juicer at a slower pace.• Contact your customer service center.
The Auger Housing moves while juicing.	<ul style="list-style-type: none">• This is normal during operation and is designed to reduce strain on the moving parts.



Tribest Corporation
1143 N. Patt St., Anaheim, CA 92801
toll free: 888-254-7336 | tel: 714-879-7150
www.tribest.com | service@tribest.com