

DOOR SEAL

Replacement Kerf

Installation:

1. Measure width and height of door.
2. Shorten strips if needed.
3. Remove the existing seal out of the kerf (groove).
4. Make sure the area is clear of any dirt or grease.
5. Across the top, install the short strip by pressing flat end into the kerf.
6. Continue by installing the long strips along the sides in the same manner.
7. For best results, miter corners where pieces meet.



Reemplazo para kerf

SELLO

Instalación:

1. Mida el ancho y la altura de la puerta.
2. Corte las tiras si es necesario.
3. Remueva el sello existente del "kerf" (la ranura).
4. Asegúrese que la superficie esté libre de suciedad y grasa.
5. A lo largo del tope, instale la tira corta presionando el extremo plano dentro de la ranura.
6. Continúe instalando las tiras largas en los costados del mismo modo.
7. Para mejor resultado, haga cortes en escuadra donde se unen las piezas.



TOOLS NEEDED:

HERRAMIENTAS NECESARIAS:



Follow Us @FrostKing
or www.frostking.com



Thermwell Products Co., Inc.
Mahwah NJ 07430 | Sparks NV 89431

Need help or information
about any Frost King product?
Call **1-877-FROST 20**
3 7 6 7 8

For videos, instructions, hints and tips
visit www.frostking.com/instructions