

Contact Sensor

Quick Start Guide

In-app Setup

1. Make sure your Ring Alarm is disarmed.
2. In the Ring app, tap **Set Up a Device** and find the **Contact Sensor** in the **Security Devices** menu.
3. Follow the in-app instructions to complete setup.

Installation

1. Install the sensor and magnet on a door or window and frame.
2. Clean the area before you peel the backing and stick on the sensor and magnet.
3. Make sure there is no more than 1 inch (25.4 mm) between the sensor and magnet when the door or window is closed.


If you're using the Contact Sensor on a door you use often, choose Main Door as the placement option. Main doors have Entry and Exit Delays to prevent you from accidentally triggering the alarm.




For additional help, visit:
ring.com/help

Contact Sensor

Spacing

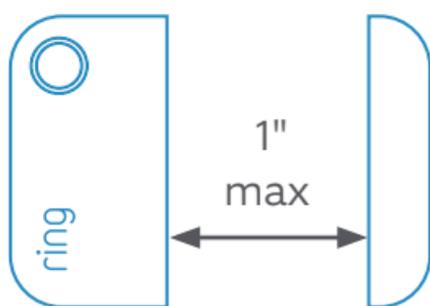

Ensure no more than 1 inch (25.4 mm) between sensor and magnet when the door or window is closed.

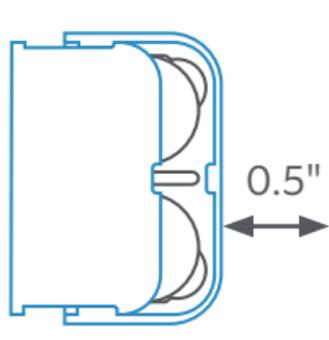

Leave at least a 1/2 inch (12.7 mm) space so you can open the battery compartment.

Placement

