Assembly Instructions

Caution : You must read this before you proceed


DINING CHAIR					
WARNING: These chairs are intended only for normal use with all four legs on the ground. These consumer chairs have relatively thin legs and are not designed to be sat in with only two chair legs on the ground (as from tipping back, forward, or to the side), and such can cause stress and failure of one or more chair legs. Any misuse of the barstools voids any warranties, express or implied.					
Part List					
Label	Picture	Description	QTY		
А	n	Leg (Labelled 'A')	1		

В


Leg (Labelled 'B')


1

С		Cushion Seat	1	
D	٩٠	Corner Block (Short)	2	
E		Corner Block (Long)	2	
Hardware				
Label	Picture	Description	QTY	
1	<uuliuu< td=""><td>JCBC W Screw M7 x 40mm</td><td>2</td></uuliuu<>	JCBC W Screw M7 x 40mm	2	
2		JCBC Bolt (M6 x 80mm)	5	
3	<cccccc.(x)< td=""><td>FH Screw #8 x 25mm</td><td>17</td></cccccc.(x)<>	FH Screw #8 x 25mm	17	
4		Allen Key	1	
5		Screwdriver	Not Provided	
Assembly Preparation				

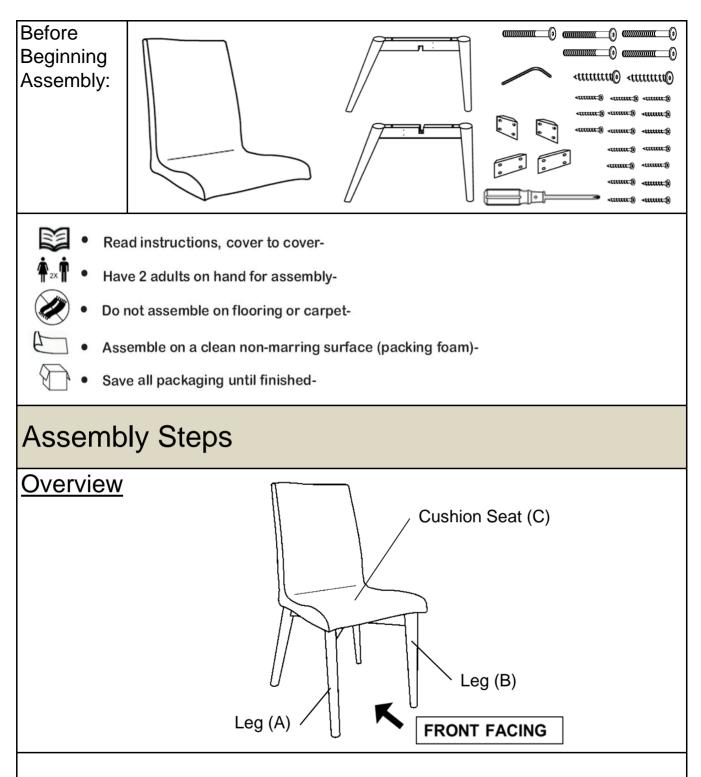

This Dining Chair has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Dining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

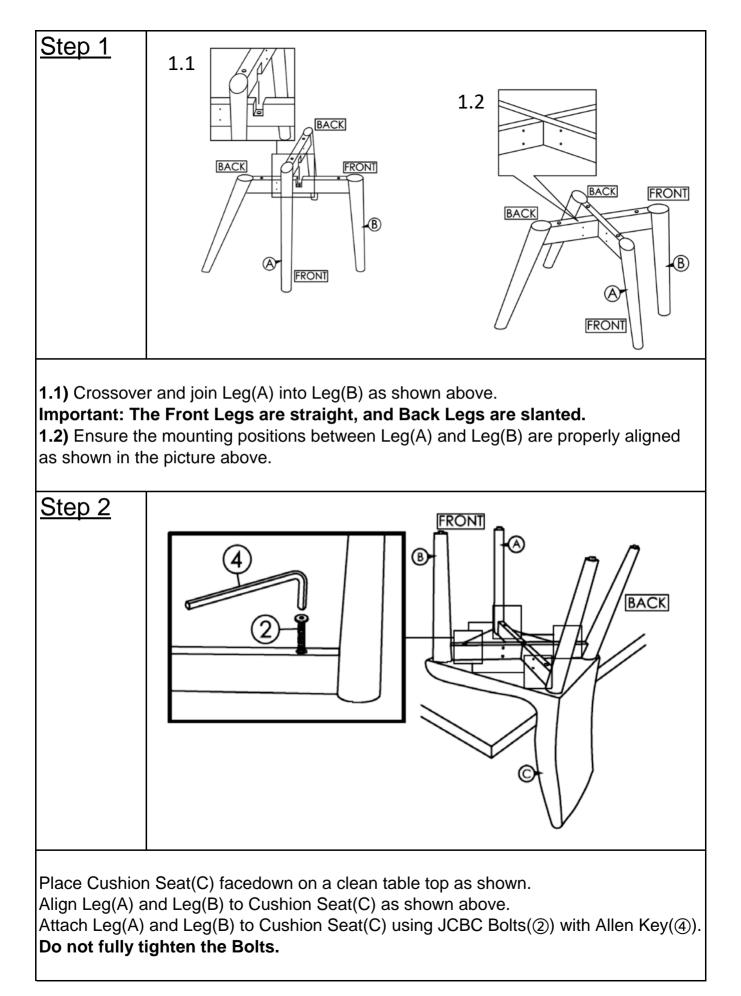

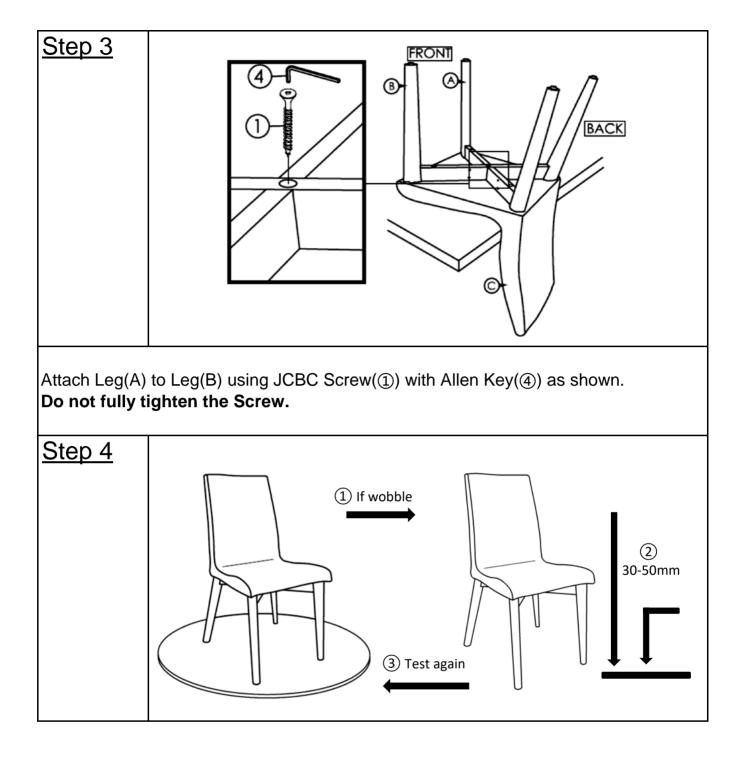

Place the Dining Chair on a Level Surface to check if it wobbles.

Lift the Dining Chair some 30mm to 50mm high from the ground, keep your feet and toes well away from the drop zone, and drop the Dining Chair freely and vertically with the four legs, hitting the ground at the same time.

This Drop Test will help to ensure that all the Parts, Bolts, and gaps reach full alignment.

Test again for evenness on Level Surface.


If no wobbles are found, proceed to tighten all the Bolts and Screws.

When tightening the Bolts and Screws, tighten sequentially.

Do not tighten any Screw or Bolt fully and then move on towards the next one, this could cause the frame to warp.

If the Dining Chair still wobbles, loosen the Bolts and execute this same drop test.


If the Dining Chair is not stable it could lead to damage to the product.

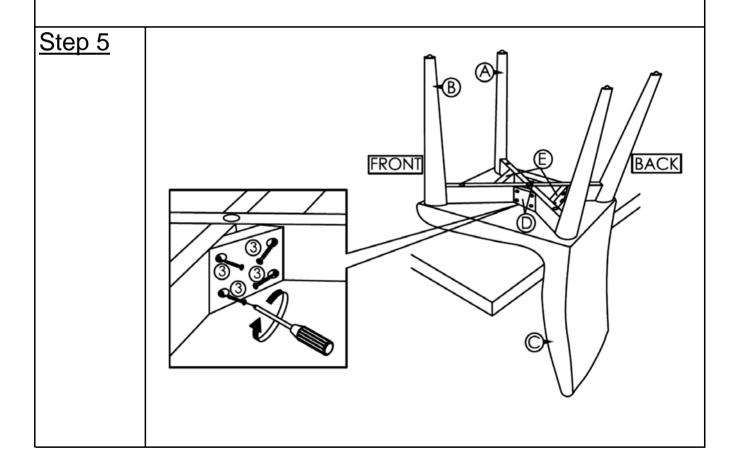

Place the Corner Blocks(D) at the side joints of Leg(A) and Leg(B) as shown. Place the Corner Blocks(E) at the front and back joints of Leg(A) and Leg(B) as shown.

Attach Corner Blocks(D) and Corner Blocks(E) to Leg(A) and Leg(B) using Screws(③) with Screwdriver(⑤).

Tighten the Screws fully in a sequential manner.

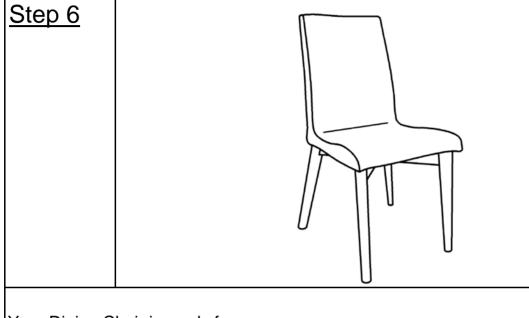

Your Dining Chair is ready for use. This Dining Chair can only be used on a flat, level surface.

Care & Maintenance

- Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- Do not put hot items directly on furniture surface.
 - Do not clean furniture with harsh cleansers or polish.
- 一 Do not place furniture under direct sunlight.

