

WARNING



This warranty excludes incidental/inconsequential damages and failures due to misuse, abuse, and normal wear and tear.

If you have any questions concerning this product:

- Contact your local HomeDepot store.
- Call 1-888-HD-HUSKY.

Specifications

- Fits Tubing Sizes: 3/16, 1/4, 5/16, 3/8, 1/2, 5/8 and 3/4 inch Mild Steel, Stainless Steel, Hard Copper, and Brass Tubing

Operating Instructions

1. Unseat the clamp screw and back off the handle from the yoke fully
2. Open the flaring bar assembly and insert the tubing into the correct size location
3. Ensure the tubing is clean and proud of the flaring bar by about 1mm or 1/32 inch
4. Align the clamp screw with the indentation on the side of the flaring bar assembly adjacent to the tubing
5. Tighten down the handle clockwise to create the flare
6. Unscrew the handle fully. Open the flaring bar assembly and remove the tubing.



Maintenance

Grease the handle shaft and clamp screw regularly

