 


USE AND CARE GUIDE

7.5 ft Elegant Grand Fir LED Pre-lit Tree with Twinkle Lights

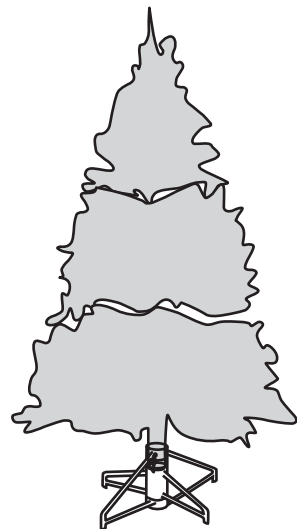

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this Elegant Grand Fir LED Pre-lit Tree with Twinkle Lights. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Questions, problems, missing parts? Before returning to the store, call Home Decorators Collection Customer Service 8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM

Retain this manual for future use.

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed. Please read and follow all safety instructions prior to use.

- **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**
- This product is for indoor use only. The electrical rating 0.57 A 120 V 60 Hz.
- Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used for outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.
- This seasonal-use product is not intended for permanent installation or use.
- Unplug the product when leaving the house, when retiring for the night, or if left unattended.
- Do not use this product for other than its intended purpose.
- Do not hang ornaments or other objects from cord, wire, or light string.
- Do not let the lamps rest on the supply cord or on any wire.
- Do not move the tree by pulling the tree tips or tree branches.
- Do not cover the product with cloth, paper or any material not part of the product when in use.
- Read and follow all instructions that are on the product or provided with the product.

SAVE THESE INSTRUCTIONS.

WARNING: This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock it should not be played with or placed where small children can reach it.

WARNING: To avoid the risk of fire, burns, or personal injury, do not cover the product with cloth, paper, or any material not part of the product when in use.

CAUTION: Do not mount or place the product near gas or electric heaters, fireplace, candles, or other similar sources of heat.

CAUTION: Grasp the plug to insert or remove from the power source. Do not unplug by pulling on the cord.

CAUTION: The product consists of non-replaceable LED lamps. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.

CAUTION: Before you use or re-use this product, inspect it carefully. Discard if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, or exposed copper wire.

CAUTION: Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.

CAUTION: Do not close doors or windows on the product or extension cords, as this may damage the wire insulation.

CAUTION: This product can only be used with the original adapter, not other brands of adapter.

 
CAUTION: ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ASSEMBLING OR DISASSEMBLING.

Pre-Assembly

PLANNING ASSEMBLY

Carefully remove all the parts from the box, and place them on a flat surface. Read the entire manual prior to assembly, and identify all the parts included in the package against the parts list. If any parts are missing or damaged, do not attempt assembly, but contact our customer service center.

PACKAGE CONTENTS

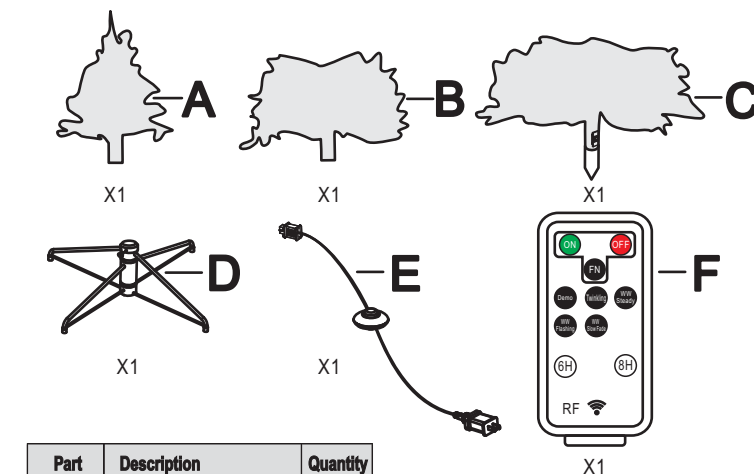

Part	Description	Quantity
A	Top section	1
B	Middle section	1
C	Bottom section	1
D	Stand with an eye bolt	1
E	Power cord	1
F	Remote control	1

Assembly

1 Assembling the tree stand

 
- Choose a location near a wall outlet.
- Open the stand to a 90 degree angle until the hole lines up with the hole on the tube.
- Screw an eye bolt into the hole.



Assembly

2 Assembling the tree


- Please remove protective covers from the base of the pole for each tree section before assembling.
- Carefully insert bottom section (C) of tree into tree base and tighten the screw.

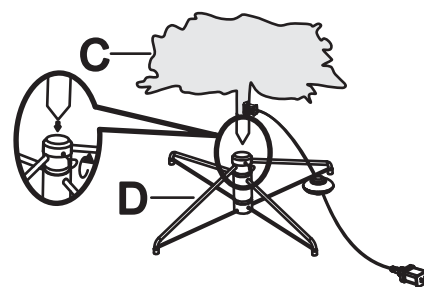

Assembly

3 Assembling the tree

 
- Insert the middle section (B) of the tree into the bottom section (C).

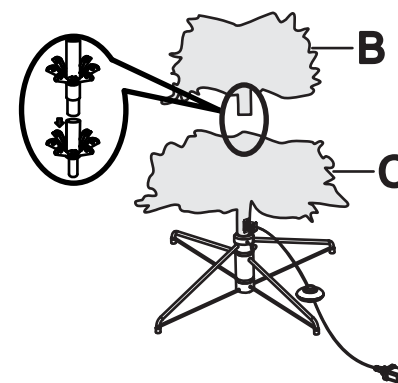

Assembly

4 Assembling the tree

 
- Insert the top section (A) into the middle section (B).

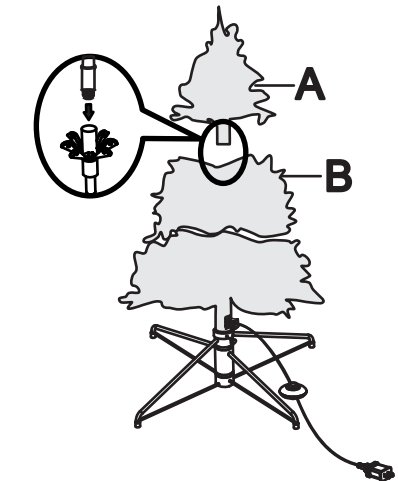

Assembly


5 Assembling the tree

 - Allow branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges.

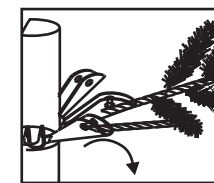

6 Assembling the tree

 - Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem. Repeat pattern for each branch.

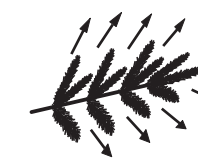

Assembly

7 Finishing Assembly

- Plug the well-connected power cord from the tree section (C) into a proper outlet.
- Please note this tree is locked in the Demo function. The tree cycles automatically through 2-5 functions below. The 5 lighting options available are:
 1. Demo
 2. Twinkling
 3. Warm White Steady
 4. Warm White Flashing
 5. Warm White Slow Fade

These functions can be changed by pressing the foot pedal switch or using the remote control after unlocking the Demo function. Please see the **Instructions of remote control** below to see how to unlock and lock the Demo function.

 
In the condition of Demo function locked, the foot pedal switch only has switch function and timer function. The remote control can be used only by the ON/OFF key and the timing key.

Press the foot pedal switch until one indicator light is on, the tree lights will automatically run through a 6-hours ON, 18-hours OFF cycle.


Continually press the foot pedal switch until two indicator lights are on, the tree lights will automatically run through a 8-hours ON, 16-hours OFF cycle.

To turn off the timer function, press the foot pedal switch or OFF button on remote control to turn off the timer.

There is memory mode on timer control even unplug and re-plug the adaptor back on.

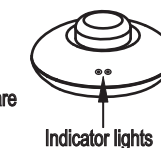

 Please unlock the Demo function first by using the remote control, then the foot pedal switch and the remote control can work normally. Please see the **Instructions of remote control** below to see how to unlock and lock the Demo function.

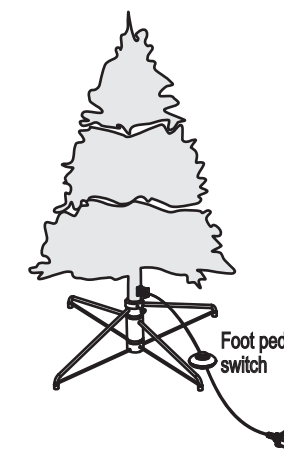

Operation

 
Turning on the tree

- Plug the well-connected power cord from the tree section (C) into a proper outlet.
- Unlock the Demo function. Please see the **Instructions of remote control** below to see how to unlock and lock the Demo function. Press the remote control or foot pedal switch to choose functions and timer control.

Instructions of Remote Control

Please note this tree has a remote control.

Please pull out the insulation tape from the remote control, before starting to use it.

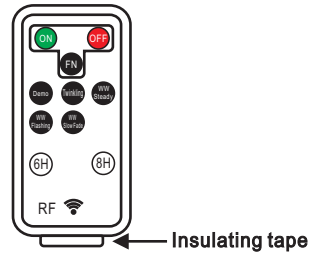

How to Unlock the Demo function:

 
- Press & hold the Demo button on the remote control until the lights flash once, then the foot pedal switch and remote control are unlocked in the Demo function.

How to Lock the Demo function:

- Press & hold the Demo button on the remote control until the lights flash 3 times, then the foot pedal switch and remote control are locked in the Demo function.

Demo function unlocked:

- Press Fn button, select the function below in proper order. Press the function key, select from the following corresponding lighting functions:
 1. Demo
 2. Twinkling
 3. Warm White Steady
 4. Warm White Flashing
 5. Warm White Slow Fade

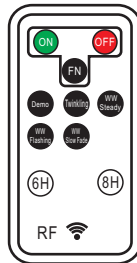

There is memory mode on function adjustment.

Timer function:

- Press 6H button, one indicator light on the foot pedal switch is on. The tree lights will automatically run through a 6-hours ON, 18-hours OFF cycle.
- Press 8H button, two indicator lights on the foot pedal switch are on. The tree lights will automatically run through a 8-hours ON, 16-hours OFF cycle.

To turn off the timer function, press the foot pedal switch or OFF button on remote control to turn off the timer.

 
If the remote control does not work, check whether the battery of the remote control is out of power.

To replace the remote control battery:

1. Open the battery case according to the mark on the back of the remote control.
2. Replace with a new button cell "CR2025" (3 volt) into the compartment.

WARNING - This is not a toy and is not intended for use by children.

- DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Use a button cell CR2025.
- The battery voltage is 3 volts.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above 60°C/140°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

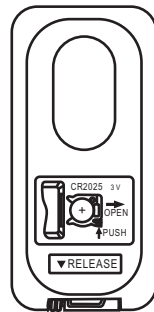

WARNING

- INGESTION HAZARD:** This product contains a button cell or coin battery.
- DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- KEEP** new and used batteries **OUT OF REACH** of CHILDREN.
- Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



Use and Care Instructions

- Before using or reusing, inspect product carefully. Discard any products that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections and wires.
- When not in use, store neatly in a cool, dry location protected from sunlight.

Care and Cleaning

- Remove all ornaments and decorations.
- Unplug the cord from the wall outlet.
- Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Repeat this step for the center and bottom tree sections.
- Carefully place all tree sections into a shipping box and tape it shut.
- Store your tree in a cool, dry place away from sunlight.

FCC WARNING

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

 


Warning: Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

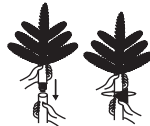Troubleshooting

The tree does not light	Ensure that all tree sections are connected into each other well by pressing each section down and rotating. Make sure power cord plug is securely inserted into a working electrical outlet. If you are still experiencing problems with the tree please call 1-800-986-3460 for instructions.
Top section does not light	Push downward and rotate the top section to B section to make sure they are connected securely. 
Top Section Gap	Pull down each layer branches on top section. 
More troubleshooting information	Please scan the QR Code. 

WARRANTY

3-year Limited Warranty

This product carries a three (3) year warranty against defects in workmanship and materials for the repair or replacement of products from the date of purchase. This product is not guaranteed against wear or breakage due to misuse, abuse, accident, negligence or normal wear and does not apply to floor models or display trees. This Limited Warranty only applies to the original purchaser, and only applies with proof of purchase. Please keep your original store sales receipt, as no warranty claims will be considered without original proof of purchase. Repair/Replacement as provided by this warranty is the exclusive remedy of the consumer and does not place the manufacturer liable for any incidental or consequential damages.

Date Code: 04012024_2008499

Importer: The Home Depot
Address: 2455 PACES FERRY ROAD ATLANTA, GA 30339
Tel: 1-800-986-3460

Adapter Model No. TS-24WLF12V