

4 in 1 Pet Grooming Vac PROLUX



For your safety, please read the owner's manual in its entirety

Instruction Manual



For your safety, please read the owner's manual in its entirety before use.

Congratulations on purchasing your very own Prolux Pet Grooming Vacuum Cleaner. This high-end vacuum is designed to provide ample power and superior filtration. Keep your pet's hair trimmed and looking great and make clean up a breeze in just a few easy steps. Prolux.... Cleaning Reinvented! Welcome to the Prolux family and don't forget to register for your warranty at www.proluxcleaners.com

Table of Contents

Quick Assembly	4
Specifications	5
WARRANTY	6
IMPORTANT SAFETY INSTRUCTIONS	7
Description of Parts	9
Assembly and Operation	10
Operation	11
Vacuum Speed Options	12
De-Shedding.....	13
Hair Clipper.....	14
Comb and Guide Guard Replacement.....	14
Dirt Bin Emptying.....	17
Maintenance	18
Clipper Maintenance	18
De-Shedder Maintenance	19
Filter Maintenance.....	19
Suction Port Channel Cleaning	21
Dirt Bin Cleaning	23
Storage	23
Frequently Asked Questions	24
Troubleshooting.....	25
Warranty.....	26

Quick Assembly

To view some videos on unboxing, assembling, and using your new vacuum you can find them at the link below, or scan the QR code to go to our YouTube page to see all our videos:

<https://proluxcleaners.com/pages/prolux-pet-grooming>



Specifications

- Lightweight - Vacuum weighs just 8lbs
- Dependable - 3-year motor and 1 year body warranty
- Washable HEPA filter gives you excellent filtration
- 3 Speed Motor – Eco, Standard and Boost
- 9ft+ Power Cord
- 6.5ft+ Long Tool Hose
- Powerful – 31 CFM on Eco, 37 CFM on Standard and 40 CFM on Boost
- 3.3L Dirt Bin Capacity
- Battery Powered Clippers – Uses 2 AA Batteries (Sold Separately)

WARRANTY

Here at Prolux we take pride in the quality of our products, so much of our time and money is spent on R&D rather than advertising. Because of this we feel very confident in the quality of our products and feel very comfortable being able to offer a **3-year** motor warranty and a 1-year body warranty. We only require that you **MUST** register your machine within 90 days of purchase. If a machine is not registered then we will only offer a 1-year warranty, which will cover both the motor and body. When you register your machine not only will you receive the **3 year/1 year warranty** you will also receive:

- **FREE** shipping on any warranty claims.
- **FREE** shipping on any order returned within the 61-day return period.
- Mailing list notifications - The #1 thing that kills vacuums is not keeping up on maintenance, so when you register your product, we will provide reminders when it's time to replace your filters etc.
- Coupons and offers for discounts on supplies.

Registering is simple. Just go to the warranty section of our website below and fill out the form. Once registration is complete, you'll then be covered.

<https://proluxcleaners.com/pages/warranty>



With over 20 years in business, superior products, an honest, hardworking team, unparalleled leadership, and many years spent on Utah's fastest growing business list, you can rest assured that Prolux will be here to back up our warranty claims. We strive to provide responsive and pleasant customer service experiences and to develop exceptional products that you can count on! - PROLUX

IMPORTANT SAFETY INSTRUCTIONS

Vacuum Safety



**Read the owner's manual in its entirety before using this product.
Failure to do so can result in serious injury or death. Prolux takes no responsibility for
damages/injuries due to violations of the following operating instructions.**

To reduce the risk of fire, electric shock, or injury:

Keep this operating manual for reference. Include the operating manual if you pass the appliance to third parties.

When using an electrical appliance, basic precautions should always be followed, including the following:

Precautions

- Keep the appliance out of the reach of children, do not let children or pets play with the product or the battery. Please pay special attention when using near children, especially do not allow children to put batteries into their mouth.
- Do not use the hose to vacuum large amount of densely clustered hair at one time, which may cause the hose to be blocked. In this case, turn off the appliance, remove the hose, and unclog.
- Do not use the appliance before installing the dustbin or filter.
- Place the appliance on a flat surface to prevent it from tipping over or shaking.
- Check that the plug is unplugged from the socket and the power cord is stored before moving the appliance. If the hose is connected, please also store the hose before moving the appliance.
- Do not use it when the suction port is blocked. Keep the suction port free of dust, lint, hair, or any substance that may obstruct the airflow.
- Use this appliance only on dry hair or other dry surfaces.
- People (including children) with limited physical, sensory, or mental abilities, or in absence of experience and knowledge may fail to use this product safely without the supervision or guidance of adults.
- After installation, please keep the product packaging materials out of the reach of children to avoid unintentional injury.

Safety Instructions

- Do not damage the power plug, do not damage, stretch, bend, twist the power cord or place the power cord near objects that are hot, and do not bind or lift heavy objects with the power cord.
- If there is moisture or dust on the power plug, completely unplug it for cleaning and firmly insert it into the socket.
- Turn off the appliance and disconnect the plug before cleaning or servicing.
- Turn off the appliance before disconnecting the power plug.
- To unplug, press the socket and hold the plug, do not directly pull the power cord.
- Do not touch the power plug or the appliance with wet hands.

- If the appliance fails to work properly, is damaged, stays outdoors for a long time, or is dropped into water, please contact customer service.
- If water enters any electrical components inside the product, please disconnect the power plug.
- Do not use when the power cord or power plug is damaged.
- Do not suck up toxic substances (chlorine bleach, ammonia, drainage detergent, etc.) with this appliance.
- Do not use this appliance in a confined space filled with volatile gases (paint thinners, cleaners, solvents, etc.).
- Do not suck anything burning with this appliance, such as cigarettes, matches, or hot ashes.
- Do not use this appliance to suck flammable materials (lighter oil, gasoline, etc.), and do not use it in an environment with explosive liquids or volatile gases.
- Do not overheat the appliance. If the appliance overheats, immediately turn off the appliance and disconnect the power to allow it to cool down.
- Do not modify or attempt to repair the appliance unless otherwise stated. Damaged or modified appliances may have unexpected conditions that may cause fire, explosion or personal injury and will also void the warranty.
- Do not use this product where it may fall (furniture, stairs, railings, sloping floors, etc.).
- Do not insert metal objects into the holes or gaps of the product.

Safety Instructions of the AA batteries (sold separately)

- The clipper uses 2 AA batteries, pay attention to the precautions.
- Do not attempt to regenerate the disposable battery by heating, charging, shaking, etc.
- Properly dispose of dead batteries.
- Do not mix the old batteries with the new ones or combine batteries of different types.
- Do not use deformed or damaged batteries.
- Do not let children replace the batteries alone without adult supervision.
- Before replacing the clipper batteries, please check whether the clipper and battery terminals are clean, clean them with a soft cloth when necessary.
- If the battery leaks, be careful not to let the liquid contact your skin or eyes. If the liquid does contact your skin or eyes, rinse immediately with plenty of water and follow a doctor's instructions.
- Do not let any liquids enter the product or battery area.
- When the clipper is not used for a long time, please remove the batteries, and keep it in a cool and dry place.
- Keep spare batteries in a cool and dry place without direct sunlight.

Description of Parts



1. Main Canister
2. Tool Hose
3. De-shedder
4. Hair Clipper
5. Cleaning Brush
6. Crevice Tool

7. Rake Comb
8. Flea Comb
9. Soft Comb
10. De-Shedding Comb
11. Clipper Guide Guards
12. Maintenance Brush

Assembly and Operation

Important: For the best results do not use the vacuum without all filters and dirt bin properly installed.

Use for dry pets ONLY!

1. Remove everything from box and lay in easy view.



2. Ensure filter is installed and dirt bin is locked in place.
3. Place the main unit on a level surface and attach the hose to main canister. The hose is friction fit so it can be pushed into the vacuum's suction port and kept in place with friction.
4. Select proper attachments for current task. Operation section will go more over when certain attachments should be used.
5. Uncoil the power cord and plug it into a wall outlet.

Operation

Attachment Overview

Prolux is proud to include the highest quality attachments available! Through research and development and trial and error... Prolux has finally perfected vacuum attachments, matching durability with functionality! This is Cleaning...Reinvented!

- **De-Shedder** - Quickly and easily remove loose hair for long and short haired dogs and cats. Effectively reduce shedding by up to 95% and help with the removal of fleas. Should be used with De-Shedder comb attachments.
- **Soft Comb** - Used for removing loose hair from clothes, pets, or other fabric surfaces.
- **Flea Comb** - Used for both short and long-haired pets for the removal of fleas. Run the comb through pet hair to remove fleas and other bugs which may be embedded in the pet hair.
- **Rake Comb** – Used for cleaning, brushing and smoothing pet hair. Run the comb through pet hair to remove any loose hair, dirt or to just give your pet's hair a smooth finish.
- **De-Shedding Comb** - Used for removal of loose or built-up pet hair. Run the comb through the pet hair to comb out any loose hair.
- **Cleaning Brush** – Works great for sucking up any leftover hair on upholstery, clothes, or hard surfaces. Run the brush over these areas to suck up any loose or leftover hair.
- **Crevice Tool** – Get into those tight areas where hair may be hiding. Great for upholstery and couch cushions.
- **Hair Clipper** – Used for trimming hair. Give your pet a quick cut without all the cleanup. Just clip the hair and it's sucked up into the dirt bin.
- **Clipper Guides** – Used to guard the clipper blade to give you the perfect length for your pet's hair. Slide the guard onto the clipper blade and get to cutting.

Vacuum Speed Options

The 4 in 1 Pet Grooming Vacuum comes with 3 power/speed options based on what type of grooming you're currently doing. Choose between these 3 options by pressing the +/- button on top of the main unit:



Eco Mode for Trimming:



Standard Mode for De-Shedding:



Boost Mode for Flea Removal:




De-Shedding

Note: During use, please pay attention to the comb attachment edge, do not use excessive force which can cause scratches to the skin.

Note: Push comb cleaner button regularly during use to clean off built up hair on comb attachment

Tip: Placing the vacuum unit further away from your pet will lessen the amount of noise being introduced to your pet, so if your pet is skittish, we would recommend doing this until they get used to the vacuum sound.

1. Attach the De-Shedder attachment to the hose end and unlock the comb attachment by sliding the comb lock button sideways. This will allow the comb to unlock and allow the comb edge to stick out. If a different comb attachment is needed review the comb replacement section for steps on replacement.

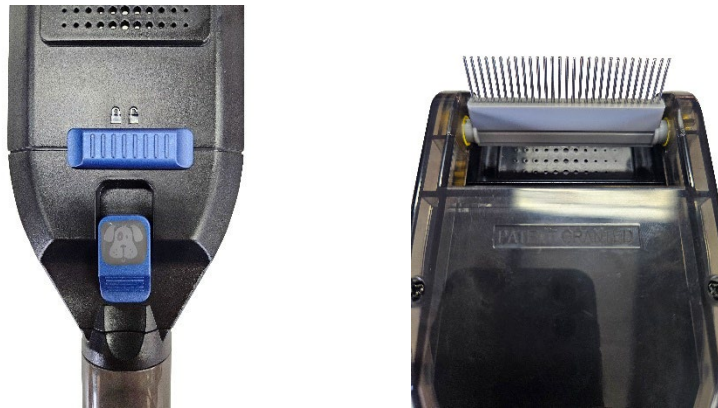

2. Once the proper comb attachment has been selected turn the vacuum on and select the proper vacuum speed for the type of task, you'll be doing whether that be de-shedding (Standard Mode) or flea removal (Boost Mode).
3. Run the comb through your pet's hair making sure you're not using excessive force downward and allowing the comb to run smoothly through your pet's hair. You don't want to scratch your pet's skin or be pulling the hair to the point it's painful for your pet. As the hair/pests are pulled out the suction port on the de-shedder attachment will suck up the hair and dispose of it into the dirt bin. Any hair which has built up on the comb attachment can be removed by pressing the comb cleaner button on the back of the De-Shedder attachment. This will push the built-up hair off and into the attachment suction port. Any leftover hair can be removed by hand and placed into the suction port.

4. Continue combing your pet's hair while also keeping an eye on the amount of hair in the dirt bin and listening for any changes to the sound of the vacuum motor. A higher pitched sound, or loss of suction, can mean a clog has built up. If this happens review the maintenance section.



Hair Clipper

Note: Do not touch the blade if the guide guard is not installed.

Note: Please be careful on the soft parts of the pet's skin and do not use excessive force which can cause scratches to the skin.

Note: Clipper attachment will require (2) AA batteries which are sold separately.

1. Attach the clipper attachment to the hose end and select which guide guard is preferred. We would recommend starting with a longer guide option and testing the length. If a shorter length is desired replace it with a shorter guard until the desired length has been reached. Review guide guard replacement section.
2. Once the attachment is connected and the proper guide guard has been selected you can then turn on the vacuum and select the correct speed. For trimming you'll want to use Eco Mode.
3. Turn on the clippers by flipping the switch on the clippers to ON and begin clipping your pet's hair while also keeping an eye on the amount of hair in the dirt bin and listening for any changes to the sound of the vacuum motor. A higher pitched sound, or loss of suction, can mean a clog has built up. If this happens review the maintenance section.



Comb and Guide Guard Replacement

To change the comb attachment:

1. Unlock comb if locked by sliding the comb lock button sideways.



2. Once unlocked hold the de-shedder attachment so the comb is facing you and grab the comb attachment between your fingers.
3. Push the comb attachment to the right so it's pressed against the yellow panel on the side of the de-shedder attachment.



4. Press down on the comb attachment and pull outward to remove it from the de-shedder.
5. To replace the comb attachment put the right side of the attachment in first with the pointy end facing you.




6. Push the right side of the comb into the yellow panel and insert the left side of the attachment into the notch cut into the left side of the de-shedder attachment opening until it locks into place.



To change the clipper guide guard:

1. If the clipper has a guard installed already you can unlock the guard by pressing upward on the back of the guard. Press upward and this will unlock the guard from the clipper and allow you to then slide the guard off removing it from the clipper blade.

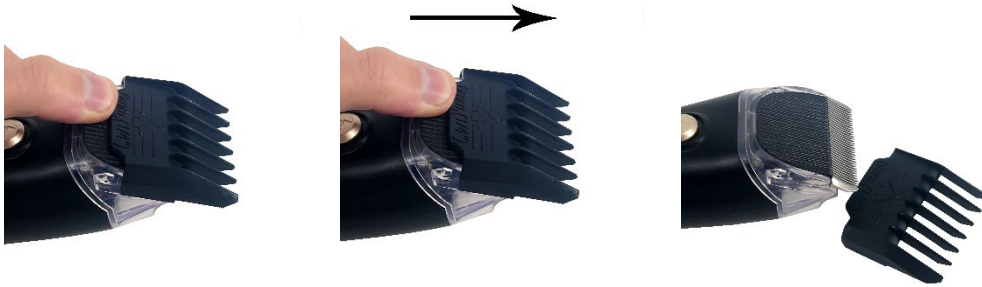

2. To install a guard, slide the back of the guard onto the clipper blade first, and into the notches cut into the sides of the clipper end. Slide the guard down the notches until it locks into place.



Dirt Bin Emptying

1. Turn vacuum off and unplug it from the wall outlet.
2. Unlock dirt bin by pressing the bin unlock button on top of the vacuum.



3. Grab the dirt bin by the top handle and lift the bin off the vacuum body.



4. Hold dirt bin over a garbage can or other receptacle and press the dirt bin bottom cover release button. The bottom cover will open allowing the dirt bin contents to be emptied.



5. Once empty close the bottom cover locking it back in place.
6. Insert the outer edge of the dirt bin into the slot on the outer edge of the vacuum body.
7. Push dirt bin towards the vacuum until there is an audible click locking the dirt bin back in place.

Maintenance


Note: Clean the clipper blade and de-shedder attachment after each use.

Note: Make sure clipper is switched off before performing any maintenance.

Note: Do not rinse the clipper or blade with water to clean.

Clipper Maintenance

1. Remove clipper from vacuum hose and make sure the clipper's ON/OFF switch is set to OFF.
2. Remove the clipper blade by using your thumb to press the blade out and away from the clipper.
3. Clean the blade and clipper using the provided maintenance brush. You can also use the suction of the vacuum with the hose and crevice tool or a can of compressed air to clean these parts.

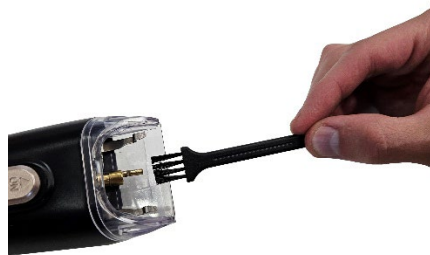


4. Reassemble the blade onto the clipper by inserting the bottom of the blade into the clipper and pressing the blade into the clipper with light pressure. It will click, locking it into place.



5. Turn the clippers on and make sure the blade is working properly. The clippers are now ready to use.

De-Shedder Maintenance

1. Remove de-shedder attachment from the vacuum hose and make sure the comb attachment lock is unlocked allowing the comb attachment to stand up.
2. Remove the comb attachment from the de-shedder. Review the 'Comb and Guide Guard Replacement' section.
3. Clean the comb and de-shedder attachment using the provided maintenance brush. You can also use the suction of the vacuum with the hose and crevice tool or a can of compressed air to clean these parts.

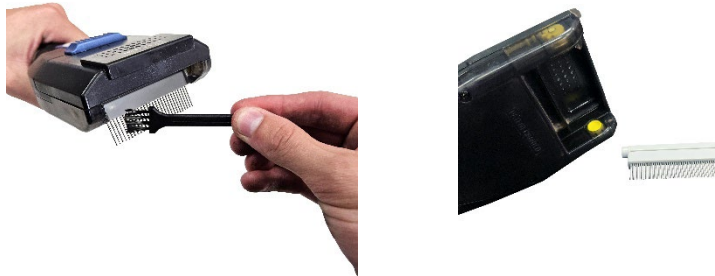


4. Reinstall the comb attachment, review the 'Comb and Guide Guard Replacement' section.
5. The de-shedder is now ready to use.

Filter Maintenance

HEPA Filter:

1. Turn vacuum off and unplug from the wall outlet.
2. Remove dirt bin and empty if needed. Review 'Dirt Bin Emptying' section.
3. Once dirt bin is empty leave bottom cover open, reach inside the dirt bin and grab the HEPA filter and filter cover. Twist counterclockwise and pull outward removing both parts from the dirt bin.

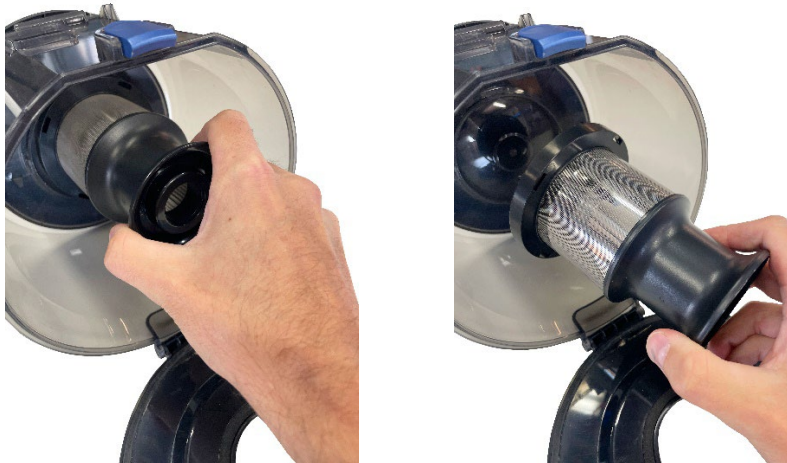

4. Grab the HEPA filter inside the filter cover and pull the filter out.



5. The filter can be cleaned by tapping it over a garbage can or other receptacle. A can of compressed air is also a great way to clean the filter.
6. Any built up dust on the filter cover can be wiped off or blown off with compressed air.
7. Insert the cleaned HEPA filter back into the filter cover and insert the filter cover back into the dirt bin.
8. Twist the filter cover clockwise locking it into place and close the bottom cover lid.
9. Reinstall the dirt bin onto the vacuum unit. The vacuum is now ready to use.

Note: If deep cleaning is needed for the HEPA filter and filter cover these parts can be soaked in warm, soapy water, cleaned with a cleaning brush, and rinsed off with clean water. Let these parts air dry completely for at least 24hrs before reinstalling both parts.

Note: Make sure the filter and filter cover are properly assembled and locked in place before use. NEVER use the vacuum without filters.

Post Motor Filter:

1. Post motor filter is located underneath the dirt bin and is only there as a failsafe in case anything was to not get caught by the HEPA filter and dirt bin. Because of this the post motor filter rarely needs to be cleaned.
2. If it does need to be cleaned, while the dirt bin is off, simply lift the motor filter up and off of the vacuum.
3. Tap the filter off over a garbage can or use compressed air to blow off the filter.
4. Reinstall the filter once clean.



Suction Port Channel Cleaning

Note: Clean the suction port channel regularly to prevent any clogs

1. Remove dirt bin from vacuum to gain access to suction port. Review 'Dirt Bin Emptying' section for dirt bin removal.
2. Place the vacuum with the suction port facing you and slide the locking tab to the left to unlock the suction channel.



3. Pull the suction channel towards you so it folds down and away from the vacuum.



4. Pull the channel up and out of the vacuum which will allow you to clean the channel thoroughly if needed.



5. Reinstall the channel into the vacuum by inserting the tabs on the bottom of the channel back into the slots on the vacuum, push channel back up into place and slide the locking tab back to the locked position.
6. Reinstall the dirt bin, and the vacuum is ready to use again.

Dirt Bin Cleaning

1. After emptying the dustbin contents, you can then remove the HEPA filter and filter cover.
2. Use a damp microfiber cloth to wipe away dust and debris inside the bin.
3. Leave the dirt bin apart to dry completely before reassembling.
4. Once dry reassemble and put dirt bin back on vacuum.



Storage

Before storing your vacuum, empty and clean the tank, filter, and accessories. The hose and cord can be wound up and stored on the vacuum body in their designated areas. The de-shedder, cleaning brush and 3 spare de-shedder comb attachments (1 installed on attachment) can also be stored on the vacuum in their designated areas. The other accessories can be stored loose from the vacuum.



Frequently Asked Questions


1. Why is my vacuum not picking up?
 - Vacuum dirt bin is full. Check the dirt bin capacity and empty if needed.
 - Clog in the hose or attachment. Remove the hose from the vacuum. Separate the hose from the attachment. Check for clog. If a clog is found using compressed air at a low pressure is the ideal means of removal.
 - Clogged filter does not allow proper airflow. Remove and clean your filter by lightly tapping on the edge of a garbage can (preferably outdoors). You may also use compressed air at a low pressure.
2. Why is my vacuum not turning on?
 - Check if the power cord is fully inserted into the wall outlet and if the outlet has power.
 - Make sure the ON/OFF button has been fully engaged.
3. Why is my vacuum getting hot?
 - The vacuum bin is full. Check bin capacity and empty if needed.
 - Clog in the hose or attachment. Remove the hose from the vacuum. Separate the hose from the attachment. Check for clog. If a clog is found using compressed air at a low pressure is the ideal means of removal.
 - Clogged filter does not allow proper airflow. Remove and clean your filter by lightly tapping on the edge of a garbage can (preferably outdoors). You may also use compressed air at a low pressure.
4. How often should I replace the vacuum filters?
 - 3-12 months depending on use and the amount of dirt/dust in your area. Most people will need replacement filters around 6 months, but if you live in an exceptionally dusty environment or have multiple pets you will want to change them more frequently.
5. Where do I purchase replacement filters and parts?
 - www.proluxcleaners.com
6. I need help with something regarding this vacuum, who do I contact?
 - service@proluxcleaners.com
7. Is this vacuum wet pick up capable?
 - No. This model is dry pick only, so always make sure your pet or the area you're cleaning is dry.

Troubleshooting

WARNING: Never use a defective appliance. Always switch the appliance off and disconnect it from the outlet before you start to troubleshoot.

Fault	Possible Cause(s)	Solution
The vacuum will not turn on.	The plug is not connected to the electrical wall outlet or the appliance is not switched to the “on” position.	Insert the plug into an electrical wall outlet and flip the “on/off” switch to the “on” position.
	Electrical wall sockets do not carry current.	Test the vacuum cleaner on another outlet that you are sure is carrying current.
	The power cord is damaged.	Replace with a new cord by an authorized service center or professional technician.
Suction power is low.	The dirt bin is full or clogged.	Check the dirt bin contents and dump if needed.
	The attachment or suction hose is clogged.	Remove the debris that is causing the clog. If necessary, use a long wooden stick (e.g., a broomstick) or coat hanger to do this.
	The dirt bin container is installed incorrectly.	Remove the dirt bin container and reinstall; making sure the container is locked into place when reinstalling
	Dirty filter.	Change or clean the filter.
The vacuum makes unusual noises or is louder than usual.	The attachment, suction hose, or filter is clogged.	Remove any clogs. If necessary, use a long wooden stick (e.g., a broomstick) or coat hanger to do this. Clean or change the filter

Warranty

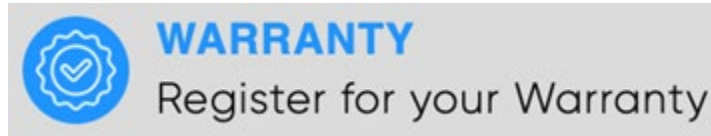

Why do I have to register my warranty within 90 days to get my Warranty?

Great question! Do you know what normally kills a vacuum cleaner?

1. Vacuum Dirt Bin being overfilled which causes the motor to overheat.
2. Improper cleaning and not replacing filters, which overheats the motor.
3. Improper maintenance: such as not regularly clearing hair and carpet fibers that wrap around it, overheating the motor.

LOL, do you see a trend? In other words, proper maintenance will add years to your vacuum's life. When you register your warranty, we will email you maintenance tips, remind you when it is time to maintain your vacuum, provide product info updates, and coupons for more carpet shampoo or fragrances for your water. We do not ever require you to purchase anything OR to prove that you are maintaining your vacuum to be covered by the lifetime warranty. All we care about is that you are getting our reminders. Normally we send out maintenance email reminders once every 6 months.

To register for your Warranty, go to

<https://proluxcleaners.com/pages/warranty>

or scan below with your phone



LIMITED WARRANTY

When registered, Prolux warranties this product's motor free from defects in material and workmanship for three (3) years on the motor, and one (1) year on the body of the cleaner, free from manufacturer defects in material and workmanship from the original date of purchase, when utilized for normal use.

What is Not Covered by the Prolux Warranty - Warranty Exclusions:

This limited warranty does not extend to and expressly excludes:

1. Normal wear and tear and/or replacement attachments or accessories, including, without limitation, hose, wand, powerhead, and other attachments to the cleaner.
2. Damage or burnout of the cleaner's body or motor resulting from failure to clear a blockage occurring during the normal course of use.
3. Loss or damage to the cleaner body resulting from conditions beyond the control of Prolux including without limitation, misuse, accidents, abuse, neglect, negligence from the customer, overuse beyond capacity of the cleaner, or unauthorized modification and/or alteration.
4. Loss or damage to the cleaner resulting from failure to follow the required maintenance schedule, or failure to use the cleaner in accordance with written instructions from Prolux, guidelines or the terms of its Owner's Manual.

If your appliance fails to operate properly while in use under normal household conditions within the warranty period, please contact the authorized PROLUX dealer you purchased the unit from. Non-durable parts including, without limitation, pads, cords, switches, which normally require replacement, are specifically excluded from the warranty. This warranty is limited solely to the cost of the repair or replacement of the unit at the option of Prolux. This warranty does not cover normal wear of parts and does not apply to any unit that has been tampered (by an unauthorized user) with or used for commercial purposes unless the unit is a commercial model. This limited warranty does not cover damage caused by shipping damage, misuse, abuse, negligent handling, or damage due to faulty packaging or mishandling in transit.

This warranty is extended to the original purchaser of the unit only and is not transferable.

***IMPORTANT:** Before sending the unit back for warranty work, contact your authorized PROLUX retailer you bought the unit from first. Unauthorized warranty claims may be sent back.

Authorized Warranty claims: PROLUX shall be responsible for all parts, labor, and shipping if the item is registered. If the item is NOT registered Prolux shall be responsible for the parts and labor of the repair and the customer shall be responsible for ALL shipping charges to AND from the Prolux service center. Prolux is constantly striving to improve our products. Therefore, the specifications contained herein are subject to change without notice.

Rev. 10/23