 


VISSANI™

Item# 1012166086
Model# VSCMAF09S2A09A

USE AND CARE GUIDE

Microwave Oven

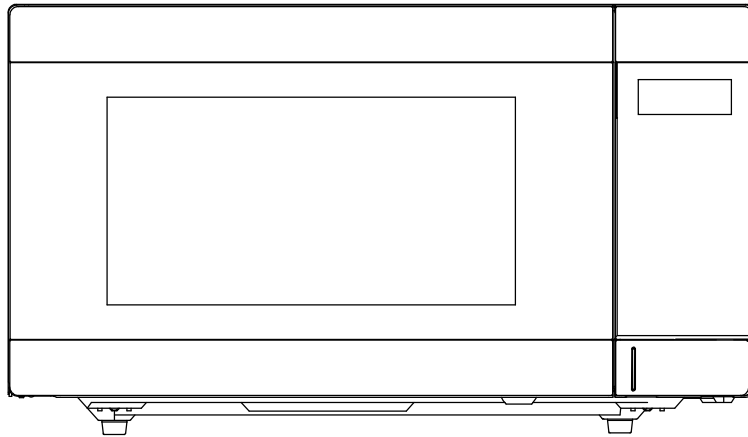

Questions, problems, missing parts?
Before returning to the store, call VISSANI Customer Service

8 am - 8 pm EST
Monday - Friday

8 am - 6 pm EST
Saturday

1-855-847-7264

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Vissani through the purchase of this microwave. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs.
Thank you for choosing Vissani 2024

Table of Contents

Table of Contents	1
Safety Information	2
Precautions to Avoid Possible Exposure to Excessive Microwave Energy	2
California Proposition 65 Warning	2
General Warning	2
Grounding Instructions	4
Installation Guide	5
Product Diagram	5
Control Panel	6
Operation Instructions	7
Enabling And Disabling The Electromagnetic Lock Function	7
How To Use The Electromagnetic Lock	7
Setting the Clock	9
+30 Sec. Function	9
Express Cooking	9
Setting The Kitchen Timer	9
Cooking Program	9
Convection	10
Microwave+Convection	10
Time Defrost	10
Weight Defrost	10
Bake	11
Air Fry	11
Roast	13
Auto Cook	14
Auto Reheat	14
Popcorn	16
Automatic Protection Mechanism	16
Child Lock	16
Button Adhesion Protection	16
Cleaning And Care	17
Product Warranty	18

Safety Information



WARNING: Precautions to Avoid Possible Exposure to Excessive Microwave Energy

- Do not attempt to operate this oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is very important that the oven door close properly and that there is no damage to the
 - a) Door (including any dents),
 - b) Hinges and latches (broken or loosened),
 - c) Door seals and sealing surfaces.

The oven should not be adjusted or repaired by anyone except qualified service personnel.

CALIFORNIA PROPOSITION 65 WARNING



WARNING: Cancer and Reproductive Harm-WWW.P65Warnings.ca.gov.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a

particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

—Consult the dealer or an experienced radio/TV technician for help.

Importer Name: HOMEDEPOT.COM

Importer Address: HOME DEPOT 2455 PACES FERRY ROAD ATLANTA, GA 30339

Telephone Number: 1-855-847-7264

General Warning

To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy:

- Read all instructions before using the appliance.
- Read and follow the specific "PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY" on page 2.
- This appliance must be grounded. Connect only to properly grounded outlet. See "GROUNDING INSTRUCTIONS" on page 4.
- Do not operate the oven when empty. Install or locate this appliance only in accordance with the provided installation instructions.
- Some products such as whole eggs and sealed containers -for example, closed glass jars- are able to explode and should not be heated in this oven.
- Use this appliance only for its intended use as described in this manual. Do not use corrosive chemicals or vapors in this appliance. This type of oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.
- As with any appliance, close supervision is necessary when used by children.
- Hot contents can cause severe burns. Do not allow children to use the microwave. Use caution when removing hot items.

Safety Information (Continued)

- ❑ **To reduce the risk of fire in the oven cavity:**
 1. Do not overheat the liquid. Carefully attend to the appliance when paper, plastic, or other combustible materials are placed inside the oven to facilitate cooking.
 2. Remove wire twist-ties from paper or plastic bags before placing bag in oven.
 3. If materials inside the oven should ignite, keep oven door closed, turn oven off using the circuit breaker panel, and call emergency services.
- ❑ Do not use the cavity for storage purposes. Do not leave paper products, cooking utensils or food in the cavity when not in use.
- ❑ Liquids, such as water, coffee, or tea are able to be overheated beyond the boiling point without appearing to be boiling due to surface tension of the liquid. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. This could result in very hot liquids suddenly boiling over when a spoon or other utensil is inserted into the liquid.
- ❑ **To reduce the risk of injury to person:**
 1. Do not overheat the liquid.
 2. Stir the liquid both before and halfway through heating it.
 3. Do not use straight-sided containers with narrow necks.
 4. After heating, allow the container to stand in the microwave oven for a short time before removing the container.
 5. Use extreme care when inserting a spoon or other utensil into the container.
- ❑ Do not heat oil or fat for deep-frying. It is difficult to control the temperature of oil in microwave oven.
- ❑ Do not cover or block any openings on the appliance.
- ❑ Do not operate this appliance if it has a damaged cord or a plug, if it is not working properly or if it has been damaged or dropped.
- ❑ Do not immerse cord or plug in water. Keep cord away from heated surface. Do not let cord hang over edge of table or counter.
- ❑ This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair, or adjustment.
- ❑ Oversized food or oversized metal utensils should not be inserted in a microwave/toaster oven as they may create a fire or risk of electric shock.
- ❑ When cleaning surfaces of door and oven that comes together on closing the door, use only mild, non-abrasive soaps, or detergents applied with a sponge or soft cloth.
- ❑ Do not store or use this appliance outdoors. Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar locations.
- ❑ Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.
- ❑ Do not use paper products when appliance is operated in the toaster mode.
- ❑ Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
- ❑ Do not cover turntables, pans or any other part of the oven with metal foil.
- ❑ This will cause overheating of the oven. This device complies with Part 18 of the FCC Rules. This equipment has been tested and found to comply with the limits for a Consumer ISM equipment, pursuant to Part 18 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Please note that changes or modifications of this product is not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
Distributed by HOME DEPOT 2455 PACES
FERRY ROAD ATLANTA, GA 30339

Safety Information (Continued)

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.



 
CAUTION: Changes or modifications not approved by the party responsible for compliance could void the user's authority to operate the product. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.



IMPORTANT: Important Grounding Instructions

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

Consult a qualified electrician or serviceman if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

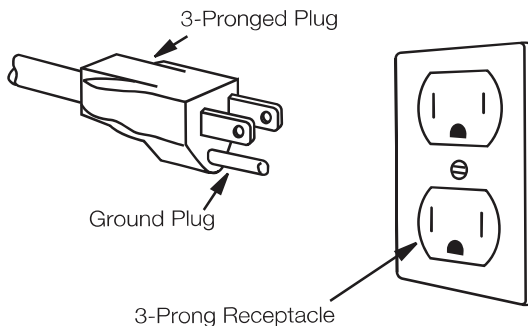

Electrical Requirements

The electrical requirements are a 120 volt 60 Hz, AC only, 20 amp. It is recommended that a separate circuit serving only the oven be provided. The oven is equipped with a 3-prong grounding plug. It must be plugged into a wall outlet properly installed and ground.

Power Cord

- A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
- Longer cord sets or extension cords are available and may be used if care is exercised in their use.
- If long cord or extension cord is used:
 - a) The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - b) The extension cord must be a grounding-type 3-wire cord, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over accidentally.

Installation

 
Make sure that all the packing materials are removed from the inside of the door.

This microwave oven must be placed on a flat, stable surface.

For correct operation, the oven must have sufficient airflow. Allow minimum 8 in. (20.32cm) of free space necessary above the top surface of the oven and 2 in. (5.08cm) at both sides. Do not cover or block any openings on the appliance. Do not remove feet.

Only use the appliance on a countertop over 3 ft. (91.6cm) above the floor.


Do not place the oven where heat, moisture, or high humidity is generated, or near combustible materials.

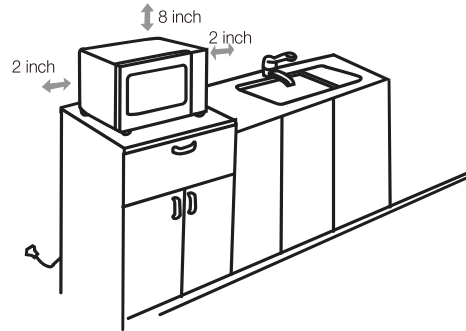

Make sure that the power cord is undamaged and does not run under the oven or over any hot or sharp surface. The socket must be readily accessible so the microwave oven can be easily unplugged in an emergency.




 NOTE: Hardware not shown to actual size.

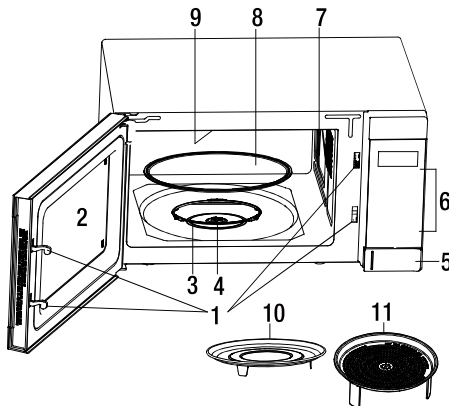

Part No.	Description	Quantity
1	Safety Interlock System	1
2	Observation Window	1
3	Roller Ring	1
4	Plastic Shaft	1
5	Door Release Button	1
6	Control Panel	1
7	Wave Guide Cover	1
8	Glass Turntable	1
9	Grill Heater	1
10	Bake Tray	1
11	Air Fry Kit	1

 Control Panel Operation

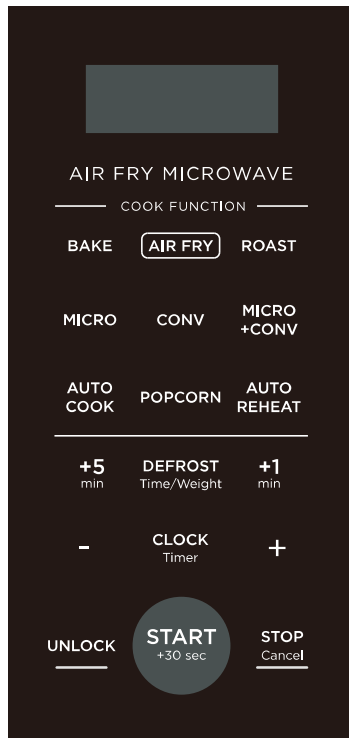

DISPLAY SCREEN

Time and power are displayed.

BAKE/ROAST

Use to bake and roast food.

AIR FRY

Use the air fry function to cook food.

MICRO

Press to set microwave cooking program.

CONV

Press to set convection cooking program.

MICRO+CONV

Press to set microwave and convection combination cooking program.

AUTO COOK

Press to set auto cooking programs.

POPCORN

Press to cook popcorn.

AUTO REHEAT

Press to set auto reheating programs.

+5 MIN /+1 MIN

Press to set time.

DEFROST/TIME/WEIGHT

Press once to defrost food based on time.

Press twice to defrost food based on weight.

+/-

Press to set time or temperatures.

Press to select food category, weight or servings.

CLOCK/TIMER

Press to set clock time.

Press to set the timer function.

UNLOCK

Use to set electromagnetic lock.

START/+30 SEC

Press to start cooking programs.

Press to add cooking time.

STOP/CANCEL

Press once to stop cooking temporarily or twice to cancel cooking altogether.

It is also used to set child lock.

Note:

Please remove the protective film on the control panel before the first time you use the microwave.

Operation Instructions

1. Enabling And Disabling The Electromagnetic Lock Function

Enabling the electromagnetic lock function:
While in standby mode and the electromagnetic lock has been deactivated.

1. Press and hold number button "UNLOCK" for 2 seconds, the display will show "Uloc"



2. Press "-" then "+" in sequence, the display will show "Loc". After 1 second, the system will return to the standby mode, and then turn on the electromagnetic lock function.



Disabling the electromagnetic lock function:
While in standby mode and the electromagnetic lock is active.

1. Press and hold number button "UNLOCK" for 2 seconds, the display will show "Loc".



2. Press "-" then "+" in sequence, the display will show "Uloc". After 1 second, the system will return to the standby mode, and the electromagnetic function will be disabled at this time.



NOTE:

- If the electromagnetic lock is not set within 10 seconds, the system returns to standby mode."
- The initial state is in the enabling state, and the electromagnetic lock setting status will not be changed when power on again after power outage.
- When the electromagnetic lock function is disabled, the door can be opened and closed normally.

2. How To Use The Electromagnetic Lock

In standby mode:The oven door can be opened and closed normally.

During cooking:Locking during cooking cannot directly open the door.

1. Press "UNLOCK" button once to unlock the electromagnetic lock and pause cooking work.



NOTE:

- If the door is not opened within 10 seconds, the electromagnetic lock will automatically lock.
- If the door is not opened for 30 minutes, the electromagnetic lock will automatically unlock.

2. Press STOP/CANCEL button once to unlock the electromagnetic lock.



NOTE:

- If the door is not opened within 10 seconds, the electro magnetic lock will automatically lock.
- If the door is not opened within 30 minutes, the electromagnetic lock will unlock automatically.

3. Press "UNLOCK" button once, then open the door, the electromag netic lock does not need to be locked again until the next cooking.



Operation Instructions (Continued)

2. How To Use The Electromagnetic Lock (Continued)

Cooking ends state:

1. After the cooking ends, the buzzer will emit four beeps of "DE -" and the display will show "End" and the display will switch to "Loc" every 5 seconds.



2. Press "UNLOCK" button once to unlock the electromagnetic lock.



NOTE:

- If the door is not opened within 10 seconds, the electromagnetic lock will automatically lock.
- If the door is not opened within 30 minutes, the electromagnetic lock will unlock automatically.

3. Press "UNLOCK" button once and open the door, and the electromagnetic lock does not need to be locked again until the next cooking.



4. Press STOP/CANCEL button once to unlock the electromagnetic lock, and the display screen shows clock time. If the door is not opened for 10 seconds, the electromagnetic lock will automatically lock, which can be set normally.



NOTE:

During setting, if the setting is not completed for 30 seconds, the display screen will show "Loc". Open the door once or after 30 minutes, the display screen will show clock time and the system will return to standby mode.



- When the electromagnetic lock is in disabled, pressing number button "UNLOCK" in the above state will result in an invalid sound.
- When the electromagnetic lock is in able and the oven door is closed, press "UNLOCK" button once, the electromagnetic lock action once.

Operation Instructions (Continued)

3. Setting The Clock

This is a 12- or 24- hour clock. You can choose to set the clock time in 12- or 24- hour cycle by pressing CLOCK/TIMER button in standby mode.

1. In standby mode, press and hold CLOCK/TIMER button for 3 seconds to select 12- hour clock, press it again to select 24- hour clock.
2. Press +5 MIN, +1 MIN or +/- buttons to set hour digit.
3. Press START/+30 SEC or CLOCK/TIMER button once.
4. Press +5 MIN, +1 MIN or +/- buttons to set minute digit.
5. Press START/+30 SEC or CLOCK/TIMER button once to confirm.

4. +30 Sec. Function

During microwave cooking, microwave and convection combination cooking, convection cooking, bake non code food, air fry non code food, roast non code food, you can add cooking time by pressing START/+30 SEC button (each press to increase 30 seconds, and up to 95 minutes).

NOTE: Auto cook menus, time defrost, weight defrost and popcorn can't be added cooking time.

5. Express Cooking

Use this feature to program the oven to microwave food at 100% power conveniently. In standby mode, press START/+30 SEC button repeatedly to set cooking time (each press to increase 30 seconds, and up to 95 minutes). The oven will start working automatically. During cooking, you can press START/+30 SEC button repeatedly to add the cooking time.

6. Setting The Kitchen Timer

1. In standby mode, press CLOCK/TIMER button once.
2. Press +5 MIN, +1 MIN or +/- buttons to set desired time. The time ranges from 10 seconds to 95 minutes.
3. Press START/+30 SEC button to confirm.



NOTE:

- When the countdown ends, the buzzer will beep to remind you. You can check the countdown time by pressing CLOCK/TIMER button, if STOP/CANCEL button is pressed when the display shows the time, the function can be cancelled.
- During cooking or pausing state, you can set timer program by pressing CLOCK/TIMER button once if timer has not been set before.

7. Cooking Program

1. In standby mode, press MICRO button once.
2. Press +/- buttons to select cooking power level.

Power Level Chart:

Power(Display)	Power(Display)
100%(P100)	40% (P 40)
90% (P 90)	30% (P 30)
80% (P 80)	20% (P 20)
70% (P 70)	10% (P 10)
60% (P60)	0% (P 00)
50% (P 50)	

3. Press START/+30 SEC button once.
4. Press +5 MIN, +1 MIN or +/- buttons to set cooking time. The time ranges from 10 seconds to 95 minutes.
5. Press START/+30 SEC button to start.



NOTE:

- During cooking, you can press MICRO button to check the current cooking power level.
- If you want to cook at full power level, you can press +5 MIN, +1 MIN or +/- buttons to set cooking time, then press START/+30 SEC button to start.

Operation Instructions (Continued)

8. Convection

During convection cooking, hot air is circulated throughout the oven cavity to brown and crisp foods quickly and evenly. This oven can be programmed for 10 different cooking temperatures. They are: 350F→375F→400F→175F→200F→225F→250F→275F→300F→325F.

Your oven can be programmed to combine preheating and convection cooking operations.

1. In standby mode, press CONV button once.
2. Press +/- buttons to set temperature.
3. Press START/+30 SEC button to confirm.
4. Press +5 MIN, +1 MIN or +/- buttons to set cooking time. The time ranges from 1 minute to 95 minutes.
5. Press START/+30 SEC button once.
6. When reached designated temperature, beep will sound. Open the oven door or press STOP/CANCEL button, then place food into the oven.
7. Press START/+30 SEC button to start.



NOTE:

- The longest preheat time is 30 minutes, and it cannot be set. When the oven reaches preheat temperature, the oven will sound beep every 5 seconds, if there is not any operation in 30 minutes, the cooking program will end automatically.
- During cooking, you can press CONV button to check the current cooking power level.

9. Microwave+Convection

This oven can be programmed for 4 different cooking temperatures. They are: 350F→375F→400F→325F. The cooking time ranges from 10 seconds to 95 minutes.

1. In standby mode, press MICRO+CONV button once.
2. Press +/- buttons to set temperature.
3. Press START/+30 SEC button once.
4. Press +5 MIN, +1 MIN or +/- buttons to set cooking time.
5. Press START/+30 SEC button to start.



NOTE:

- During cooking, you can press MICRO+CONV button to check the current cooking power level.

10. Time Defrost

1. In standby mode, press DEFROST/TIME/WEIGHT button once.
2. Press +5 MIN, +1 MIN or +/- buttons to set defrosting time. The time ranges from 10 seconds to 95 minutes.
3. Press START/+30 SEC button to start.



NOTE:

During defrosting, the system will pause and sound to remind you to turn food over, after that, press START/+30 SEC button to resume.

11. Weight Defrost

The defrosting time and power level are automatically set once the food category and the weight are programmed.

1. In standby mode, press DEFROST/TIME/WEIGHT button twice.
2. Press +/- buttons to select a food code.
3. Press START/+30 SEC button once.
4. Press +/- buttons repeatedly to set the food weight.
5. Press START/+30 SEC button to start.

The allowable weight for each category is shown below:

Code	Food	Maximum Weight
dEF1	Meat	48 oz
dEF2	Poultry	48 oz
dEF3	Seafood	32 oz



NOTE:

During defrosting, the system will pause and sound to remind you to turn food over, after that, press START/+30 SEC button to resume.

Operation Instructions (Continued)

12. Bake

For food codes "Ab-1"~"Ab-2":

1. In standby mode, press BAKE button twice.
2. Press +/- buttons to select a food code.
3. Press START/+30 SEC button once.
4. When reached designated temperature, beep will sound. Open the oven door or press STOP/CANCEL button, then place food into the oven.
5. Press START/+30 SEC button to start.

NOTE: The longest preheat time is 30 minutes, and it cannot be set.

Auto bake menus:

Code	Food	Cooking Time	Temperature
Ab-1	Cookies	11:00	350F
Ab-2	Cake	16:00	350F

For other food:

1. In standby mode, press BAKE button once.
2. Press +/- buttons to select a temperature (350F→375F→400F→300F→325F).
3. Press START/+30 SEC button once.
4. Press +5 MIN, +1 MIN or +/- buttons to set cooking time. The time ranges from 1 minute to 95 minutes.
5. Press START/+30 SEC button to start.
6. When reached designated temperature, beep will sound. Open the oven door or press STOP/CANCEL button, then place food into the oven.
7. Press START/+30 SEC button to start.



NOTE:

- The longest preheat time is 30 minutes, and it cannot be set. When the oven reaches preheat temperature, the oven will sound beep every 5 seconds, if there is not any operation in 30 minutes, the cooking program will end automatically.
- During cooking, you can press BAKE button to check the current cooking power level.

13. Air Fry

For food codes "AF-1"~"AF-7":

1. In standby mode, press AIR FRY button twice.
2. Press +/- buttons to select a food code.
3. Press START/+30 SEC button once.
4. Press +/- buttons to set the food weight.
5. Press START/+30 SEC button to start.

Operation Instructions (Continued)

13. Air Fry (continued)

Code	Food	Weight	Time	Temperature
AF-1	Chicken Drumsticks	8 oz	28:00	400F
		12 oz	31:00	
		16 oz	35:00	
		20 oz	38:00	
		24 oz	42:00	
AF-2	Chicken Nuggets	6 oz	13:00	400F
		8 oz	15:00	
		10 oz	19:00	
		12 oz	23:00	
AF-3	Chicken Wings	8 oz	28:00	400F
		12 oz	30:00	
		16 oz	32:00	
		20 oz	36:00	
AF-4	French Fries	10 oz	30:00	400F
AF-5	Mozzarella Sticks	6 oz	10:00	400F
		8 oz	11:00	
		10 oz	12:00	
		12 oz	13:00	
		14 oz	14:00	
		16 oz	15:00	
AF-6	Onion Rings	8 oz	17:00	400F
AF-7	Popcorn Chicken	8 oz	22:00	400F
		10 oz	24:00	
		12 oz	26:00	
		16 oz	28:00	

For others food:

1. In standby mode, press AIR FRY button once.
2. Press +/- buttons repeatedly to select temperature (400F→350F→375F).
3. Press START/+30 SEC button once.
4. Press +5 MIN, +1 MIN or +/- buttons to set cooking time. The time ranges from 1 minute to 95 minutes.
5. Press START/+30 SEC button to start.



NOTE:

During cooking, you can press AIR FRY button to check the current cooking power level.

Operation Instructions (Continued)

14. Roast

For food codes "Ar-1" ~ "Ar-4":

1. In standby mode, press ROAST button twice.
2. Press +/- buttons to select a food code.
3. Press START/+30 SEC button once.
4. Press +/- buttons to select food weight.
5. Press START/+30 SEC button to start.

Auto roast menus:

Code	Food	Weight	Time	Temperature
Ar-1	Pork loin	2 lb	35:00	400F
		3 lb	45:00	
Ar-2	Pork tenderloin	1 lb	22:00	400F
		2 lb	34:00	
Ar-3	Roasted potatoes	4 oz	28:00	400F
		6 oz	30:00	
		8 oz	33:00	
		10 oz	36:00	
		12 oz	40:00	
		16 oz	42:00	
Ar-4	Salmon Filet	4 oz	25:00	400F
		8 oz	28:00	
		12 oz	31:00	
		16 oz	34:00	
		20 oz	37:00	

For others food:

1. In standby mode, press ROAST button once.
2. Press +/- buttons to select temperature (350F→375F→400F→300F→325F).
3. Press START/+30 SEC button once.
4. Press +5 MIN, +1 MIN or +/- buttons to set cooking time. The time ranges from 1 minute to 95 minutes.
5. Press START/+30 SEC button to start.



NOTE:

During cooking, you can press ROAST button to check the current cooking power level.

Operation Instructions (Continued)

15. Auto Cook

1. In standby mode, press AUTO COOK button once.
2. Press +/- buttons to select a food code.
3. Press START/+30 SEC button to confirm.
4. Press +/- buttons to select food weight.
5. Press START/+30 SEC button to start.

Auto cook menus:

Code	Food	Weight	Time
AC-1	Beverage	8 oz	2:40
		10 oz	3:10
		12 oz	3:30
AC-2	Frozen Pizza	6 oz	2:40
		9 oz	2:50
		12 oz	3:00
AC-3	Fresh Vegetable	8 oz	3:20
		12 oz	4:40
		16 oz	5:40
		20 oz	7:40
AC-4	Frozen Vegetable	8 oz	4:30
		12 oz	6:00
		16 oz	7:30
		20 oz	9:00
AC-5	Oatmeal	1 serving	1:30
		2 servings	2:30
		3 servings	3:30
		4 servings	4:30
AC-6	Potato	8 oz	5:00
		12 oz	6:30
		16 oz	8:00
		20 oz	10:00
		24 oz	12:30

16. Auto Reheat

1. In standby mode, press AUTO REHEAT button once.
2. Press +/- buttons to select a food code.
3. Press START/+30 SEC button to confirm.
4. Press +/- buttons to select food weight.
5. Press START/+30 SEC button to start.

Operation Instructions (Continued)

Auto reheat menus:

Code	Food	Weight	Time
AH-1	Chili	4 oz	2:00
		8 oz	2:20
		12 oz	2:40
		16 oz	3:00
		20 oz	3:20
		24 oz	3:40
AH-2	Dinner plate	8 oz	2:00
		12 oz	3:00
		16 oz	4:00
		20 oz	5:00
		24 oz	6:00
AH-3	Frozen entrée	8 oz	6:00
		12 oz	8:00
		16 oz	11:00
		20 oz	14:00
		24 oz	17:00
AH-4	Mac and Cheese	4 oz	1:20
		8 oz	1:40
		12 oz	2:20
		16 oz	3:00
		20 oz	3:40
		24 oz	4:20
AH-5	Mashed Potatoes	4 oz	1:20
		8 oz	1:40
		12 oz	2:20
		16 oz	3:00
		20 oz	3:40
		24 oz	4:20
AH-6	Pasta	4 oz	1:30
		8 oz	2:00
		12 oz	2:30
		16 oz	3:00
		20 oz	3:30
		24 oz	4:00
AH-7	Rice	4 oz	1:20
		8 oz	1:50
		12 oz	2:20
		16 oz	2:50
		20 oz	3:20
		24 oz	3:50
		28 oz	4:20
AH-8	Soup/sauce	4 oz	2:00
		8 oz	2:20
		12 oz	2:40
		16 oz	3:20
		20 oz	4:00
		24 oz	4:20

Operation Instructions (Continued)

17. Popcorn

1. In standby mode, press POPCORN button once.
2. Press +/- buttons to adjust cooking time. The time ranges from 10 seconds to 5 minutes..
3. Press START/+30 SEC button to start.



NOTE:

The default time for popcorn is 2 minutes and 40 seconds. Step 2 can be omitted when default time is used.

18. Automatic Protection Mechanism

OVERHEATING PROTECTION - When the system enters into super high temperature protection status, the digital display shows "Er03" and continues to beep. After troubleshooting, press STOP/CANCEL button once, the system will return to normal standby mode.

SENSOR MALFUNCTION PROTECTION -

The system enters into protection mode when the system sensor is open circuited or short circuited. The display shows "Er05" or "Er06" and continues to beep. After troubleshooting, press STOP/CANCEL button once, the system comes back to normal standby mode.

19. Child Lock

The child proof lock prevents unsupervised operation by children.

To set: In standby mode, press and hold STOP/-CANCEL button for 3 seconds, a beep will sound and the display will show "CL" for 3 seconds, the oven will auto set child lock mode. Press any button, the display will show "CL" for 3 seconds.

To cancel: Press and hold STOP/CANCEL button for 3 seconds, a beep will sound and the "CL" will disappear.

20. Button Adhesion Protection

In any state, if any button on the control panel is pressed for 1 minute, the program will immediately stop working, the system will beep, and the display will show "FAIL". Any button is invalid at this time. After troubleshooting, press STOP/CANCEL button to return to standby mode.

Care and Cleaning

1. Turn off the oven and unplug the power cord from the wall when cleaning.
2. Keep the inside of the oven clean. When food splatters or spilled liquids adhere to oven walls, wipe with a damp cloth. Mild detergents may be used if the oven gets very dirty. Avoid using spray or other harsh cleaners. They may stain, streak or dull the door surface.
3. The outside of the oven should be cleaned with a damp cloth. To prevent damage to the operating parts inside the oven, water should not be allowed to seep into the ventilation openings.
4. Wipe the door and window on both sides, the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use abrasive cleaner.
5. Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave oven door open to prevent oven from accidentally turning on.
6. If steam accumulates inside or around the outside of the oven door, wipe with a soft cloth. This may occur when the microwave oven is operated under high humidity condition. And it is normal.
7. It is occasionally necessary to remove the glass tray for cleaning. Wash the tray in warm sudsy water or in a dishwasher.
8. The roller ring and oven floor should be cleaned regularly to avoid excessive noise. Simply wipe the bottom surface of the oven with mild detergent. The roller ring may be washed in mild, soapy water or in a dishwasher. When removing the roller ring, be sure to replace it in the proper position.
9. Remove odors from your oven by combining a cup of water with the juice and skin of one lemon in a microwaveable bowl. Microwave for 5 minutes. Wipe thoroughly and dry with a soft cloth.
10. If the light bulb burns out, please contact customer service to have it replaced.
11. The oven should be cleaned regularly and any food deposits should be removed. Failure to maintain the oven in a clean condition could lead to deterioration of surface that could adversely affect the life of the unit and could possibly result in a hazardous situation.
12. Please do not dispose of this appliance into the domestic rubbish bin; it should be disposed to the particular disposal center provided by the municipalities.
13. When the microwave oven with grill function is first used, it may produce slight smoke and smell. This is a normal phenomenon, because the oven is made of a steel plate coated with lubricating oil, and the new oven will produce fumes and odor generated by burning the lubricating oil. This phenomenon will disappear after a period of using.

Warranty

This warranty applies to microwave ovens under the brand name Vissani sold by The Home Depot, in the U.S. ("Vissani Products"). This warranty is in lieu of any other warranty and expressly applies to the individual product only. Vissani products are warranted to be free from any defects in material and workmanship resulting from noncompliance with the legal standards for one year from the date of the consumers' first purchase. In addition, the magnetrons (parts only) of Vissani Products are warranted to be free from defects in material and workmanship for a period of eight years from the date of the consumers' first purchase. Nevertheless, the consumer is responsible for all labor and transportation expenses related to the diagnosis and replacement of the magnetron after the initial one-year warranty expires. In the event the unit requires replacement or refund under the terms of this warranty, the consumer is responsible for all transportation expenses to return the unit to our factory prior to receiving a replacement unit or refund.

Please save your receipt as proof of purchase is required to make a warranty claim. If a covered defect occurs during the one-year warranty period, we agree, at our own discretion, to repair, replace, or pay the consumer the reasonable cost of repairing or replacing the defective item. The warranty can not be transferred through resale, including the resale through a 3rd party unauthorized retailer and is only bestowed upon the original consumer who purchases from an authorized retailer. This warranty does not cover, and excludes, damage or defects caused by: Consumer misuse Abuse Neglect including the failure to clean and/or provide adequate regular maintenance as outlined in the user manual, Commercial use, Subjecting the product to any voltage outside the specified range, Loss of parts, The affixing of any attachments not provided with the product, Loss or damage caused by acts of God, including but not limited to fire, explosion, smoke, water escape, changes that are not reasonably foreseeable in the level of underground water table, glass breakage, windstorm, hail, lightning, falling trees, aircraft, vehicles, flood, and earthquakes. Use in a manner not intended and outlined in the user manual. Failure of the consumer to take timely action to minimize loss or damage or failure of the consumer to give us timely notice of the defect.

Any subsequent damages caused by the above listed exclusions will not be covered and any claims determined to meet the above exclusions will be denied. All liability is limited to the purchase price and does not include any: Retail offered extended warranties, Tax, Other charges (including postage to send required materials), Incidental and/or consequential damages associated with the product in question. Every implied warranty, including any statutory warranty of merchantability or fitness for a particular purpose is disclaimed except to the extent prohibited by law, in which case such warranty is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damage, so the above limitations may not apply to you. If you have a claim under this warranty, please call our Customer Service number: 1-855-VISSANI. For faster service, please have the model number, serial number, and receipt ready for the operator to assist you.

Model Number	Part & Labor	Magnetron (Parts Only)	Type of Service
VSCMAF09S2A09A	One Year	Eight Years	Carry In

VISSANI™

Questions, problems, missing parts?
Before returning to the store, call VISSANI Customer Service

8 am - 8 pm EST
Monday - Friday

8 am - 6 pm EST
Saturday

1-855-847-7264
HOMEDEPOT.COM

Retain this manual for future use.