## TRANSMITTER

## TRANSMITTER FUNCTIONS

**OFF:** Turns the fan OFF

**HI:** Turns the fan ON to high speed

**MED:** Turns the fan ON to medium

speed

**LOW:** Turns the fan ON to low speed

**ON/OFF:** Turns the light ON or OFF by


pressing and releasing the button


quickly

**DIMMER:** Dims or brightens the light by

pressing and holding button

(incandescent only)

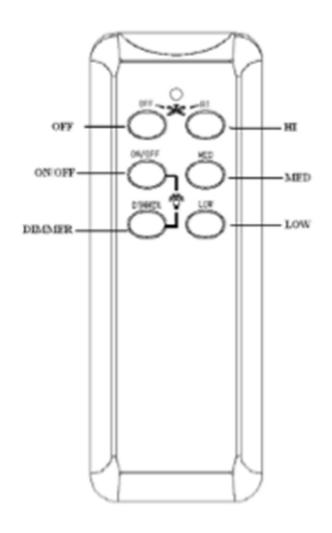

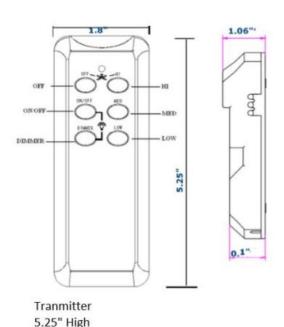

1.8" width

