



GENERAL CARE GUIDE

671 CRESTLAND STREET, LEWISBURG, TN 37091 • 866.969.2603 • SERVICE@ACECASUAL.COM



CLEAN WITH DRY CLOTH

WHEN CLEANING STAINS USE A CLEAN, DRY CLOTH. MAKE CIRCULAR MOTIONS WHILE PRESSING FIRMLY AGAINST THE PROBLEM AREA. ALTERNATE BETWEEN CIRCULAR MOTIONS AND SIMPLE BACK/FORTH MOTIONS.



DO NOT RUB SHARP/ABRASIVE OBJECTS ON SURFACE

KEEP SHARP OBJECTS AWAY FROM YOUR FURNITURE. OBJECTS SUCH AS KEYS, TOYS, AND PETS WITH SHARP CLAWS CAN SCRATCH, TEAR, AND PUNCTURE THE SURFACE.



KEEP OUT OF HIGH TEMPERATURES

EXTREME TEMPERATURE CAN BE DANGEROUS TO UPHOLSTERED FURNITURE. HEATING DUCTS OR RADIATORS CAN CAUSE THE FABRIC FIBERS TO DRY AND FADE COLORS.



KEEP OUT OF HUMID CONDITIONS

KEEP FURNITURE IN A TEMPERATURE-CONTROLLED ENVIRONMENT, WITH THE RELATIVE HUMIDITY AT 35 PERCENT TO 45 PERCENT. WE RECOMMEND THE USE OF AIR CONDITIONING AND A HUMIDIFIER OR DEHUMIDIFIER TO HELP MANAGE THE HUMIDITY IN YOUR REGION.



KEEP OUT OF DIRECT SUNLIGHT

SUNLIGHT CAN DAMAGE FIBERS AND CAUSE THEM TO FADE. PLACE FURNITURE AWAY FROM SUNLIGHT. USING WINDOW SHADES, BLINDS, OR LINED DRAPERIES CAN PREVENT SUBSTANTIAL SUN DAMAGE.