



TM

# Use and Care Guide

Item #1010 752 612  
Model #24RTY49824231

## 5.5 ft Halloween Classic LED Spider Silhouette

### Safety Information



**CAUTION:** Grasp the plug to insert or remove from the power source. Do not unplug by pulling on cord.




**CAUTION:** The lighting string on this product is rated at 22.8 Watts (0.19 Amps). Do not overload. Do not connect to another lighting string, decorative outfit or other electrical products. Before you use or re-use this product inspect it carefully. Discard or return to place of purchase with purchase receipt if the product has cuts, damage, frayed wire insulation on cords, cracks in the socket enclosures, loose connections, exposed copper wire or other obvious damage.

### Pre-Assembly


Carefully remove all the parts from the box and place them on the ground. Many parts are connected by the lighting string that runs throughout the item. Take special care not to pull, cut or damage the lighting string. Read the entire manual prior to assembly and identify all the parts included in the package against the parts list. It is recommended to assemble parts of the product while lying flat on the ground or a flat surface, versus standing the item up to assemble the parts. If any parts are missing or damaged do not attempt assembly but contact our customer service center or return to place of purchase with purchase receipt, 1-855-HDHoliday (1-855-434-6543).

Assembly of this product may require more than one person.

#### PACKAGE CONTENTS

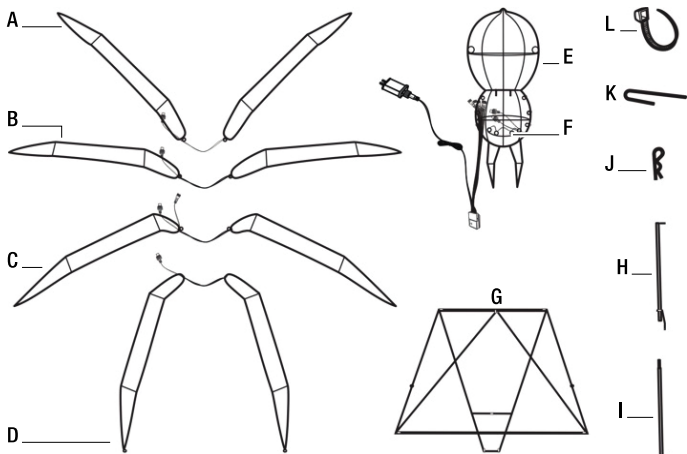

#### TOOLS REQUIRED

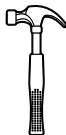


Claw hammer

| Part | Description                | Quantity |
|------|----------------------------|----------|
| A    | First pair of spider legs  | 1        |
| B    | Second pair of spider legs | 1        |
| C    | Third pair of spider legs  | 1        |
| D    | Forth pair of spider legs  | 1        |
| E    | Body of spider             | 1        |
| F    | Eyes of spider             | 1        |
| G    | Support bracket of spider  | 1        |
| H    | Upper support bar          | 1        |
| I    | Lower support bar          | 1        |
| J    | Cotter Pin                 | 5        |
| K    | Ground stake               | 4        |
| L    | Plastic Tie                | 15       |

### Assembly


#### 1 Assembling the Upper and Lower Support Bars

- Stack the bottom of the Upper Support Bar (H) into the top of the Lower Support Bar (I) then secure with the built in locking pin.

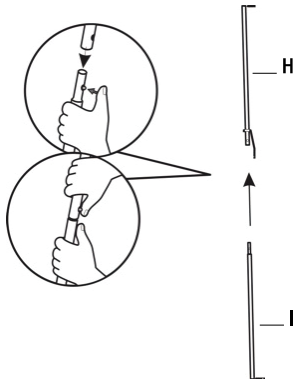


#### 2 Assembling the Support Bracket of Spider

- Unfold the Support Bracket of Spider (G) then stand upright with the wider end on the ground. Insert each hooked end of the assembled Upper and Lower Support Bars (H, I) into the matching connecting holes at the top and bottom of the Support Bracket of Spider (G). The Support Bars (H, I) come with a metal stabilizing bar attached at the middle to help stabilize the Support Bracket of Spider (G). Insert the hooked end of the metal stabilizing bar into the metal nut on the middle of Support Bracket of Spider (G) then secure all connecting points with the Cotter Pins (J).

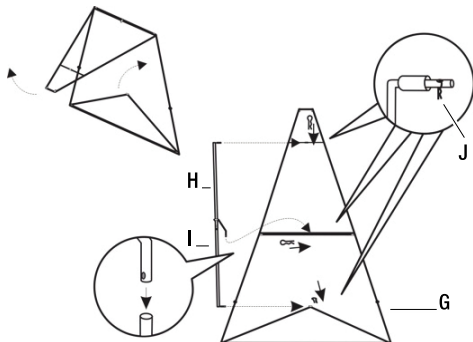

#### 3 Assembling the Body of Spider to the Support Bracket


- Insert the connecting rods on the underside of the Body of Spider (E) into the matching connecting holes on the top of Support Bracket of Spider (G). Fasten the Body of Spider (E) and Support Bracket (G) together at adjacent metal frames with the Plastic Ties (L).

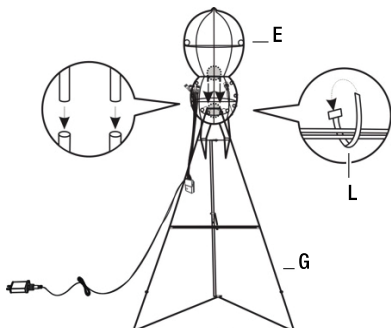

Assembly (continued)


4 Attach the spider legs to the body

- From Back to Front: Assemble the four pairs of Spider Legs (A, B, C,D) in order. (Note: The First Pair of Spider Legs (A) is at the top or back of Spider.) Insert the connecting rods at the end of each Spider Leg into the matching connecting holes on each side of the Body of Spider then fasten at the connecting loop with Plastic Ties (L).

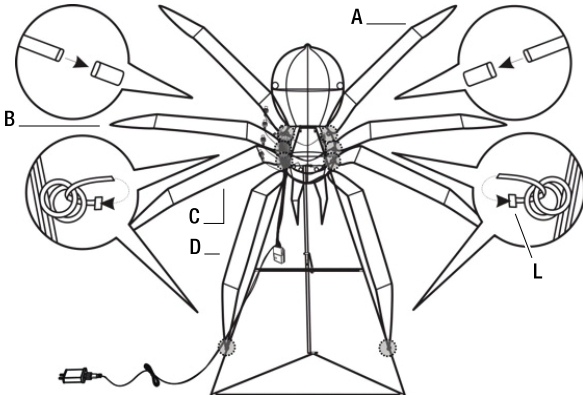


5 Connect the power cord plugs

- There are six sets of power cord plugs and connectors. The lettering A, B, C, D, E, F are affixed to the cord. Connect each set with the same lettering and secure with the built-in cap screw.

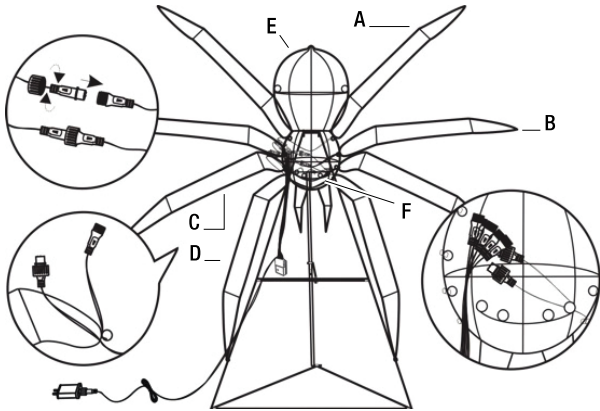

6 Operating the Controller and assembling the Ground Stakes

- On the front cover of the Controller is a press button with two functions. Press the button once for "Steady On" lights of Spider Legs. Press the button a second time for the "Legs Light to Simulate Movement" to Light consecutively from top to bottom. This light order of Legs will simulate motion.
- Place the 4 Ground Stakes (K) over the corners of the base on the Support Bracket of Spider then firmly into the ground.

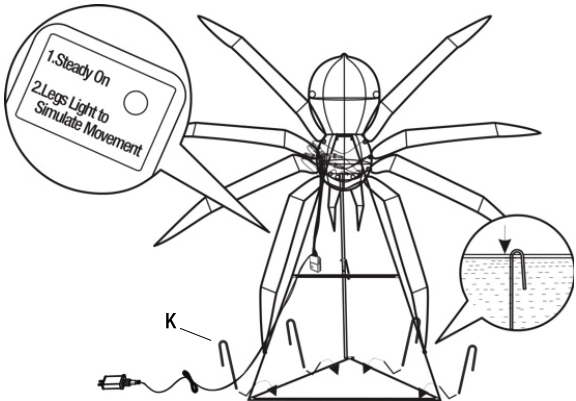

Troubleshooting

| Problem                                                     | Solution                                                                                                                                                                                       |
|-------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Unstable and hard to assemble                               | <ul style="list-style-type: none"><li>Ensure that the ground or surface that the item sits on is flat and level.</li></ul>                                                                     |
| Works improperly                                            | <ul style="list-style-type: none"><li>Be sure to plug the item correctly to a wall outlet or a UL Listed Power Cord.</li><li>Do not plug into other electrical items.</li></ul>                |
| Hard to assemble                                            | <ul style="list-style-type: none"><li>Ensure all parts are assembled properly per the Instruction Manual.</li></ul>                                                                            |
| The item does not light                                     | <ul style="list-style-type: none"><li>If the item does not light check for loose or broken bulbs and connections and all plugs.</li><li>Check for Broken or Burned Out Fuse In Plug.</li></ul> |
| One or more sections of multiple light strings not lighting | <ul style="list-style-type: none"><li>If the item has multiple Light String Cords be sure to plug in all cords.</li></ul>                                                                      |

Care and Cleaning

- Carefully remove the product from wherever it is placed. This helps to avoid any undue strain or stress on the product connections and wires. If the product is placed somewhere other than the ground, it should be well secured and flat.
- Carefully disassemble the unit taking caution not to cut any electrical wires.
- Wipe the unit with a damp cloth and allow the unit to dry before storing.

Warranty

90 DAY LIMITED WARRANTY

WHAT IS COVERED

The product is intended for residential seasonal use for 90 days per year. This product is covered by a 90 day limited warranty. Return to place of purchase with purchase receipts for refund or exchange within 90 days of purchase.

WHAT IS NOT COVERED

This warranty does not cover commercial use, normal wear and tear, products not used in accordance with directions provided on or with the product, burn out of bulbs or LEDS, batteries, products that have been subjected to unauthorized repair and/or modification and damage caused by shipping and improper handling, alterations, misuse, in store display models or accidents. Questions, problems, missing parts?

Questions, problems, missing parts? Before returning to the store, call Home Accents Holiday Customer Service 8 a.m. - 6 p.m., EST, Monday – Friday 1-855-HDHoliday (1-855-434-6543)