

Assembly Instructions

Caution : You must read this before you proceed. Read all instructions before assembling and using this product

1. Select an ideal location. Set out all parts on a clear and level surface prior to assembly. Ideally, the Gazebo

should be set up in the desired location to avoid moving it after assembly.

2. Team Work. We recommend 4-5 adults and it may require 3 to 4 hours to fully assemble the Gazebo. If possible, please use safety ladder.

3. Use caution. During the entire assembly process, especially when lifting heavy or large parts or using ladders,

pay attention to safety. No one other than those assistants should be allowed in the work area.

4. Check all available parts. Before assembling your Gazebo Frame, make sure that you have all the parts described in the Parts List.

5. Ensure that ALL BOLTS are fully and securely bolted in before you proceed to attach the Canopies.

6. Keep children away. Children shouldn't be allowed in the work area. Do not let them handle parts and tools.

Do not allow children to climb the Gazebo.

7. Some parts may contain sharp edges. Wear protective gloves if necessary during assembly.

8. While this gazebo is manufactured to withstand winds through only the supplied ground stakes, in areas

subject to frequent severe weather, securing the gazebo to a deck, concrete patio or footings should be considered.

9. Remove any accumulated water on the roof immediately, or disassemble the gazebo in order to avoid damages.

CAUTION:

DO NOT use or enter the gazebo under harsh weather (e.g. thunderstorms, high winds, hail, heavy snow etc.).

In these conditions, it might tip over and could cause serious injury to bystanders. Any damage or injury caused

by these conditions is not covered by the warranty. DO NOT install the gazebo adjacent to trees or a sloped roof.

Snow and ice may slide onto the gazebo and cause it to collapse. DO NOT use or enter the gazebo if there exist

any of the following or of similar conditions:

1. visible movement of support members, roofing panels or sagging roofline.

2. creaks or audible noise from the gazebo.

3. cracks, fractures or malformation of support member or roof panels.

4. damaged or missing fasteners.

- DO NOT hang any weights on the roof frame.

- DO NOT use ladder leaning against the gazebo or climbing onto the roof.

- Keep away from heat or flame source.
- If the gazebo will not be used for a long period of time (e.g. during winter time), disassemble and store it in a clean, dry location.

PLANNING INSTALLATION:

To prevent damage, place all parts on a soft surface during assembly.

Tools required for assembly (not included): hammer, screwdriver, stepladder, level and other safety items such


as gloves, safety goggles and hardhat. Allen wrench is included.

PLANNING INSTALLATION:

To prevent damage, place all parts on a soft surface during assembly.

Tools required for assembly (not included): hammer, screwdriver, stepladder, level and other safety items such

as gloves, safety goggles and hardhat. Allen wrench is included

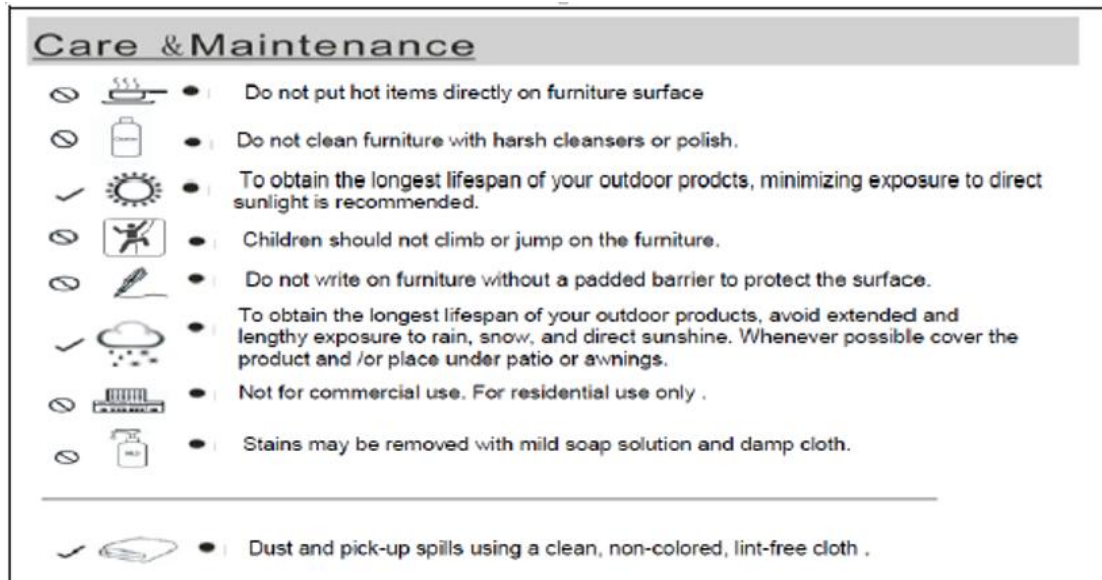

GAZEBO