

 
Item #1005832966

# HAMPTON BAY®

## USE AND CARE GUIDE

---

### 16IN OSCILLATING WALL-MOUNT FAN WITH REMOTE CONTROL

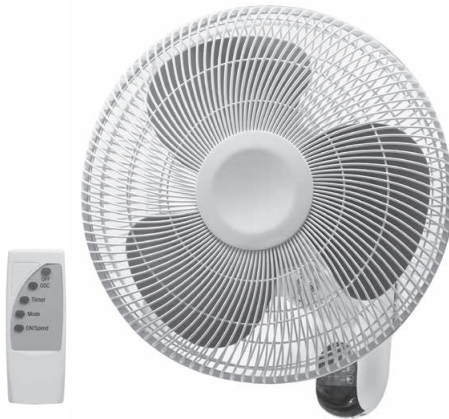

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM



Visual instruction of how to install this fan:  
Visit [www.homedepot.com](http://www.homedepot.com) and enter either the Item or Model number to find  
this fan and click the link of visual instruction in the product overview section.

---

#### THANK YOU

*We appreciate the trust and confidence you have placed in Hampton Bay through the purchase of this wall fan. We strive to continually create quality products designed to enhance your home. Visit us to see our full line of products available for your home improvement needs. Thank you for choosing Hampton Bay!*

## Table of Contents

---

Table of Contents .....	2	Operation .....	8
Safety Information .....	3	Making Electrical Connections .....	8
Warranty .....	4	Control Panel .....	8
Pre-installation .....	4	Fan Modes .....	8
Specifications .....	4	Turning Fan On .....	8
Tools Required .....	4	Remote Control .....	8
Hardware Included .....	5	Oscillation .....	8
Fan Assembly .....	6	Adjusting Fan Tilt .....	8
Mounting the Fan .....	7	Timer .....	8
		Care and Maintenance .....	9
		Cleaning .....	9
		Maintenance .....	9
		Storage .....	9
		Fuse - Overload Protection .....	9

---

**READ AND SAVE THESE INSTRUCTIONS**

---

# Safety Information

## INTENDED USE:

This product is intended for indoor residential and office use only, not for industrial or other commercial applications. Use only with electrical wiring that is in good working order and that meets applicable codes and ordinances. If you have any questions whether your wiring is adequate, consult a qualified electrician.

While using your fan, you should follow the **IMPORTANT INSTRUCTIONS** listed below. As part of those instructions, we have used the word "**WARNING**" to indicate the level of hazard: **WARNING** indicates a hazard which, if not avoided, could result in injury or death.

## IMPORTANT INSTRUCTIONS:

As with all electrical appliances, basic safety precautions should always be followed to reduce the risk of electric shock, fire, or injury to persons.

## READ ALL THE INSTRUCTIONS BEFORE USING THIS FAN.

1. Use this fan only as described in this manual. Any other use not recommended by the manufacturer may cause electrical shock, fire or injury to persons.
2. Do not operate the fan with a damaged power cord or after the fan malfunctions or has been dropped in any manner.
3. Use of extreme caution is necessary when any fan is used by or near children, disabled persons or pets and whenever the fan is left operating unattended.
4. Always unplug fan when not in use, when moving from place to place, when assembling or disassembling parts, and before cleaning.
5. The use of attachments, not recommended or sold by the manufacturer, may cause hazards.
6. Do not use outdoors.
7. Do not operate the fan with blade guards or any safety device removed.
8. Avoid the use of extension cords due to risk of fire. If an extension cord must be used, the cord must be minimum 14 AWG and rated not less than 1875 watts.
9. Do not run power cord under carpeting. Do not cover cord with throw rugs, runners or the like. Arrange cord away from traffic area where it will not be tripped over.
10. Do not insert or allow any object to enter any openings on the fan. Doing so may cause electric shock and/or fire hazard. Avoid contact with moving parts.
11. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
12. Children should be supervised to ensure they do not play with the appliance.
13. Avoid placing objects in the path of the blades. To avoid personal injury or damage to the fan and other items, be cautious when working around or cleaning the fan.
14. Do not use water or detergents when cleaning the fan or fan blades. A dry dust cloth or lightly dampened cloth will be suitable for most cleaning.



**WARNING:** To reduce the risk of electric shock, this fan must be installed with an isolating wall control/switch.



**WARNING:** Do not insert foreign objects between rotating fan blades.



**WARNING:** Use your fan only in dry environments. This fan is not intended for use in a bathroom, laundry area, or similar locations.



**WARNING:** Fire Hazard. Fans have arcing or sparking parts inside. Do not use near combustible materials or flammable gases.



**WARNING:** All batteries should be replaced at the same time, do not mix with old batteries. Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium) batteries. Properly dispose of used batteries..

## READ AND SAVE THESE INSTRUCTIONS

# 1-Year Warranty

**Limited Warranty:**

This unit is guaranteed to the original retail purchaser against defects in quality or workmanship for a period of one year from the date of original purchase. If this unit fails because of a manufacturing defect within 30 days of purchase, return the unit, with your receipt, to the retailer. After 30 days, but within the warranty period, if the unit was purchased within the continental United States, return it, freight prepaid, to the manufacturer for repair or replacement. If the unit was purchased outside the continental United States, return the unit to the place of purchase. This warranty does not cover damage caused by misuse, abuse, overheating or alteration. Repairs made by anyone other than the manufacturer are not covered in this warranty. The manufacturer will not be held liable for any losses due to neglectful operation. All implied warranties, including the warranties of merchantability and of fitness of purpose, if applicable, are hereby limited in duration to the period of one year from the date of original retail purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. Incidental or consequential damages arising from a breach of either express or implied warranties are hereby disclaimed and excluded. Some states do not allow the exclusion of limitation of incidental or consequential damages, so this limitation or exclusion may not apply to you. Upon the expiration of this warranty all such liability will terminate. No other warranties are expressed or implied.


This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. No informal dispute settlement mechanisms are available. This limited warranty is given in lieu of all other warranties.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit [www.hamptonbay.com](http://www.hamptonbay.com).

# Pre-Installation

## SPECIFICATIONS

Fan size	Speed	Volts	Amps	Watts	RPM	CFM	N.W.	G.W.	C.F.
16 in.	Low	120	0.41	44.46	1009	303	2.12 kgs ( 4.67 lbs.)	2.72 kgs ( 5.99 lbs.)	3.06 cu. ft.
	Medium		0.42	47.50	1159	333			
	High		0.43	49.96	1301	414			



**NOTE:** These are approximate measures. They do not include amps and wattage used by the light kit.



## TOOLS REQUIRED



+

Phillips screwdriver



-

Flat blade screwdriver



Step ladder

# Pre-Installation (continued)

## HARDWARE INCLUDED



 
**NOTE:** Hardware shown not to actual size.



AA



BB



CC



DD

Part	Description	Quantity
AA	Bracket screw	1
BB	Wall mounting screw	3
CC	Wall mounting bracket	1
DD	Screw anchor	3

# Assembly



NOTE: Images may vary slightly from actual product.

1

 


- Remove the Blade Cap by twisting it **CLOCKWISE** while holding the metal shaft tightly.



NOTE: Threads are reversed. Unscrew = Clockwise.

2

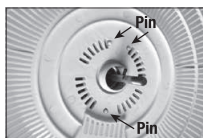


- Assemble Rear Grille onto Motor Housing. Rear Grille should fit into pins on fan motor housing as shown.

3



- Thread Locknut onto Motor Housing to lock Rear Grille in place.

 4

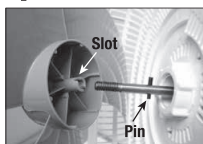

- Remove any protective covering over shaft before Fan Blade Installation.
- Place Fan Blade onto Motor Shaft. The pin on Motor Shaft should fit into slots of Fan Blade.

5

 


- Thread Blade Cap onto threaded end of Motor Shaft.




NOTE: Threads are reversed. Tighten = Counter-clockwise.

6

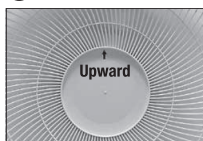

- Locate the arrow on the back side of the front grille. Make sure this arrow is pointing upwards before performing Step 7.

 7

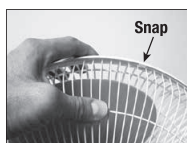

- Attach Front Grille to Rear Grille by snapping them together. Be sure all clips are secure.
- Do not operate fan without grille in place.

# Assembly – Hanging the Fan

8



- ☐ Secure Wall Bracket to the wall in the desired location.
- ☐ Use proper anchors for the wall material selected, following the manufacturers instructions.

 **NOTE:** Mounting bracket to wall studs is recommended.

9



- ☐ Hang fan on wall bracket.
- ☐ Place Bracket Screw through fan and thread screw on to bracket.

# Fan Operation

## MAKING THE ELECTRICAL CONNECTIONS

- ☐ Plug fan directly into 120 volt A.C., 60 Hz wall outlet. Be sure plug fits tightly in outlet.
- ☐ Unplug fan when not in use.

 


**WARNING:** A loose connection may cause overheating and damage to the plug or fan.



**CAUTION:** To prevent overloading a circuit, do not plug the fan into a circuit that is servicing other electrical needs.

## CONTROL PANEL

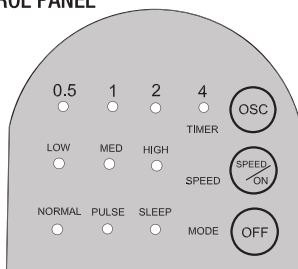

## FAN MODES

Fan Modes accessed using the Remote Control. This fan has three operating modes that will work with oscillation control ON or OFF:

**Normal** - Fan speed is consistent with the speed chosen and operates like a standard fan.

**Pulse** - Fan will vary the speed from the highest fan speed chosen to very slow speed.

**Sleep** - In sleep mode the fan will operate in a Natural mode that varies the speed naturally, and then gradually slow down to a low setting to maintain a gentle breeze during sleep. It can be used in conjunction with the timer setting to shut-off after a preset length of time. Sleep mode works as follows depending on the fan speed when Sleep Mode is initiated:

**High Speed** - 30 minutes on High, then 30 minutes on Medium, then remains on Low speed.

**Medium Speed** - 30 minutes on Medium, then remains on Low speed.

**Low Speed** - Remains on Low speed.

## TURNING FAN ON



**NOTE:** Always operate the fan in the upright position following all instructions and recommendations listed in this manual.

- ☐ With fan mounted to a stable wall surface, plug fan into properly functioning outlet.
- ☐ To start the fan, press SPEED/ON button. Press SPEED/ON repeatedly to desired fan speed (HIGH, MID, LOW).
- ☐ Press OFF button to discontinue use. Unplug fan when not in use.

## REMOTE CONTROL

- ☐ Place 2 AAA size batteries (not included) in the remote control.
- ☐ Use the buttons on the remote as you would with the control panel.
- ☐ Point the remote control towards the control panel for the sensor to receive a signal.



## OSCILLATION

- ☐ To start fan oscillation, press OSC button on control panel or remote control while fan is at any speed or mode.
- ☐ To discontinue oscillation, press the OSC. button on control panel or remote control again.

## ADJUSTING FAN TILT

- ☐ To adjust the tilt angle simply tilt the fan to desired position. Ratcheting effect should hold the fan at the desired angle.

## TIMER

- ☐ Accessed using the remote control, the timer function is designed to work during oscillation or any fan mode or speed.
- ☐ Press the TIMER button. Each time it is pressed, time duration indicator lights illuminate: 0.5, 1, 2 or 4 hours.
- ☐ Simply add up the time value of the lights to see timer setting up to 7.5 hours - maximum time).
- ☐ To turn the timer function off, press the TIME button continuously until all the timer indicator lights are off.



## Care and Maintenance

### CLEANING



**CAUTION:** Before cleaning the fan, be sure to disconnect power cord from the outlet.



**WARNING:** Do not immerse the fan or any wires in water.

- ☐ Periodic grille cleaning with a vacuum will prevent dust build up.
- ☐ Clean the grille surface with a clean damp cloth. Do not use harsh chemical or abrasive cleaners.
- ☐ Allow fan to dry completely before use.
- ☐ The motor is sealed and does not require any interior maintenance, cleaning or lubrication.
- ☐ Replace front grille before fan use. Do not operate the fan without the grille in place

### MAINTENANCE



**WARNING:** Do not use the fan if it has malfunctioned or become damaged in any way.

- ☐ The Internal motor bearings are permanently lubricated at the factory and do not require any additional lubrication.

### STORAGE

- ☐ Keep original carton for storage of the fan. Coil and tie the power cord to avoid damage during storage.

## Fuse - Overload Protection

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse as per the user servicing instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.

### FUSE REPLACEMENT



**WARNING:** Risk of fire. Replace fuse only with identical 2.5 or 5.0 Amp, 125 Volt fuse (3.6mm x 10mm).

1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover by sliding open fuse access cover on top of attachment plug towards blades (Fig. 2).
3. Remove fuse carefully. Use a small tool to pry the end of the fuse from holder cavity (Fig. 3). Be careful not to break glass window.
4. Replace fuse. Be sure fuse is properly seated within its cavity (Fig. 3).
5. Close fuse cover by sliding it back to its original closed position (Fig. 1).

Fig 1



Fig 2



Fig 3







# HAMPTON BAY<sup>®</sup>

Questions, problems, missing parts? Before returning to the store,  
call Hampton Bay Customer Service  
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST Saturday

1-855-HD-HAMPTON

HAMPTONBAY.COM

Retain this manual for future use.