



## Model XWT04Z Parts List

A = Standard Equipment

O = Circuit Diagram

Item#	Part#	Description	Q'ty	Unit
001	815U84-9	XWT04 NAME PLATE	1	
002	265995-6	TAPPING SCREW 4X18	9	PC.
003	187932-9	HOUSING SET	1	
	C10 263025-7	RUBBER PIN 4	4	PC.
	C20 802J50-9	CAUTION LABEL	1	
	D10	INC. 39		
004	651572-4	SWITCH SL220SD-19	1	PC.
005	631738-2	LIGHT CIRCUIT	1	PC.
006	638503-0	SWITCH UNIT	1	PC.
007	424042-4	CUSHION RUBBER	1	PC.
008	187873-9	BATTERY HOUSING SET	1	PC.
	C10 263005-3	RUBBER PIN 6	2	PC.
	D10	INC. 41		
009	643843-3	TERMINAL	1	PC.
010	421971-2	BUMPER	1	PC.
011	266056-5	TAPPING SCREW 5X45	4	PC.
012	158076-2	HAMMER CASE COMPLETE	1	PC.
013	267268-3	FLAT WASHER 19	1	PC.
014	322045-1	CLIP	1	PC.
015	268098-5	PIN 4	1	PC.
016	324405-3	ANVIL	1	PC.
017	324697-4	HAMMER	1	PC.
018	216008-6	STEEL BALL 4	29	PC.
019	267340-1	FLAT WASHER 32	2	PC.
020	234338-3	COMPRESSION SPRING 33	1	
021	216007-8	STEEL BALL 6.4	2	PC.
022	227171-0	SPUR GEAR 23	3	PC.
023	310185-7	SPINDLE	1	PC.
024	256033-5	PIN 6	3	PC.
025	253794-8	FLAT WASHER 18	1	PC.
026	213722-5	O RING 63	1	PC.
027	227172-8	INTERNAL GEAR 53	1	PC.
028	213407-3	O RING 26	1	PC.
029	210059-1	BALL BEARING 6000DDW	1	PC.
030	241850-6	FAN 60	1	PC.
031	519199-5	ARMATURE ASS'Y 18V	1	PC.
	D10	INC. 29,30,32		
032	210025-8	BALL BEARING 627LLB	1	PC.
033	638107-8	YOKE UNIT	1	PC.
034	265995-6	TAPPING SCREW 4X18	2	PC.
035	643818-2	BRUSH HOLDER	1	PC.
036	643823-9	BRUSH HOLDER	1	PC.
037	CB441	CARBON BRUSH CB-441 (195022-4)	1	SET
038	643941-3	BRUSH HOLDER CAP	2	PC.
039	187932-9	HOUSING SET	1	
	C10 263025-7	RUBBER PIN 4	4	PC.
	C20 802J50-9	CAUTION LABEL	1	
	D10	INC. 3		
040	424042-4	CUSHION RUBBER	1	PC.
041	187873-9	BATTERY HOUSING SET	1	PC.

C10	263005-3	RUBBER PIN 6	2 PC.
D10		INC. 8	
042	251314-2	+ SCREW M4X12	1 PC.
043	345736-7	HOOK	1 PC.
044	263036-2	RUBBER PIN 5	1 PC.
045	268184-2	PIN 1.5	1 PC.
046	424026-2	CUSHION	1 PC.
D01	652008-6	PAN HEAD SCREW M3.5X7	4 PC.
D02	654037-5	INSULATED TERM. FT1.25-M3	2 PC.