

## **PRODUCT CARE INSTRUCTIONS**

### **MICROFIBER DUSTER MODEL # 6052-20 and 6052-21**

#### Washing Instructions:

1. Microfiber can be hand washed in warm soapy water
2. Rinse well in clean water
3. Spin the duster between palms to remove excess water
4. Air-dry and spin again to fluff the duster

#### Do Not:

1. Do not put in washing machine or dryer. Be sure to use the washing instructions above
2. Do not spray the duster with any chemical sprays. Chemical sprays, such as furniture polish, wood cleaner, etc. will bind to the threads and clump together, significantly reducing the duster's performance. The microfiber material is what draws the dust into the duster.