



## 1-1/2 TON SCISSOR JACK

### Pre-Operation

---

#### BEFORE ASSEMBLY AND OPERATION

Compare all parts with the Package Contents lists in this manual. If any part appears missing or damaged, do not use this product. Contact the Customer Service Team at 1-888-HD-HUSKY or visit [www.huskytools.com](http://www.huskytools.com).

### SPECIFICATIONS

---

Model	Jack Dimensions	Max Load Capacity	Lifting Range	Saddle Dimensions	Jack Weight
1-1/2 Ton Scissor Jack	17.32 in. x 4.8 in. x 4.13 in.	3,000 lbs 5 in. height - 1,000 lbs. 9 in. height - 2,000 lbs. 11 in. height - 2,400 lbs. 14 in. height - 3,000 lbs.	4.125 to 15.125 in.	2.14 in. x 1.63 in.	7.3 lbs.

#### HOW IT WORKS

This is a manually operated jack for emergency purposes only. To use, insert the hook end of the 2-part handle system into the eyehole at the end of the jack and begin turning clockwise to raise the jack. Turn the handle counterclockwise to lower the jack. Make sure the saddle is properly positioned before raising the vehicle.