

LG WASHCOMBO™ DIGITAL DIAL CYCLE & FABRIC CARE GUIDE

Get it done in one—let LG's 2-in-1 WashCombo™ do the heavy lifting. Our built-in intelligence and intuitive LCD dial make it easy to get laundry day dialed in.



WHAT'S ON THE DIAL?

- Door Lock Indicator
- Wi-Fi Indicator
- Remote Start Indicator
- Control Lock Indicator
- Previous Screen Button
- Select Button

Choose from more than 25 cycles that wash and dry with no need to transfer clothes.

CYCLE	CYCLE DESCRIPTION
Wash+Dry	Combined cycle for mixed loads, cotton or linen
AI Wash+Dry	Combined cycle optimized for laundry contents
Normal*	Mixed loads and cotton or linen fabrics
AI Wash*	Optimizes cycle based on contents of laundry
Bedding*	Bulky items, pillows, blankets or comforters
Delicates*	Lingerie, sheer or easily damaged fabrics
Towels*	Includes high-speed spin to remove excess water
Quick Wash*	Lightly soiled clothing or small loads
Heavy Duty*	Heavily soiled laundry, especially cotton fabrics
Allergiene**	Reduces certain allergens using heat
Perm. Press*	Minimizes wrinkles in "wrinkle-free" fabrics
Bright Whites**	Use with white fabrics only
Sanitary*	Uses extra-hot wash temperature
Rinse+Spin*	Rinses and spins items only
Spin Only*	Drains and spins with no wash or rinse
Active Wear*	Special or treated fabrics for sports or outerwear

CYCLE	CYCLE DESCRIPTION
Kids Wear*	High temperatures for heavily soiled items
Jeans*	Designed specifically for jeans
Color Care*	Helps keep colors from fading
Sweat Stains*	Helps remove sweat stains and odors
Small Load*	A small number of normally soiled items
Large Load*	Washer is approximately half full
X Large Load*	Washer is very full
Tub Clean	Designed to clean and dry the inside of the washer
Overnight**	Reduces washing noise, helps prevent wrinkles at night
Hand/Wool	Shrinkable wool or hand-washable items
Swimwear	Gently removes chlorine or salt from swimwear
Dresses	Lightly soiled, delicate dresses
Dry Only	Dries with no wash
Delicates Dry	Lingerie, sheer or easily damaged fabrics
Perm. Press Dry	Minimizes wrinkles in "wrinkle-free" fabrics

*To add a drying option to this cycle, select Dry on the touch panel.
**Indicates a bonus cycle you can download using the ThinQ® app on your smartphone.

WASH & DRY
AS FAST AS
2hrs

WASH & DRY IN AS FAST AS 2 HOURS†

In as fast as 2 hours, your clothes will be clean, fresh and dry—without having to stop what you're doing to move clothes between 2 machines.



CLEAN UP TO 31 LOADS WITH 1 EASY FILL††


ezDispense® automatic dispenser cleans up to 31 loads, which means no more digging out detergent and fabric softener every time you do laundry.

†Cycle time may vary depending on load type/weight. Based on independent testing in Wash+Dry cycle with Dryer on Energy Saver mode, 10 lb. DOE standard load (October 2023). Full capacity load approximately 20 lb. ††Based on internal testing of a comparable model, 9-13 lb. loads in normal mode, up to 18 loads when using detergent and softener; up to 31 loads when using both compartments to dispense detergent only (May 2020). Always use HE (High-Efficiency) detergent with this washer.

Intuitive dial control gives you more of what you need with each turn, from descriptions of each setting and helpful prompts to status updates and remaining cycle time.

GET LAUNDRY DAY DIALED IN—IT'S EASY

Load, set and go—laundry day is just that easy with LG's LCD dial and touch panel.

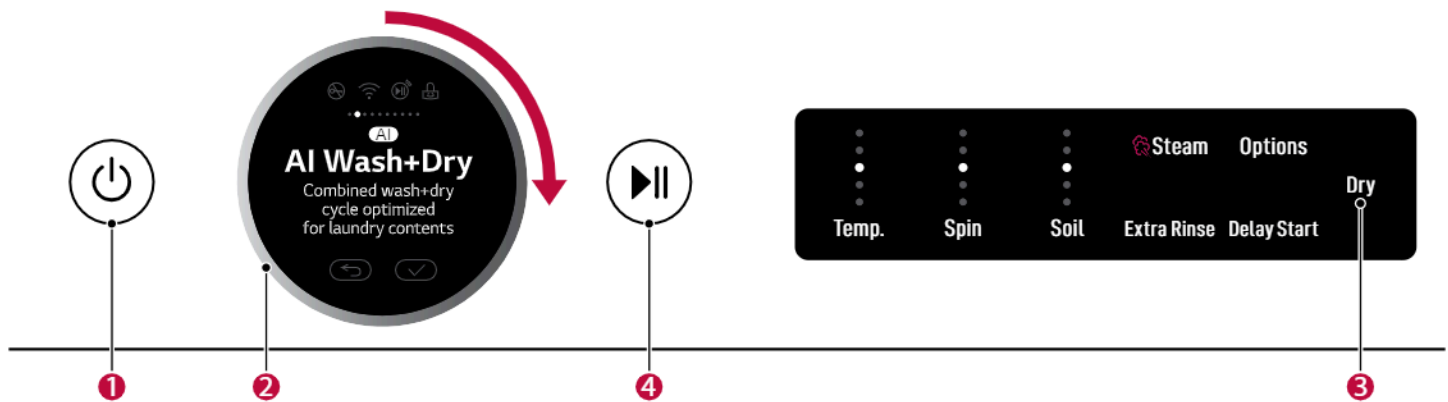

1

POWER IT ON

Touch Power to turn on your LG WashCombo™—you'll be greeted with a tune and friendly "Hello."

2

TURN THE DIAL

Rotate the dial to choose from 10 pre-loaded cycles or touch Options to edit, remove or add cycles.

3

DRY OPTION

Wash+Dry and AI Wash+Dry automatically include a drying cycle. To add one to other cycles, simply touch Dry.

4

PRESS START

Touch and hold Start to begin the selected cycle. After sensing the load, the dial will show remaining cycle time.

COMPLETELY CUSTOMIZE YOUR CYCLE

Modify any cycle by using the touch panel to change settings like temperature, spin speed and soil level to your liking. You can delay the start of a load and even add options like an extra rinse.

MODIFY ANY CYCLE

Press pads such as Temp., Spin or Soil to make adjustments to the selected cycle before you hit Start.

ADD OTHER OPTIONS

Options for each cycle will light up on the touch panel—press the one you want and then make selections on the dial.

GO BACK OR SELECT

Press the check mark on the dial to confirm your choice or hit the back button to see the previous screen.