


REPLACEMENT PARTS - MODEL DXGST227CS

2-CYCLE TRIMMER

PPN 41AD27CC939

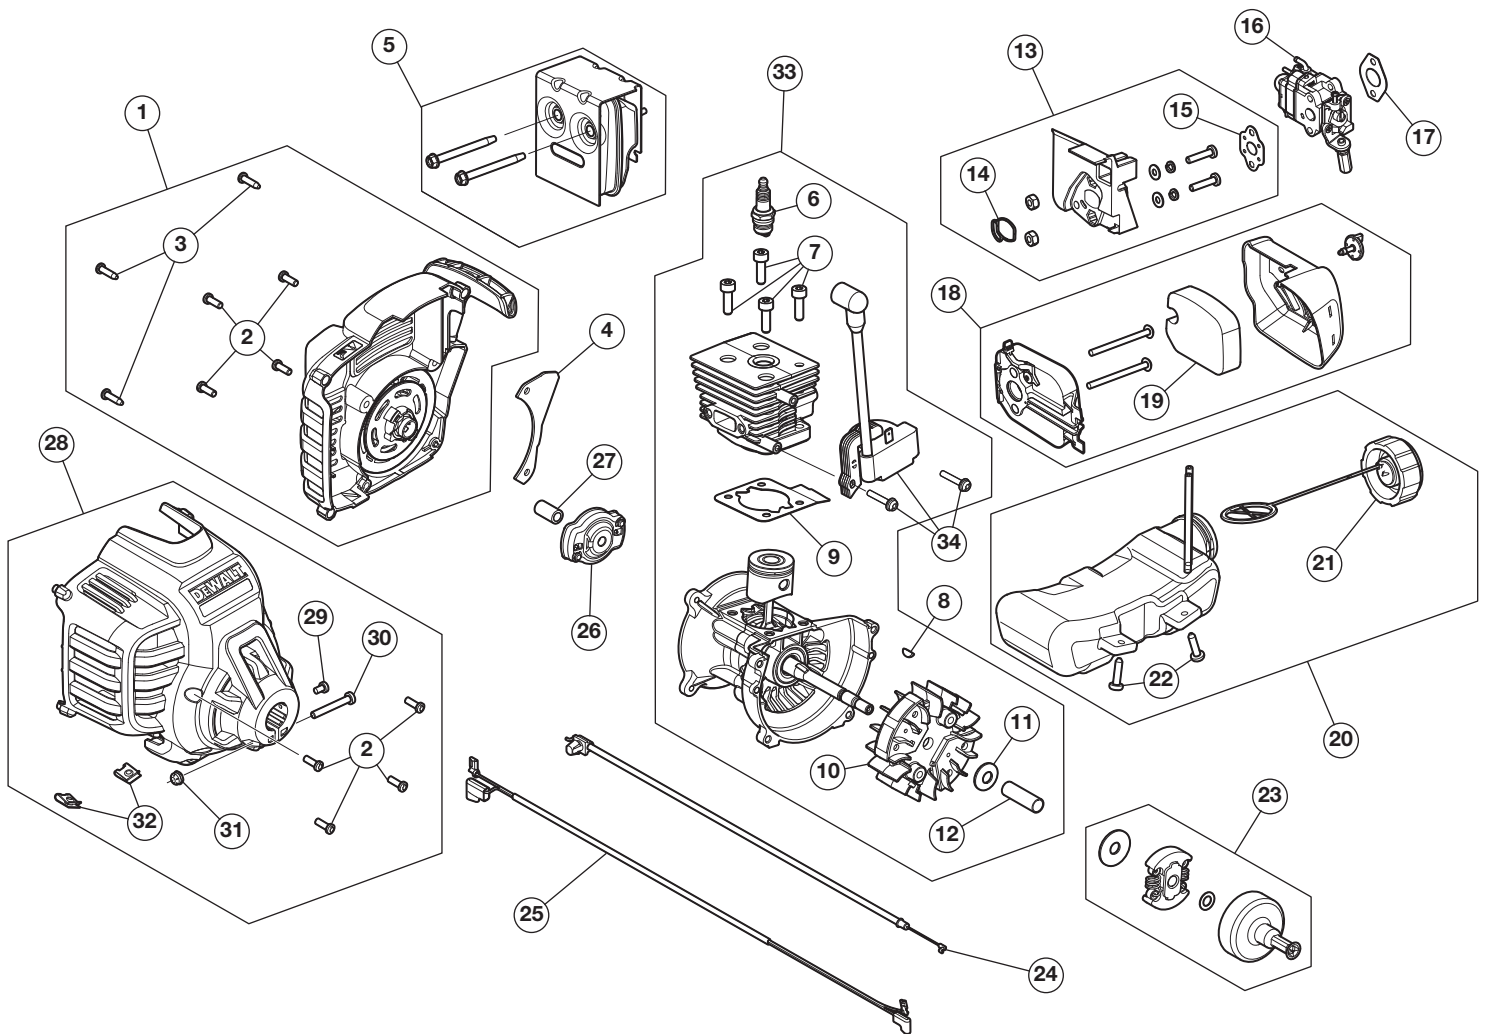

Item	Part No.	Description	Item	Part No.	Description
1	753-10928	Rear Engine Cover (includes 2 & 3)	18	753-10925	Air Cleaner Assembly (includes 19)
2	791-182195	Starter Screw	19	753-06954	Air Cleaner Filter
3	710-04194	Cover Screw	20	753-10926	Fuel Tank Assembly (includes 21 & 22)
4	731-21835	Starter Assembly Guard	21	753-06857	Fuel Tank Cap
5	753-08745	Muffler Assembly	22	9206A	Fuel Tank Screw
6	753-06847	Spark Plug	23	753-05860	Clutch Assembly
7	710-04715	Cylinder Bolt	24	746-06691	Throttle Cable
8	914-04016	Flywheel Key	25	753-05877	Lead Wires
9	753-06827	Cylinder Gasket	26	753-06091	Pawl Assembly
10	753-06246	Flywheel Assembly	27	753-06104	Adapter
11	753-06247	Washer	28	753-10927	Clutch Cover Assem. (includes 2, 29 - 32)
12	753-06248	Spacer	29	791-182519	Anti-rotation Screw
13	753-06189	Insulator Assembly (includes 14 & 15)	30	2986	Clamp Screw
14	753-06184	Insulator O-Ring	31	712-0161	Clamp Nut
15	791-181709	Gasket	32	791-182366	U-shaped Nut
16	751-20529	Carburetor	33	753-11126	Short Block Assem. (includes 6 - 12 & 34)
17	753-06253	Carburetor Gasket	34	753-10924	Module Assembly

REPLACEMENT PARTS - MODEL DXGST227CS

2-CYCLE TRIMMER

PPN 41AD27CC939

Item	Part No.	Description
35	753-10929	Throttle Housing Assem. (incl. 36 - 39)
36	731-21872	Throttle Tigger Lock-Out
37	791-182405	Throttle Switch Assembly
38	731-21871	Throttle Trigger
39	753-05007	Throttle Trigger Spring
40	841-036143S	Upper Shaft Housing Assembly
41	791-610327	Harness Clip
42	BD-N680354	Handle Assembly (includes 43)
43	BD-90614038	Handle Bolt
44	753-10964	Split Boom Coupler Assem. (incl. 45)
45	791-182057	Anti-Rotation Screw
46	731-08926	Hanger
47	841-036151S	Lower Shaft Housing Assembly
48	753-04283	Shield Assembly (includes 49 & 50)
49	753-04282	Shield Mounting Hardware
50	791-180553	Blade Assembly
51	841-036054S	Cutting Head Assembly (includes 52)
52	731-10783-51	Bump Knob

Items Not Shown

* 791-682075B Shoulder Harness

