


# Assembly Instructions

 

## END TABLE

CAUTION: You must read this before you proceed.

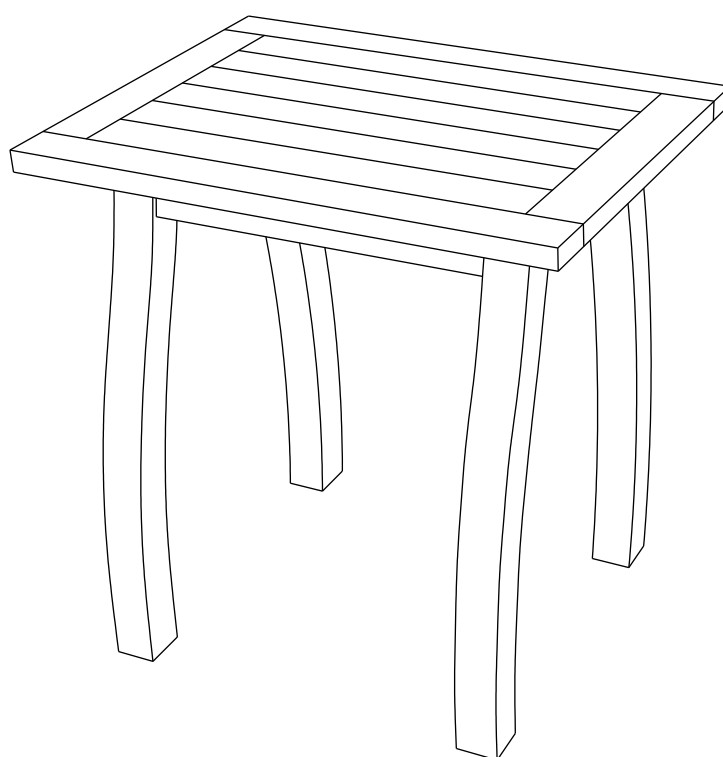




**CAUTION :** This End Table is NOT a TOY.  
Keep your child / children at bay in the process of assembly.  
For turning the End Table and to prevent damage to the End Table, 02 persons may be needed to execute this action.

## Parts List

No.	Picture	Description	Qty
A		Table Top	1
B		Legs	4


## Hardware
 
### Table Hardware

No.	Picture	Description	Qty
①		Bolts M6 x 65mm	9
②		Flat Washers M6	9
③		Allen Key	1

## Assembly Preparation

### Before Beginning Assembly:

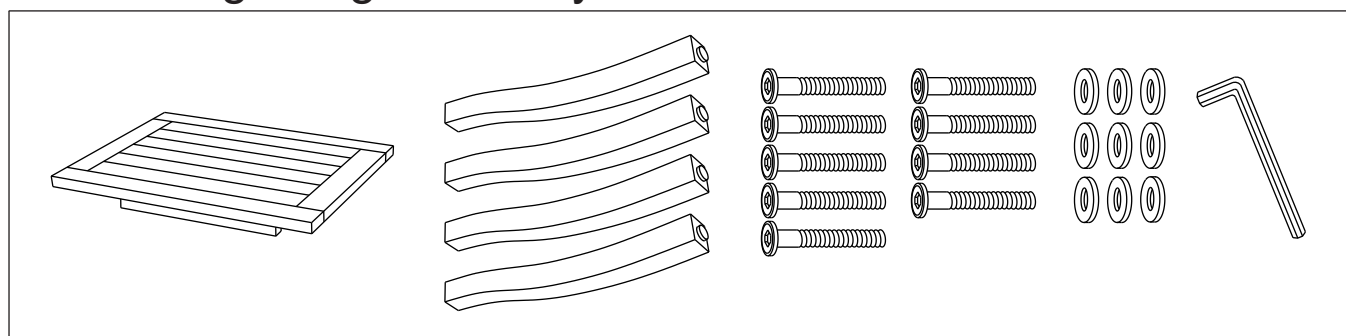

☒ Read instructions, cover to cover.



☒ Have 2 adults on hand for assembly.



☒ Do not assemble on flooring or carpet.




☒ Assemble on a clean non-marring surface (packing foam).



☒ Save all packaging until finished.


## Assembly Steps

### OVERVIEW

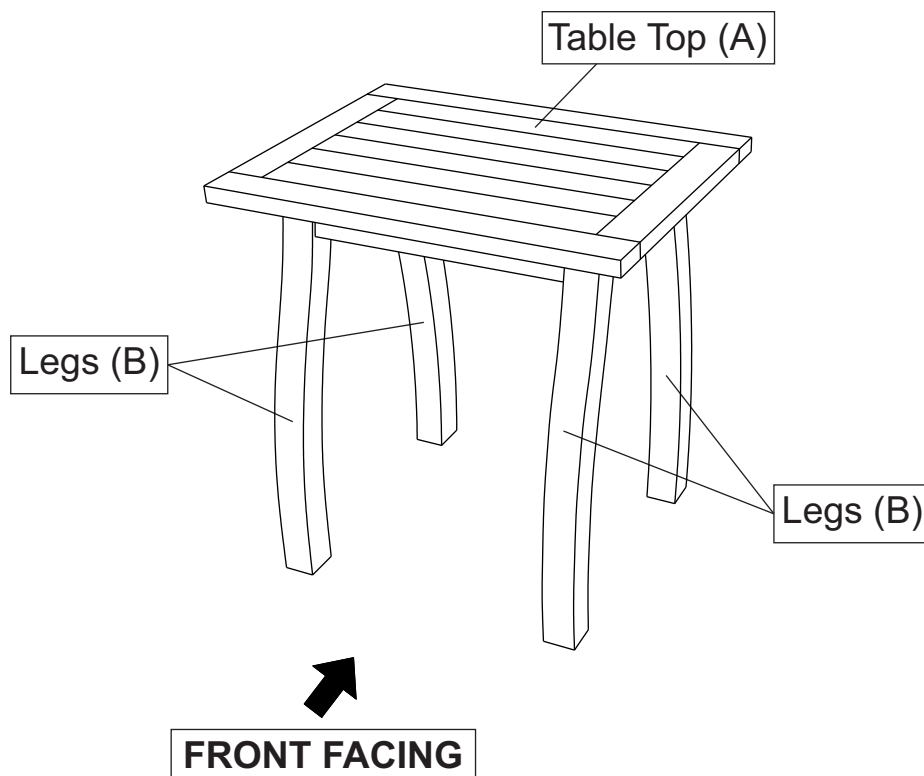

This End Table has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the End Table parts, the above picture is to help you put the various parts into perspective. Please read through the instructions herebelow to familiarise the parts and steps before assembly.


### Step 1

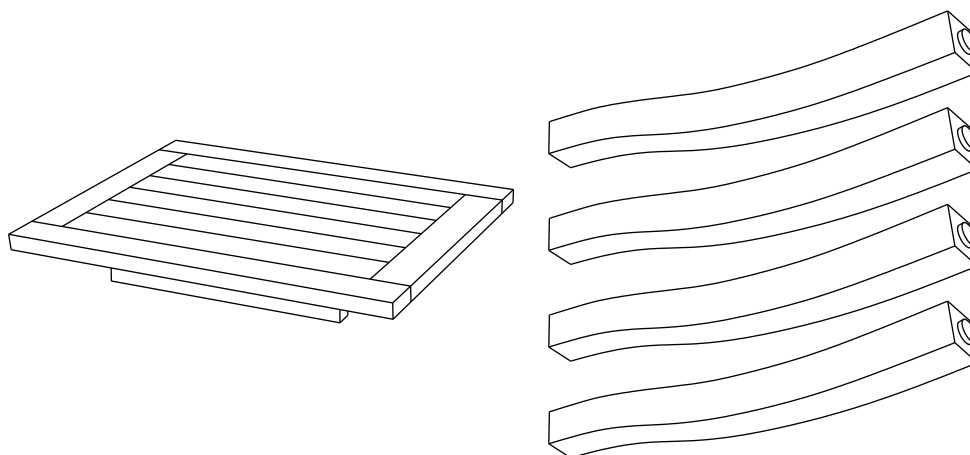

Unpack and place all parts on a clean, non-marring surface.

## Assembly Steps

### Step 2

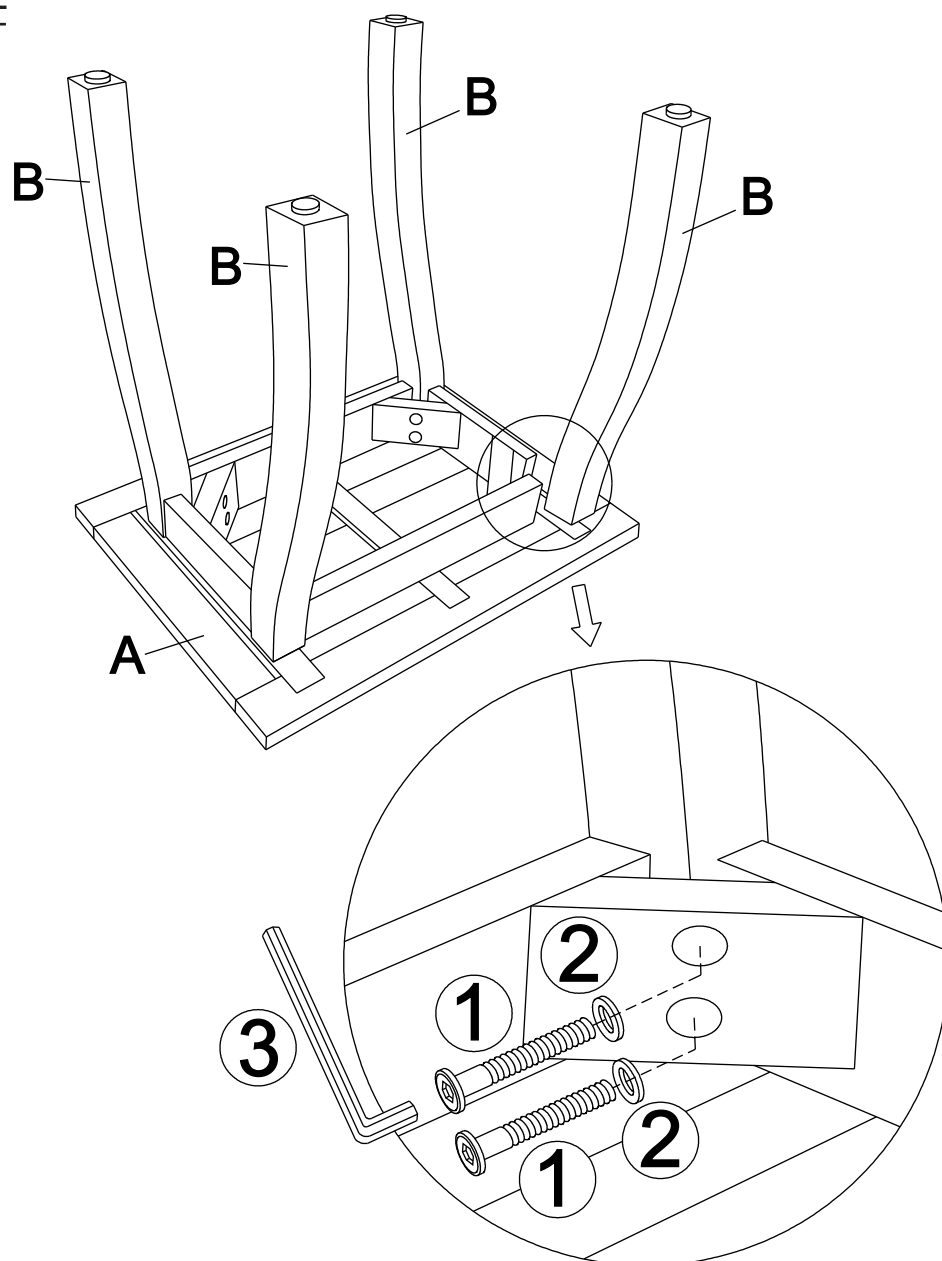

Place the Table top (A) with its underside skywards onto a clean, soft surface to avoid any scratch or damage to the product.


Affix loosely the Legs (B) into the mounting position at the corners of the Table Top (A), using the Bolts (①) with Flat Washers (②), with the Allen Key (③), as shown in the picture.

Repeat the same process with the other Legs (B).

**Do not fully tighten Bolts.**

## Assembly Steps

### Step 3

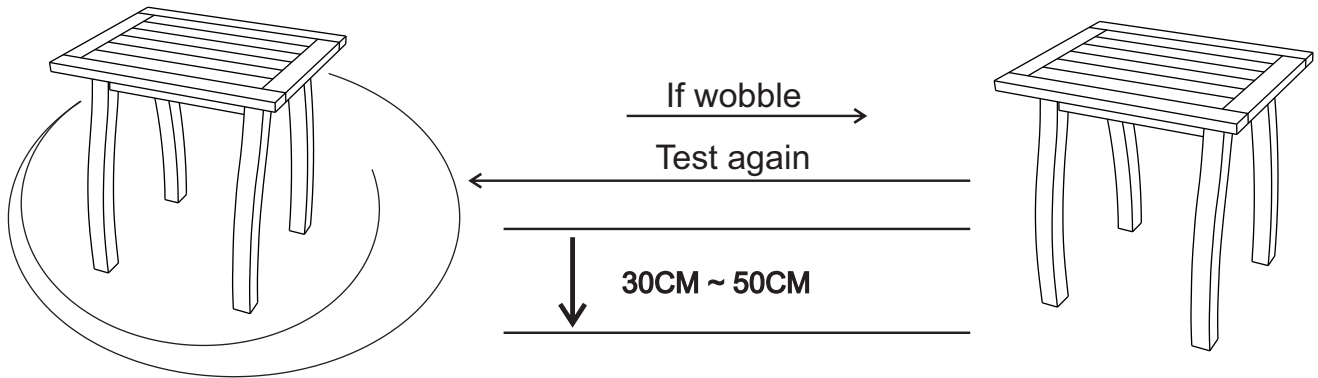


Turn the End Table right side up  
Place the End Table on a LEVEL SURFACE to see if it wobbles.

If it wobbles, lift the End Table to some 30cm to 50cm height from the ground.  
Keep your feet and toes well away from the drop zone.  
Drop the End Table freely and vertically with the four legs, hitting the ground, at the same time.  
This Drop Test will help to ensure that all the Bolts and gaps to all reach full alignment status.  
Test again for evenness on a LEVEL SURFACE.  
If no wobbles found, proceed to tighten all the bolts.

**CAUTION: When tightening these screws, tighten sequentially.  
DO NOT tighten any screw fully and then towards the next one.  
This would cause the frame to warp.  
If there is still wobbles, loosen the screws and execute this same drop tests.  
WARNING ! IF END TABLE IS NOT STABLE , IT COULD LEAD TO DAMAGING THE PRODUCT.**



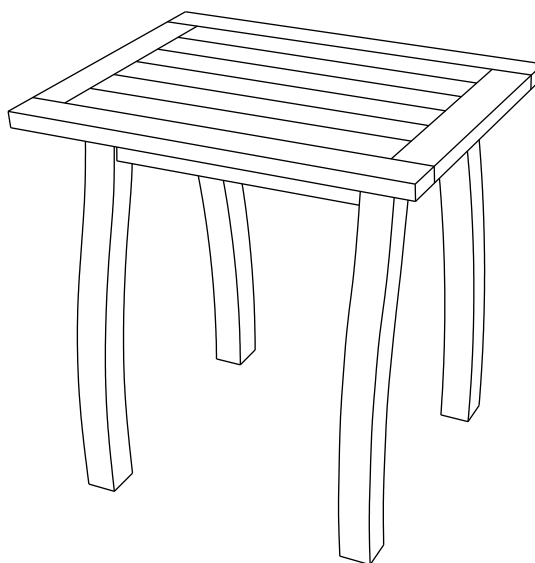






### Step 4



Ensure all bolts are fully locked into position.  
The End Table is ready to be used.

**Caution: This End Table can only be used on a flat, level surface.**

## Care & Maintenance

- |   |  |
|---|--|
|  | <input checked="" type="checkbox"/> Do not put hot items directly on furniture surface.  |
|  | <input checked="" type="checkbox"/> Do not clean furniture with harsh cleansers or polish.   |
|  | <input checked="" type="checkbox"/> To obtain the longest lifespan of your outdoor products, minimizing exposure to direct sunlight is recommended.  |
|  | <input checked="" type="checkbox"/> Children should not climb or jump on the furniture.  |
|  | <input checked="" type="checkbox"/> Do not write on furniture without a padded barrier to protect the surface.   |
|  | <input checked="" type="checkbox"/> To obtain the longest lifespan of your outdoor products, avoid extended and lengthy exposure to rain, snow, and direct sunshine. Whenever possible cover the product and /or place under patio or awnings. |
|  | <input checked="" type="checkbox"/> Not for commercial use. For residential use only.  |
|  | <input checked="" type="checkbox"/> Stains may be removed with mild soap solution and damp cloth.  |
|  | <input checked="" type="checkbox"/> Dust and pick-up spills using a clean, non-colored, lint-free cloth.   |

### What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

### Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

### Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

### Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

