


LIGHT SOCIETY

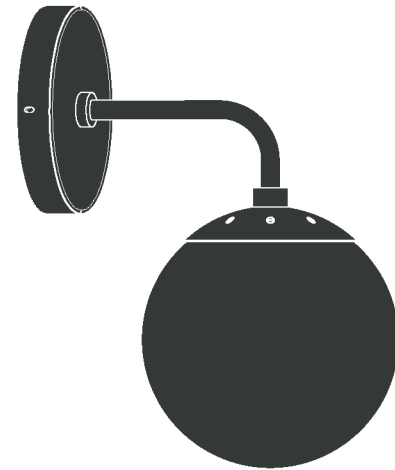

CONTACT INFORMATION

Have a question or missing parts? Our customer service team is ready to help.
Give us a call or send us an email and we'll get you sorted!

Phone: +1888-550-9970

Email: support@lightsociety.com

Website: www.lightsociety.com

Hours of operation:

Monday - Friday: 8:00am-4:00pm PST

Saturday - Sunday: Closed

MADE IN CHINA

Model # LS-W264
V1-111418

⚠ IMPORTANT SAFETY INSTRUCTIONS

- Requires installation by a licensed Electrician.
- Carefully examine the cord, lamp holder, switch and all other parts for damage. If any part is damaged, the product should not be used.
- This light fixture is rated for 60W MAX medium-base (E26) light bulb (120V, 60Hz). To avoid the risk of fire, do not exceed the recommended wattage.
- We suggest using LED bulbs for low energy consumption and long-life span.
- All electrical connections must be in accordance with local and National Electrical Code (NEC) standards.
- Keep all hardware parts out of reach of children.
- Dispose plastic packaging material immediately to avoid any risk of suffocation to children and animals
- PLEASE READ INSTRUCTIONS IN THEIR ENTIRETY PRIOR TO ASSEMBLY AND INSTALLATION.

CARE AND USE

- Recommended for indoor use only.
- Wipe clean using a soft, dry cloth or static duster. Always avoid the use of harsh chemicals and abrasives to clean fixture as they may damage the finish.

ITEMS PROVIDED

- Mounting Hardware
- Light Fixture
- Lamp Shade




ITEMS YOU NEED


- Screwdriver
- Wire Cutter/Stripper
- Electrical Tape
- 60W MAX medium-base (E26) light bulb

GETTING STARTED

1. Carefully unpack fixture and parts.
2. Place all components on a clean, flat and soft surface (e.g. carpet or rug) to prevent parts from getting scratched.
3. Make sure all parts are included before discarding any packing materials.

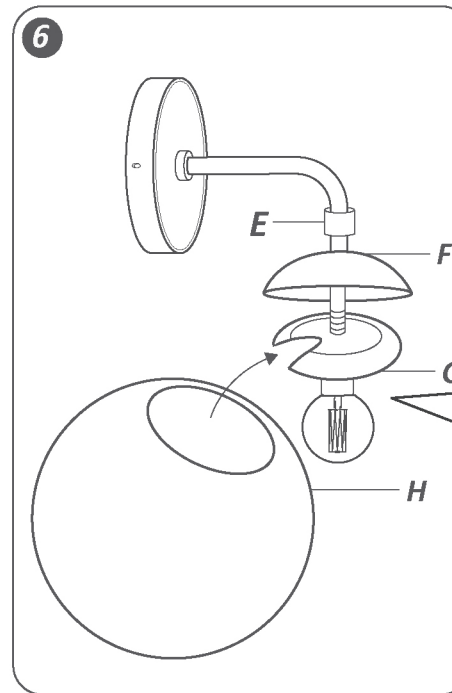


Hook Lamp Shade (H) at an angle over Lamp Holder (G), pivot Lamp Holder (G) until fully inserted. Lower Shade Canopy (F) over Lamp Shade (H). Thread Shade Fastener (E) clockwise to secure shade in place.

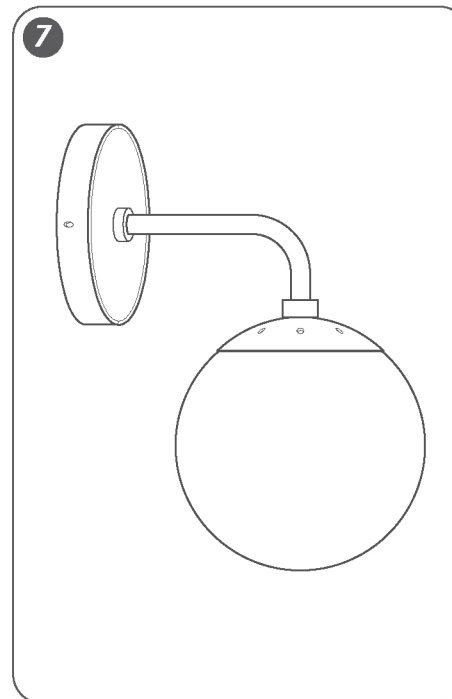


Enjoy your new lamp!

CAUTION: Please ensure that the fitting is cool and switched off before replacing the bulb.

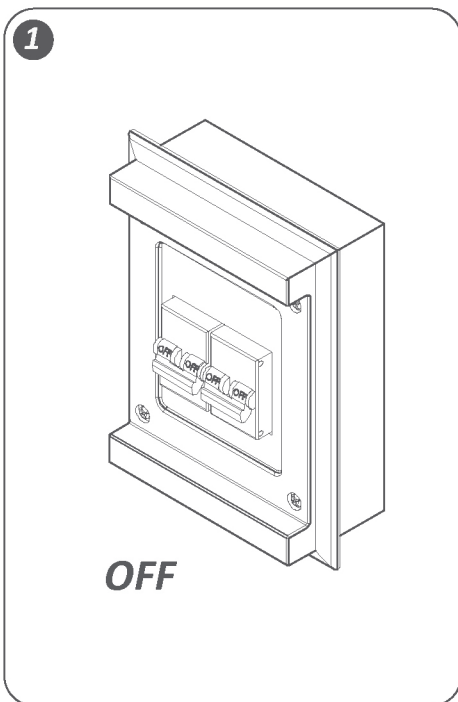


Shut off main electrical supply at fuse box or circuit breaker. Simply turning the power off using the light switch is not sufficient to prevent electrical shock!

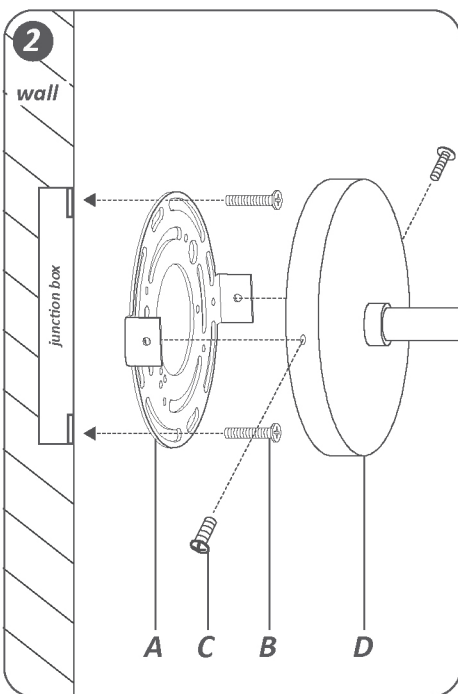

1. Remove Mounting Plate (A) from Canopy (D) by unscrewing Canopy Screws (C).

2. Secure Mounting Plate (A) to junction box using Mounting Screws (B).

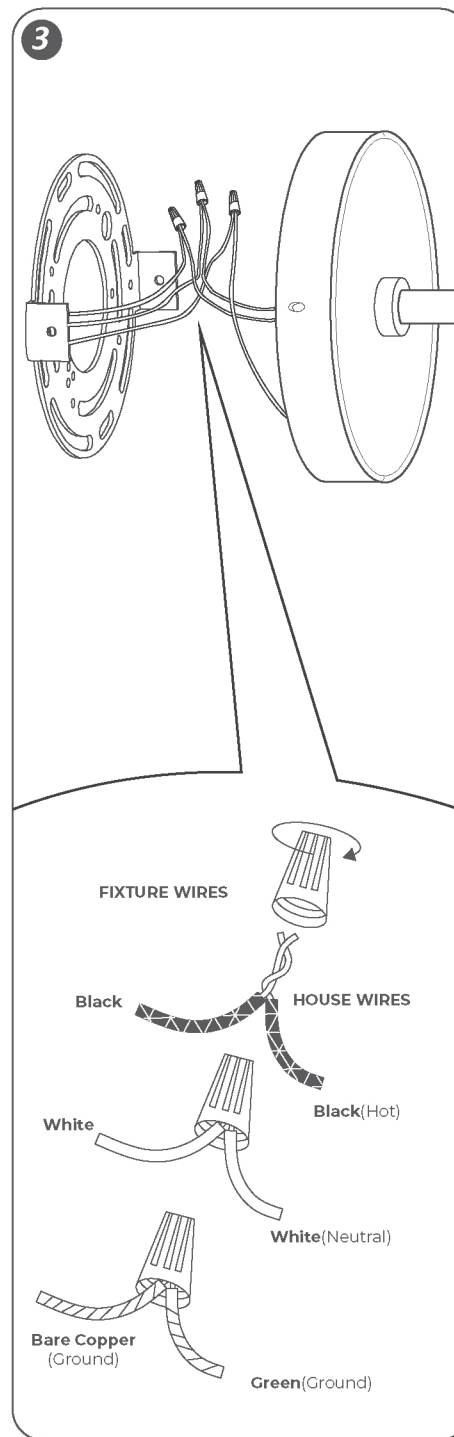


Connect black fixture wire to black supply wire and white fixture wire to white supply wire using wire caps (provided). Wrap connection with electrical tape.


Connect ground wire from canopy with ground wire from junction box using a wire cap. Wrap with electrical tape for a more secure connection. If house does not have ground wire, attach ground wire to green grounding screw marked GND. **WARNING:** It is imperative that the outlet box in your home be properly grounded.

Tuck all wires carefully into the J-Box.

WARNING: Never connect grounding wire to black or white power supply wires.

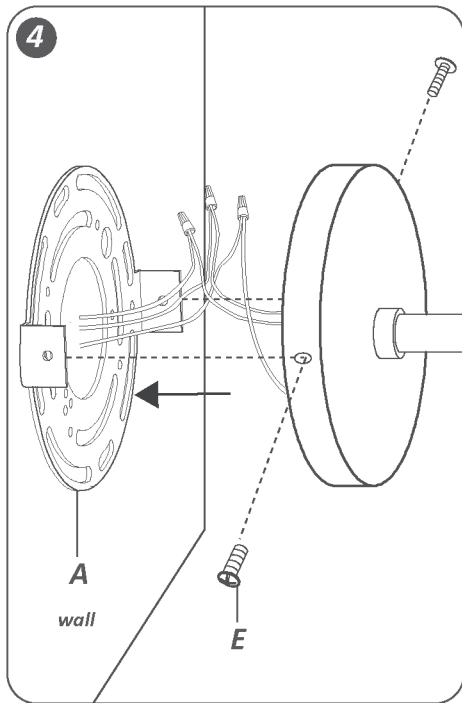

Position Canopy over Mounting Plate (A), secure in place with Canopy Screws (E).

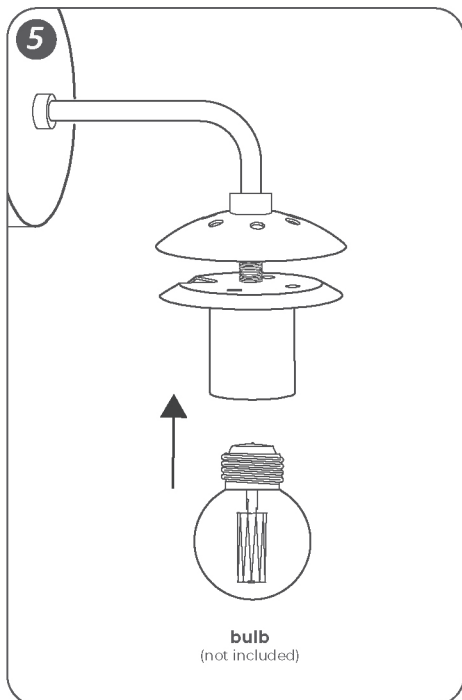

Insert desired bulb (not included). 60W MAX medium-base (E26) light bulb. Do not exceed recommended wattage.

Recommended bulb: G16.5.

