



Paper Shades by Redi Shade Use & Care

Use:

To raise, secure pleats with two included clips. To lower, remove the clips to release the pleats.

Cleaning:

Lightly dust and/or vacuum with upholstery attachment.

Caution:

Do not immerse in water, dry clean, use ultrasonic cleaning, spot remover, or strong detergent on shade.



Redi Shade Customer Service: 1-888-608-6611