

ATTENTION:

This Shade/Canopy product is made with the highest quality material available. **ShelterLogic™** Quick Clamp Canopy offers protection from sun, light rain, tree sap, animal - bird excrement and light snow. **Quick Clamp Canopy™** is designed to fit most tables or bleachers made of wood, hard resin plastic, aluminum, steel, or thick pressboard up to 10' wide. **DO NOT INSTALL PRODUCT TO GLASS TOP TABLES, LIGHT SMALL TABLES, OR BREAKABLE SURFACES.** Please read and fully understand the installation details and warnings prior to final assembly.

DANGER:

Choose the location of your Canopy carefully. **DANGER: Keep away from electrical wires.** Check for overhead utility lines, tree branches or other structures. **DO NOT** install near roof lines or other structures that could shed snow, ice or excessive run off onto your Canopy. **DO NOT** hang objects from the roof.

WARNING:

Risk of fire. **DO NOT** smoke or use open flame devices (including grills, fire pits, deep fryers, smokers or lanterns) in or around the canopy. **DO NOT** store flammable liquids (gasoline, kerosene, propane, etc.) in or around your Canopy. Do not expose Canopy to open fire or other flame source.



CAUTION: PROPER ANCHORING OF THE FRAME IS THE RESPONSIBILITY OF THE CONSUMER.

ShelterLogic® is not responsible for damage to the Canopy or the contents stored underneath. Any Canopy that is not anchored securely has the potential to fly away causing damage. **ShelterLogic®** cannot be responsible for any Canopy that blows away. **NOTE:** *Your Canopy's frame and cover can be quickly collapsed and stored prior to severe weather conditions.* If strong winds or severe weather is forecast in your area, we recommend collapsing the frame and removing the cover and storing the unit. Check with your insurance carrier for any damage as you would for any other outdoor structure or personal property claims.

CARE AND CLEANING:

Immediately remove any accumulated rain water, snow or ice from the roof structure with a broom, mop or other soft-sided instrument. **DO NOT** use bleach or harsh abrasive products to clean the fabric cover. Cover can be easily cleaned with mild soap and water. **DO NOT** use hard-edged tools or instruments like rakes or shovels. This could result in punctures to the cover.