

Use and Care Manual – Zero Gravity Recliner

Product Overview

This Zero Gravity Recliner is designed for versatile indoor and outdoor relaxation.

With an adjustable reclining angle, breathable fabric, and removable cushion, it's ideal for year-round use on patios, balconies, and more.

Before First Use

- Carefully unfold the chair on a flat surface.
 - Ensure all joints and locking mechanisms are secure.
 - Attach or remove the cushion and headrest according to your preference.
 - Test reclining angles before sitting fully to ensure stability.
-

Daily Use Instructions

- To recline: Gently lean back while gripping the armrests. The chair will adjust between 110° and 170°.
 - To return upright: Shift your weight forward slowly.
 - Do not jump or drop into the chair.
-

Cleaning and Maintenance

- Frame: Wipe with damp cloth and mild soap.
 - Cushion: Spot clean with water-based detergent. Air dry fully.
 - Fabric: Clean mesh surface with a soft brush or gentle hose.
 - Do not machine wash or tumble dry cushions or fabric.
 - Store indoors during prolonged rain or snow.
-

Storage Instructions

- Fold and store in a dry, covered place when not in use.
 - Avoid placing heavy objects on folded chair.
 - Keep away from direct flames or heat.
-

Safety Information

- Max weight capacity: 500 lbs (approx. 226 kg)
- For adult use only. Children should be supervised.
- Use only on flat, stable surfaces.
- Stop use if any part is damaged or missing.