


PARTS & ASSEMBLY

Your MICROWAVE OVEN is fully assembled.

Before using, remove all packing materials from inside the oven. Check the oven for any damage, such as misaligned or bent door, damaged door seals and sealing surfaces, broken or loose door hinges/latches and dents inside the oven or on the door. If there is any damage, DO NOT operate the oven. Return damaged items to the store where it was purchased. **IMPORTANT:** Do not remove or dispose of the Waveguide Cover inside the microwave.

PARTS

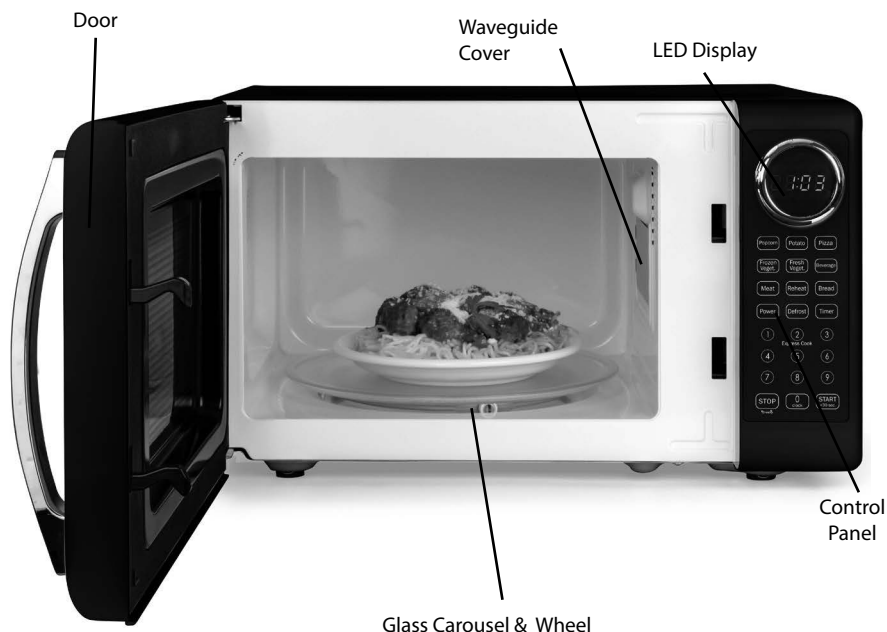

NOTE: popcorn bowl NOT included.