

Printed: 22.10.2018 | Doc-Nr: PUB / 5458887 / 000 / 00

English

Printed: 22.10.2018 | Doc-Nr: PUB / 5458887 / 000 / 00



1 Information about the documentation

1.1 About this documentation

- Read this documentation before initial operation or use. This is a prerequisite for safe, trouble-free handling and use of the product.
- Observe the safety instructions and warnings in this documentation and on the product.
- Always keep the operating instructions with the product and make sure that the operating instructions are with the product when it is given to other persons.

1.2 Explanation of symbols used

1.2.1 Warnings

Warnings alert persons to hazards that occur when handling or using the product. The following signal words are used:

DANGER

 Draws attention to imminent danger that will lead to serious personal injury or fatality.

A WARNING

WARNING !

 Draws attention to a potential threat of danger that can lead to serious injury or fatality.

△ CAUTION CAUTION !

 Draws attention to a potentially dangerous situation that could lead to slight personal injury or damage to the equipment or other property.

1.2.2 Symbols in the documentation

The following symbols are used in this document:

6	Read the operating instructions before use.
i	Instructions for use and other useful information
4	Dealing with recyclable materials
\overline{X}	Do not dispose of electric equipment and batteries as household waste

1.2.3 Symbols in the illustrations

The following symbols are used in illustrations:

HILLSTEIL

2	These numbers refer to the corresponding illustrations found at the beginning of these operating instructions
3	The numbering reflects the sequence of operations shown in the illustrations and may deviate from the steps described in the text
U	Item reference numbers are used in the overview illustrations and refer to the numbers used in the product overview section
۵!	This symbol is intended to draw special attention to certain points when handling the product.
đ	Wireless data transfer

1.3 Product-specific symbols

1.3.1 Symbols

The following symbols are used on the product:

 \bigotimes

Do not look into the light source.

1.4 Product information

products are designed for professional users and only trained, authorized personnel are permitted to operate, service and maintain the products. This personnel must be specifically informed about the possible hazards. The product and its ancillary equipment can present hazards if used incorrectly by untrained personnel or if used not in accordance with the intended use.

The type designation and serial number are printed on the rating plate.

 Write down the serial number in the table below. You will be required to state the product details when contacting Hilti Service or your local Hilti organization to inquire about the product.

Product information

Cordless lamp	SL 6-A22
Generation	01
Serial no.	

1.5 Declaration of conformity

We declare, on our sole responsibility, that the product described here complies with the applicable directives and standards. A copy of the declaration issued by the certification department can be found at the end of this documentation.

The technical documentation is filed here:

Hilti Entwicklungsgesellschaft mbH | Tool Certification | Hiltistrasse 6 | 86916 Kaufering, Germany

2 English



2 Safety

2.1 Use and care

- Use the product only when it is in perfect working order.
- Never tamper with or modify the product in any way.
- Keep the product out of reach of children.
- ► Do not use the product where there is a risk of fire or explosion.
- Use the product in a dry environment only.
- Replace the complete cordless lamp when the light source has reached the end of its life. The light source in this cordless lamp is not replaceable.
- Do not look into the beam and do not direct the beam toward other persons.
- Whenever you suspend the product by means of the scaffold hook, make sure that it is securely and safely positioned.

2.2 Personal safety

The user and the persons in the vicinity must wear suitable protective goggles, protective gloves and a hard hat while the product is in use!


2.3 Battery use and care

- Observe the special regulations and instructions applicable to the transport, storage and use of Li-ion batteries.
- ► Do not expose batteries to high temperatures, direct sunlight or fire.
- Do not disassemble, crush or incinerate batteries and do not subject them to temperatures over 80 °C.
- Do not use or charge batteries that have suffered mechanical impact, have been dropped from a height or show signs of damage. In this case, always contact your Hilti Service.
- If the battery is too hot to touch it may be defective. In this case, place the product in a non-flammable location, well away from flammable materials, where it can be kept under observation and allowed to cool down. In this case, always contact your Hilti Service.



Description 3

31 Product overview

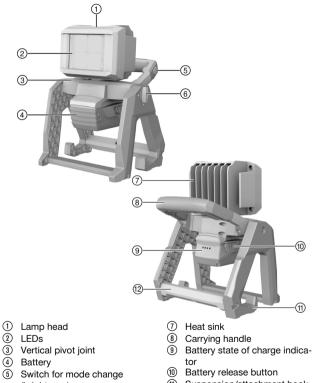

- Switch for mode change (briahtness)
- 6) Locking switch, vertical
- 1 Battery release button
- (1) Suspension/attachment hook
- 12 5/8" thread for tripod mount

3.2 Intended use

The product described is a cordless floodlight. It is for lighting up jobsites. The lamp head can be pivoted horizontally and vertically. Additionally, the light can be set on a flat surface, suspended from various construction

4 English

Printed: 22.10.2018 | Doc-Nr: PUB / 5458887 / 000 / 00



materials by means of the integral hook, or mounted on a tripod with 5/8" thread.

- ► Use only Hilti Li-ion batteries from the B 18 / B 22 series with this product.
- ► Use only the Hilti battery chargers of the C4/36 series to charge these batteries.

3.3 Charge state indicator

Lightly press (no more than until resistance is perceptible) either of the battery release buttons to check the charge state of the Li-ion battery.

Status	Meaning
4 LEDs light up.	 Charge state: 75 % to 100 %
3 LEDs light up.	 Charge state: 50 % to 75 %
2 LEDs light up.	 Charge state: 25 % to 50 %
1 LED lights up.	 Charge state: 10 % to 25 %
1 LED flashes.	 Charge state: < 10 %

If the LEDs of the charge state indicator flash, follow the instructions in the 'Troubleshooting' section.

3.4 Items supplied

1

Cordless lamp, operating instructions.

Other system products approved for use with this product can be found at your local **Hilti Store** or online at: **www.hilti.group** | USA: **www.hilti.com**

3.5 4-mode switch

Use the 4-mode switch to set brightness.

Status	Meaning
Press once	 The lamp shines at maximum brightness (100 %).
Press twice	 The lamp shines at reduced brightness (66 %).
Press three times	 The lamp shines at reduced brightness (33 %).
Press and hold down for several seconds	The lamp is off.

The brightness setting last selected is used again the next time the lamp is switched on.



4 Technical data

	SL 6-A22
Voltage	21.6 V
Brightness	3,000 lm
Weight	3.2 kg
	(7.1 lb)

4.1 Battery

Battery operating voltage	21.6 V
Ambient temperature for operation	−17 °C 60 °C
	(1 °F 140 °F)
Storage temperature	−20 °C 40 °C
	(−4 °F 104 °F)
Battery charging starting temperature	−10 °C 45 °C
	(14 °F 113 °F)

5 Operation

5.1 Preparations at the workplace

Risk of injury by inadvertent starting!

- ▶ Before inserting the battery, make sure that the product is switched off.
- Remove the battery before making any adjustments to the power tool or before changing accessories.

Observe the safety instructions and warnings in this documentation and on the product.

5.1.1 Inserting the battery

Risk of injury by short circuit or falling battery!

- Before inserting the battery, make sure that the contacts on the battery and the contacts on the product are free of foreign matter.
- Make sure that the battery always engages correctly.
- 1. Charge the battery fully before using it for the first time.
- 2. Push the battery into the battery holder until it engages with an audible click.
- 3. Check that the battery is seated securely.

5.1.2 Removing the battery

- 1. Press the release buttons on the battery.
- 2. Pull the battery out of its holder in the device.
- 6 English

Printed: 22.10.2018 | Doc-Nr: PUB / 5458887 / 000 / 00



5.1.3 Charging the battery

- 1. Before charging the battery, read the operating instructions for the charger.
- Make sure that the contacts on the battery and the contacts on the charger are clean and dry.
- 3. Use an approved charger to charge the battery.

5.1.4 Switching on

Whenever you engage the product on the universal hook or mount it on a tripod, make sure that the product is secure.



Select a mode by pressing the 4-mode switch.

5.1.5 Turning the lamp head

Risk of damage to the eyes (the retina). Looking directly into the lamp presents a risk of damage to the eyes (the retina).

- Do not direct the lamp at yourself or at anyone else.
- Do not, under any circumstances, look into the lamp.

There is a risk of crushing fingers in the joint area When the lamp head is being turned, there is a risk of the fingers being caught between the support leg and the casing.

Wear protective gloves.

The multi-position hinge and the lamp head can be turned in either direction along the axis. Do not attempt to force the lamp head past the end stops.





- 1. Unlock the multi-position hinge with the locking switch to adjust the lamp vertically.
- 2. Then turn the multi-position hinge in the desired direction.
- 3. Lock the multi-position hinge with the locking switch.
- 4. Turn the lamp head to the desired position to adjust the lamp horizontally.

6 Care and maintenance

🛆 WARNING

Risk of injury with battery inserted !

 Always remove the battery before carrying out care and maintenance tasks!

Care and maintenance of the tool

- · Carefully remove stubborn dirt.
- Clean the air vents carefully with a dry brush.
- Use only a slightly damp cloth to clean the casing. Do not use cleaning agents containing silicone as these can attack the plastic parts.

Care of the Li-ion batteries

- · Keep the battery free from oil and grease.
- Use only a slightly damp cloth to clean the casing. Do not use cleaning agents containing silicone as these may attack the plastic parts.
- · Avoid ingress of moisture.

Maintenance

- Check all visible parts and controls for signs of damage at regular intervals and make sure that they all function correctly.
- Do not operate the product if signs of damage are found or if parts malfunction. Have it repaired immediately by **Hilti** Service.
- After cleaning and maintenance, fit all guards or protective devices and check that they function correctly.

8 English

To help ensure safe and reliable operation, use only genuine Hilti spare parts and consumables. Spare parts, consumables and accessories approved by Hilti for use with the product can be found at your local **Hilti Store** or online at: www.hilti.group | USA: www.hilti.com

6.1 Light source

The light source in this lamp is not replaceable! When the light source reaches the end of its service life, the entire lamp has to be replaced.

7 Transport and storage of cordless tools

Transport

Accidental starting during transport !

- Always transport your products with the batteries removed!
- Remove the battery.
- Transport the tool and batteries individually packaged.
- Never transport batteries in bulk form (loose, unprotected).
- Check the tool and batteries for damage before use after long periods of transport.

Storage

Accidental damage caused by defective or leaking batteries !

- Always store your products with the batteries removed!
- ▶ Store the tool and batteries in a place that is as cool and dry as possible.
- Never store batteries in direct sunlight, on heating units or behind a window pane.
- Store the tool and batteries in a place where they cannot be accessed by children or unauthorized persons.
- Check the tool and batteries for damage before use after long periods of storage.

8 Troubleshooting

If the trouble you are experiencing is not listed in this table or you are unable to remedy the problem by yourself, please contact **Hilti** Service.

8.1 Troubleshooting

If the trouble you are experiencing is not listed in this table or you are unable to remedy the problem by yourself, contact **Hilti** Service.



Trouble or fault	Possible cause	Action to be taken
The battery does not engage with an audible double click.	The retaining lugs on the battery are dirty.	 Clean the retaining lugs and push the battery in until it engages.
1 LED flashes. The device does not work.	The battery is discharged.	 Change the battery and charge the empty battery.
	The battery is too hot or too cold.	 Allow the battery to cool down or warm up slowly to room temperature.

9 Disposal

Most of the materials from which **Hilti** tools and appliances are manufactured can be recycled. The materials must be correctly separated before they can be recycled. In many countries, your old tools, machines or appliances can be returned to **Hilti** for recycling. Ask **Hilti** Service or your Hilti representative for further information.

Battery disposal

Improper disposal of batteries can result in health hazards from leaking gases or fluids.

- DO NOT send batteries through the mail!
- Cover the terminals with a non-conductive material (such as electrical tape) to prevent short circuiting.
- Dispose of your battery out of the reach of children.
- Dispose of the battery at your Hilti Store, or consult your local governmental garbage disposal or public health and safety resources for disposal instructions.



 Do not dispose of power tools, electronic equipment or batteries as household waste!

10 Manufacturer's warranty

 Please contact your local Hilti representative if you have questions about the warranty conditions.

10 English





Hilti Corporation LI-9494 Schaan Tel.:+423 234 21 11 Fax:+423 234 29 65 www.hilti.com

