

Troubleshooting

Problem	Possible Cause	Solution
The light will not illuminate.	The power is off.	<input type="checkbox"/> Make sure the power supply is on.
	The switch is off.	<input type="checkbox"/> Make sure the switch is on.
	There is poor connection between the cable and outlet.	<input type="checkbox"/> Make sure the connection is OK.
The extension lock is difficult to lock.	The screw beside the extension lock is loose.	<input type="checkbox"/> Fix the screw firmly by using a Phillips screwdriver (not included).