 



# TV Cabinet


Plan (1)

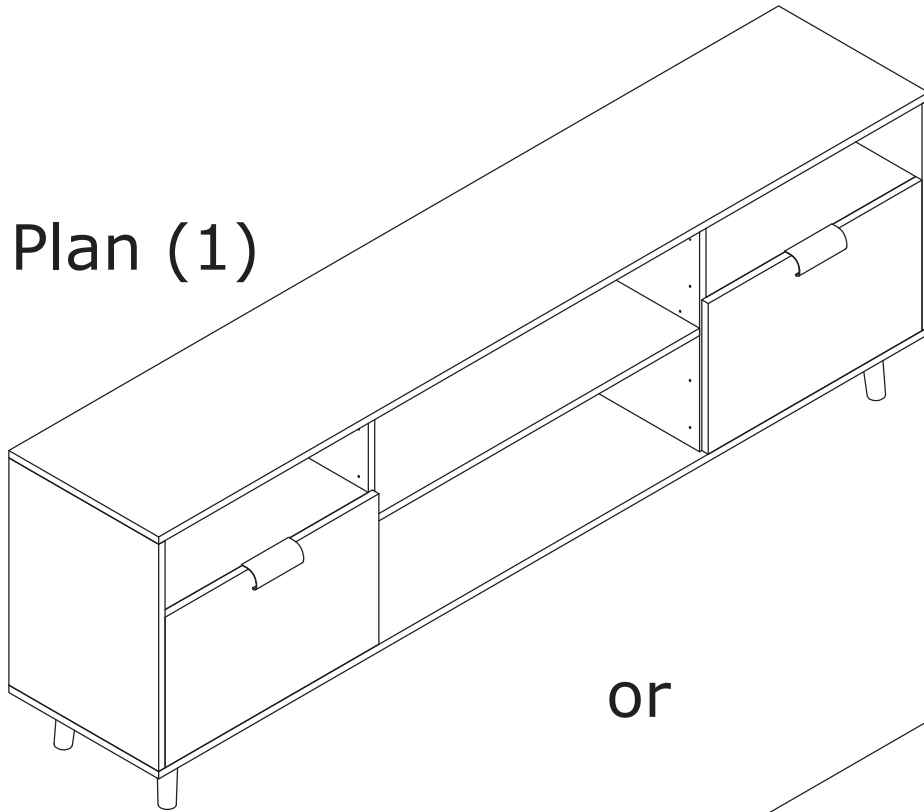

or

 
 
Plan (2)

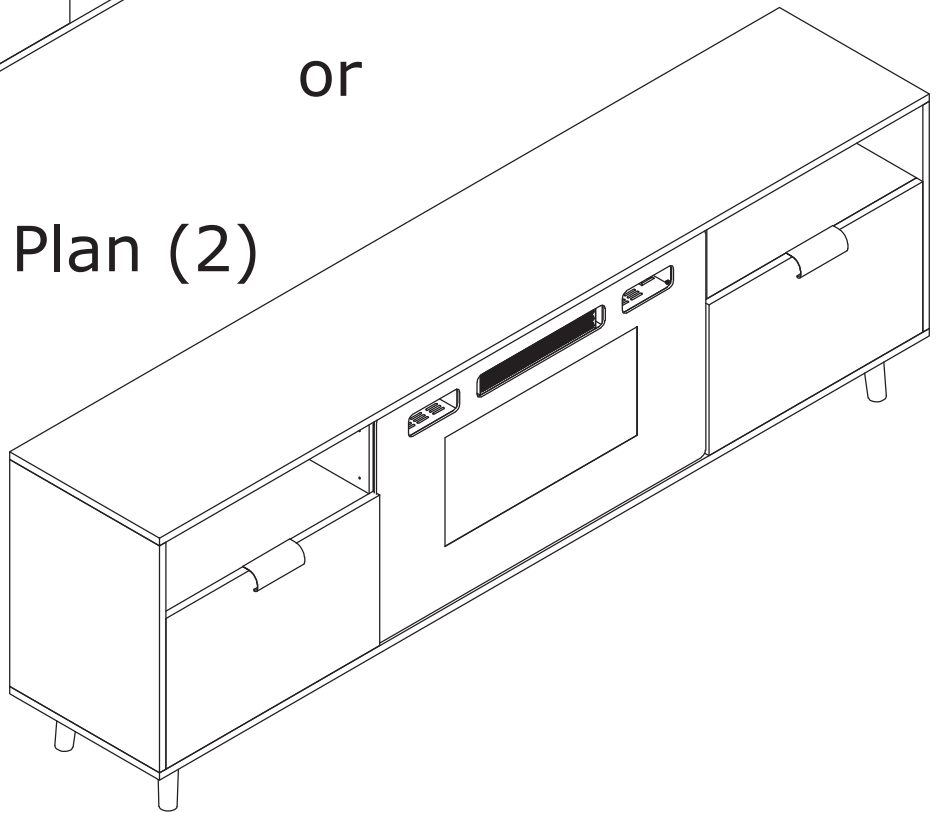

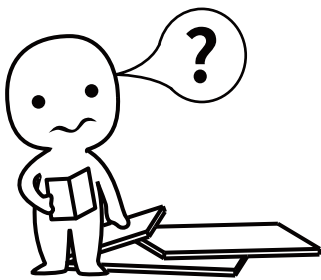


### **IMPORTANT INFORMATION!**

  please read the entire manual before starting to assemble and/or using this product. follow the manual thoroughly and keep it for further reference.

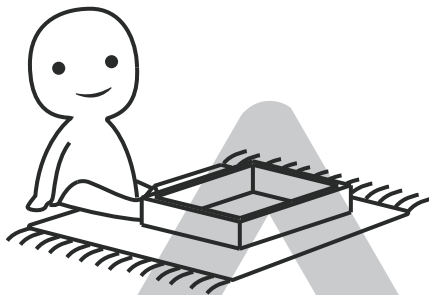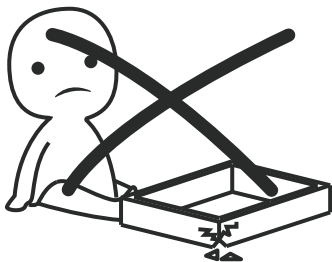




### **AVOID SCRATCHES!**

 In order to avoid scratching this furniture should be assembled on a soft layer-could be a rug.

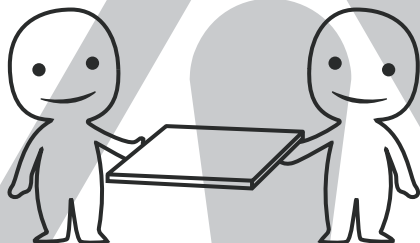

### **IMPROVE EFFICIENCY !**

   Try to find a partner to install with you, which can speed up the installation efficiency and shorten the time.

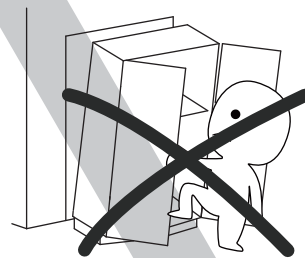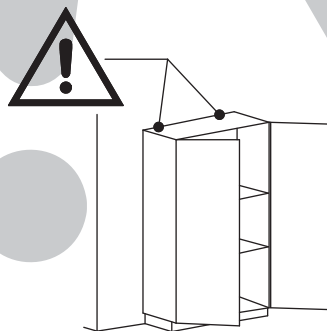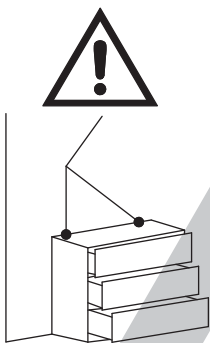

### **ANTI-TOPPLE WARNING !**

 
Overturned furniture can cause serious or fatal crush injuries. To prevent tipping over, be sure to use the wall attachment, if not included with this product. Please purchase the wall attachment that fit your wall. If unsure, seek professional advice. Please read and follow each step of the instructions carefully.

### **IMPORTANT !**



It is important that any product which is assembled using any kind of screw is re-tightened 2 weeks after assembly, and once every 3 months - in order to assure stability through-out the lifespan of the product.

For regular maintenance and cleaning of the product, for the frame, please use a rag dipped in neutral detergent to fully wipe it, and then dry it with a clean rag. For glass materials, wipe with a rag dampened with water glass cleaner, and then dry with a dry rag.

Do not use an electric screwdriver, and do not use too much force when installing, because the board is easy to break.

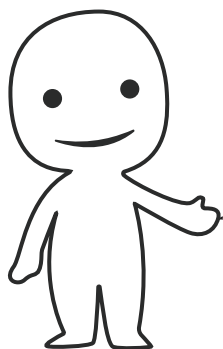


Please prepare the following tools

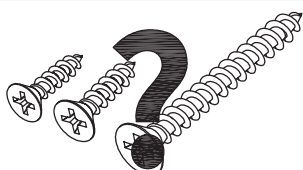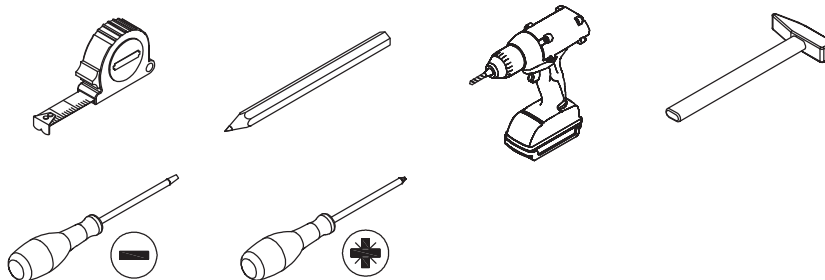  


When installing, please carefully confirm whether each screw corresponds to the manual, accessories with similar shapes can be distinguished by size

 Ax16(+1)




Ø6x35mm

 Bx16(+1)




Ø15x10mm

 Cx24(+1)



Ø6x30mm

 Dx10(+1)

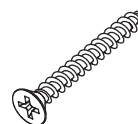


Ø4x35mm

Ex10(+1)




Ø3.5x10mm

 
Fx2

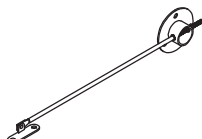

Gx4

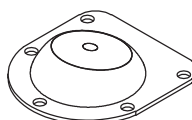 


Hx20(+1)

 

Ø3x16mm

 Jx4

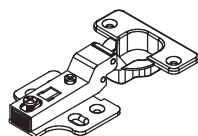

Kx24(+1)



Ø3x12mm


Lx4



Mx2




 Nx8

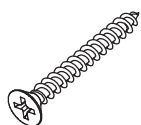


Ø4x35mm

 Px12



Qx12

 


Ø3x16mm

Rx4




Ø3.5x10mm

 Sx4

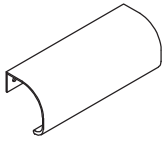


Tx6

 

Ø3x12mm

 Ux2



Ø6x30mm

Vx2




Wx2




Ø4x14mm

 Yx4







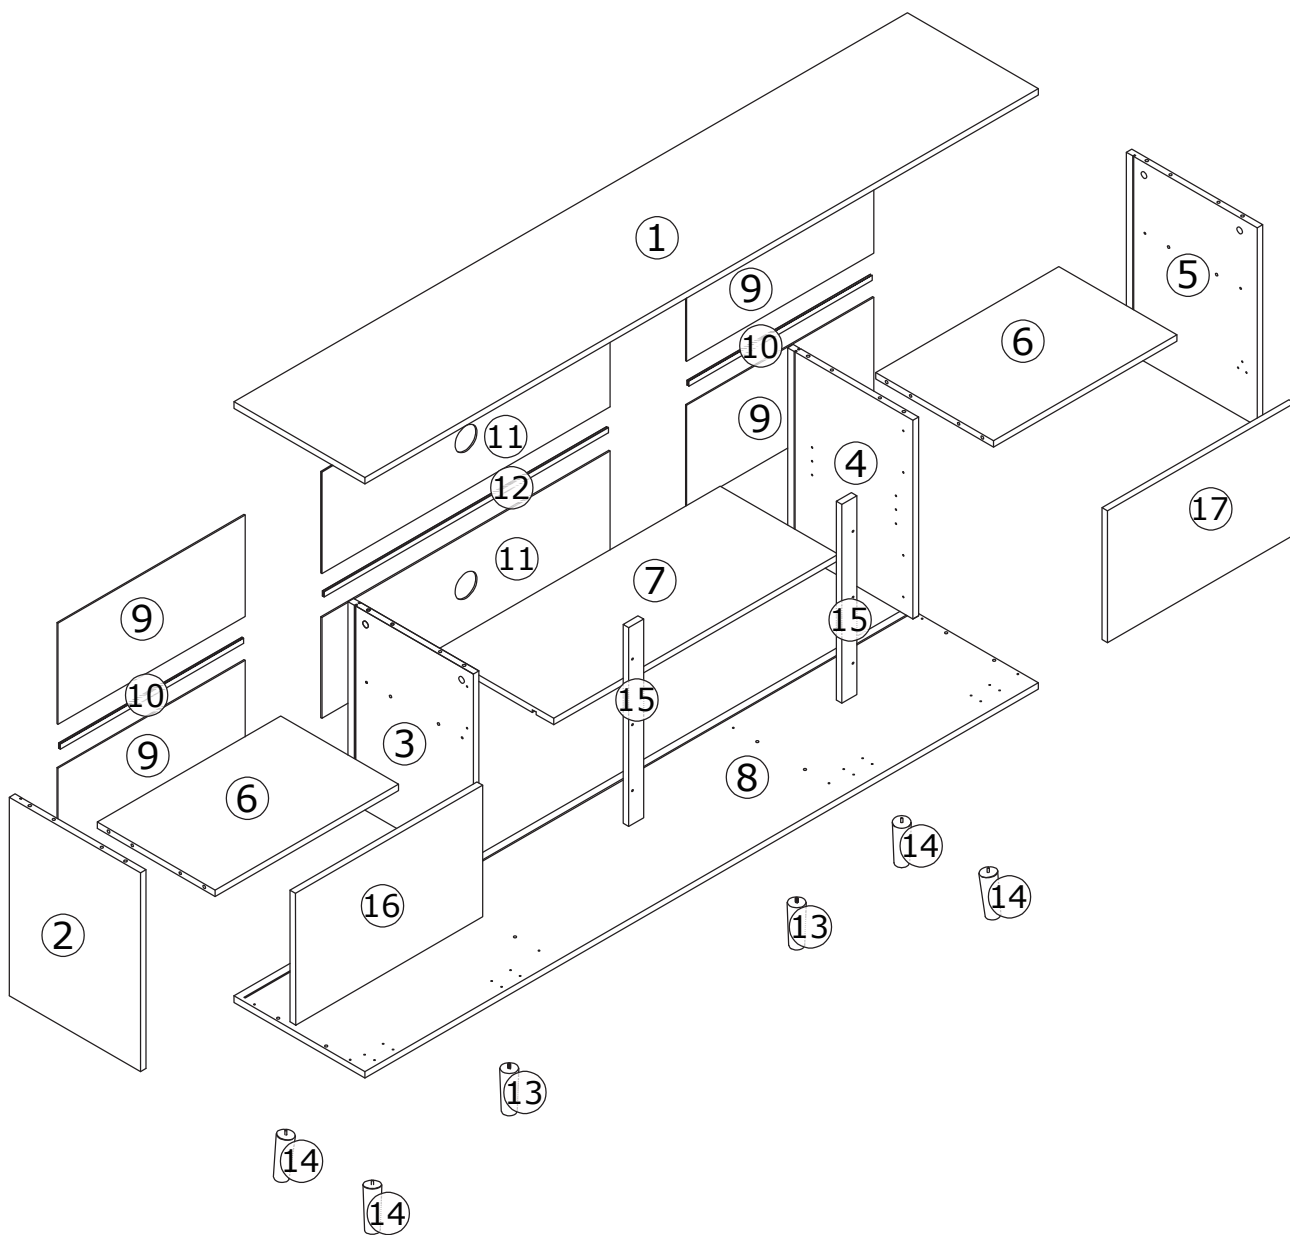

1


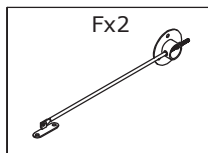 


Separat part(F) into 3 parts as shown.

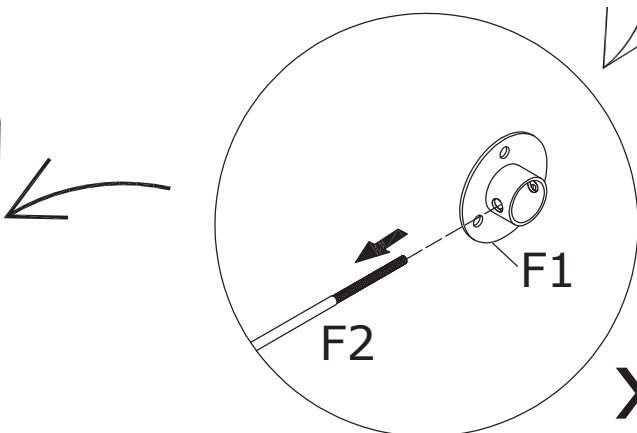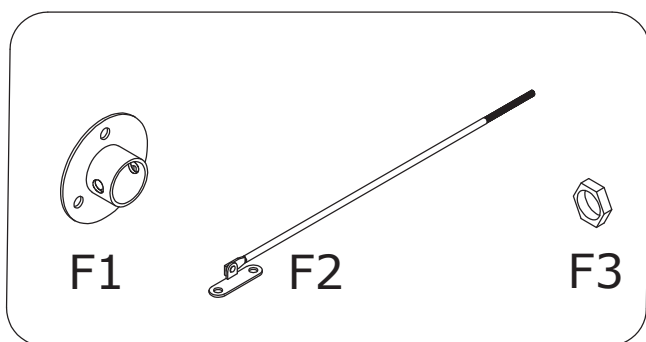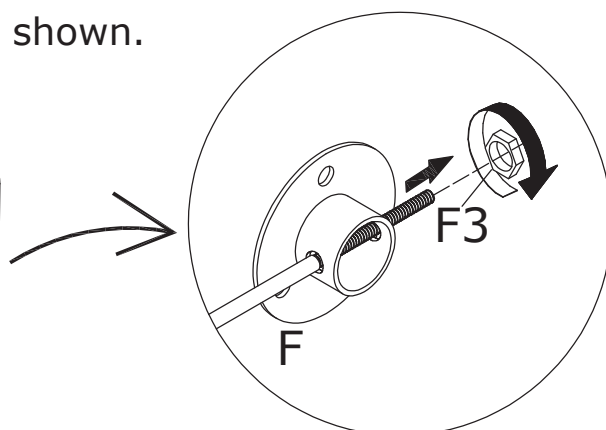   
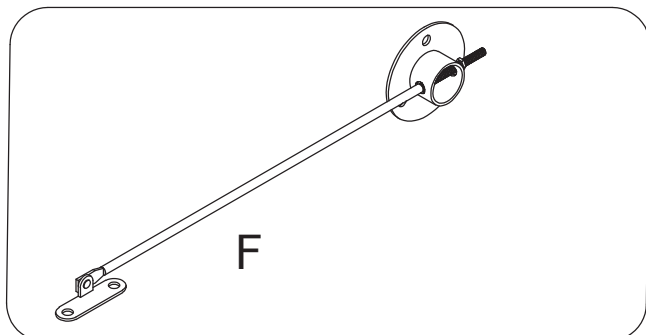 


x2

  
2

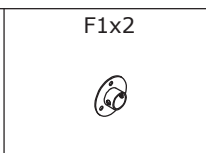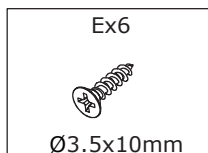

 
 
Fix part(F1) to No.2 and No.5 with screw(E) as shown.

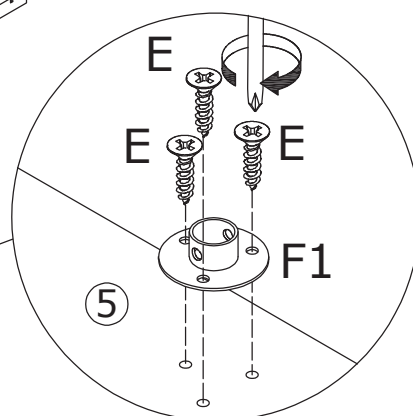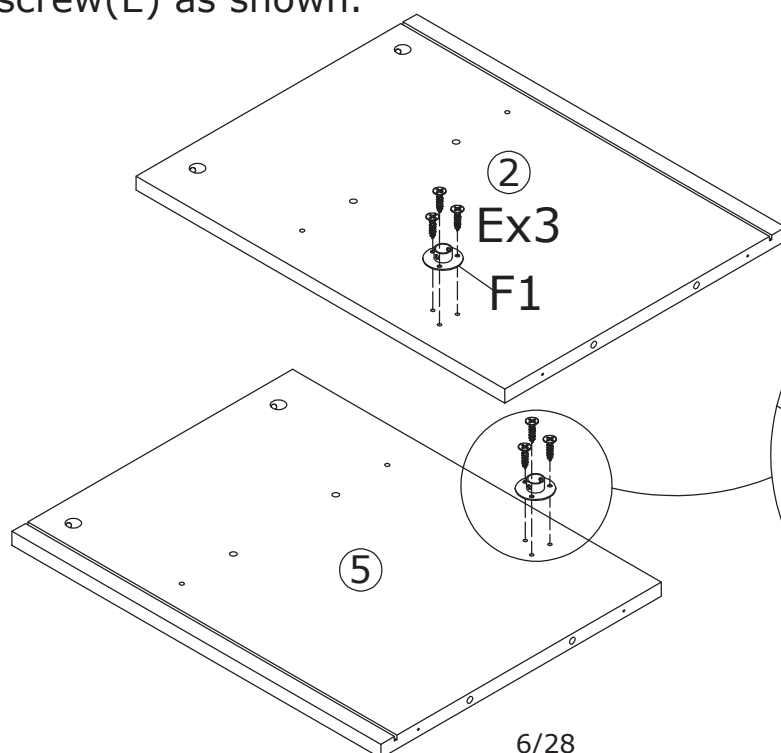

# 3

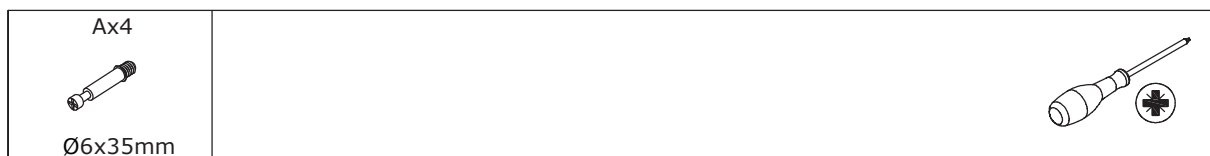 

 
 
Insert quickfit screw(A) into No.2 and No.3 plate with a screwdriver as shown.

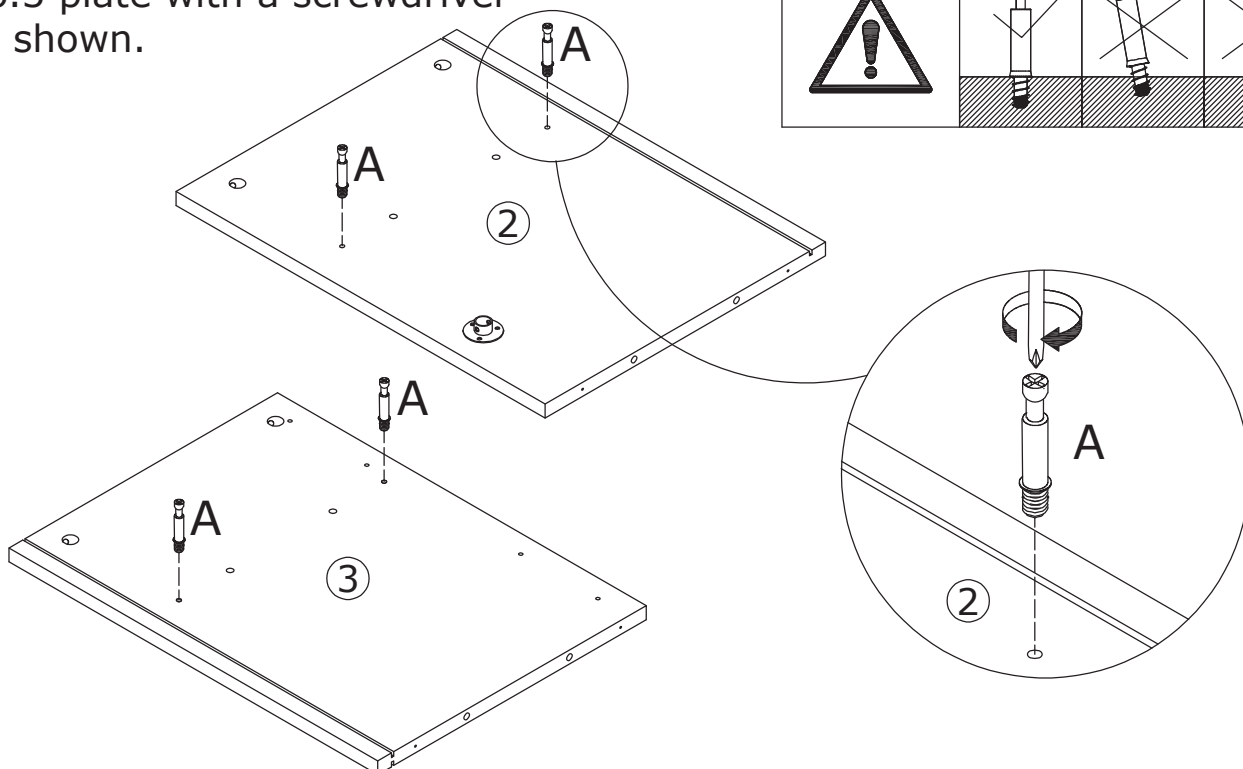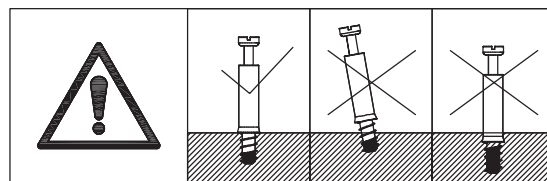


# 4



 
 
Connect No.6 with No.2 plate using wooden dowel(C) and turn cam lock(B) clockwise to tighten as shown.

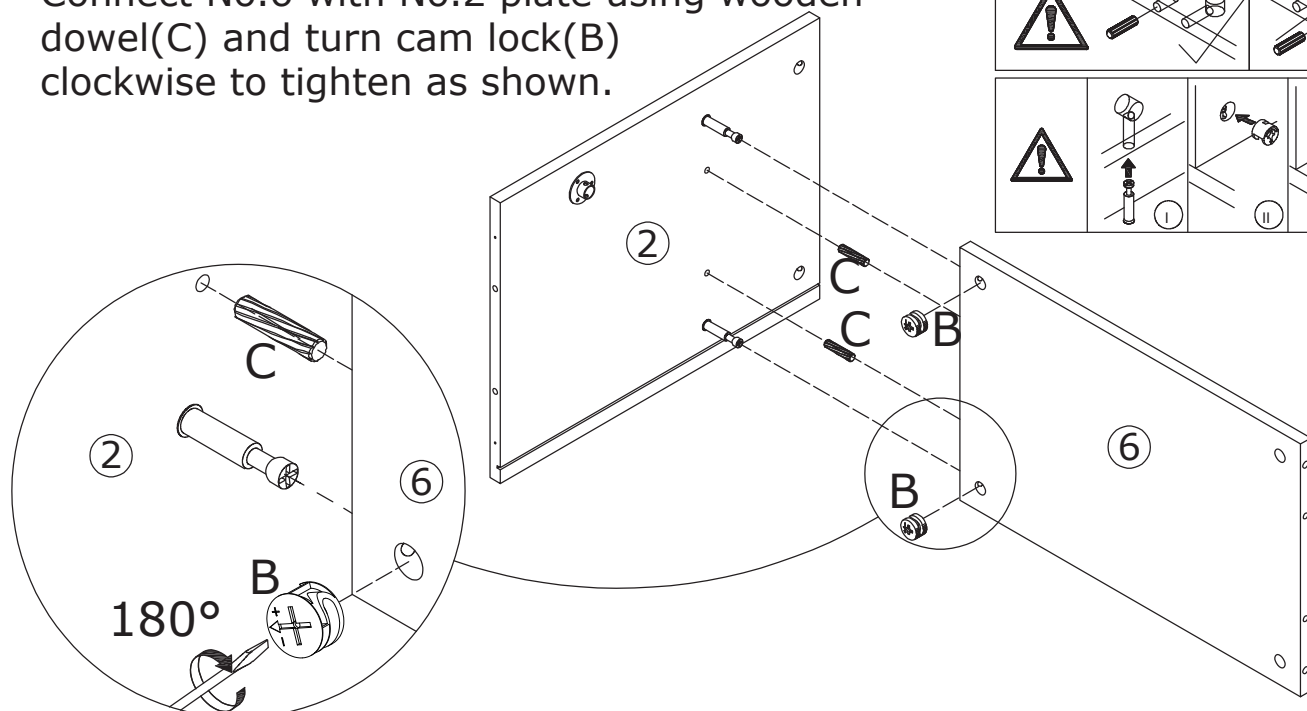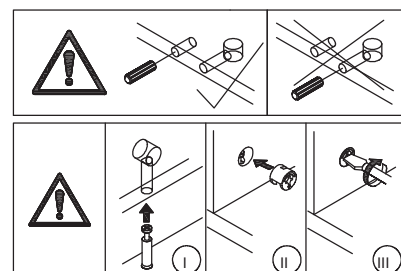


# 5

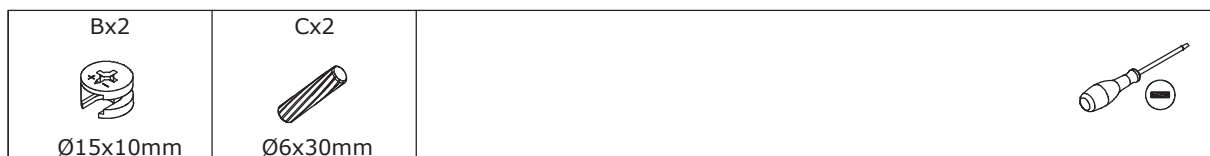 

 
 
Connect No.3 plate with No.6 using wooden dowel(C) and turn cam lock(B) clockwise to tighten as shown.

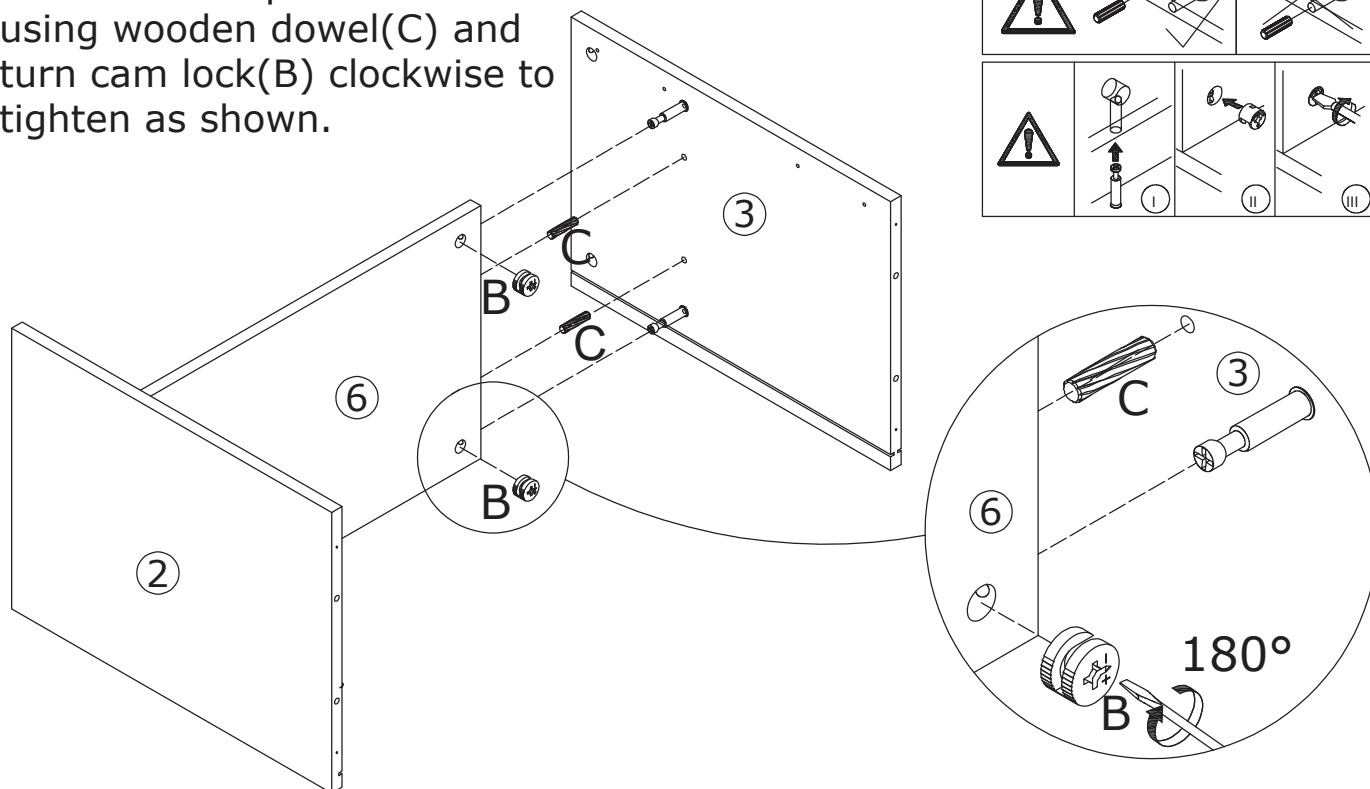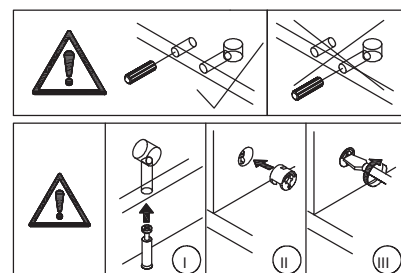

# 6

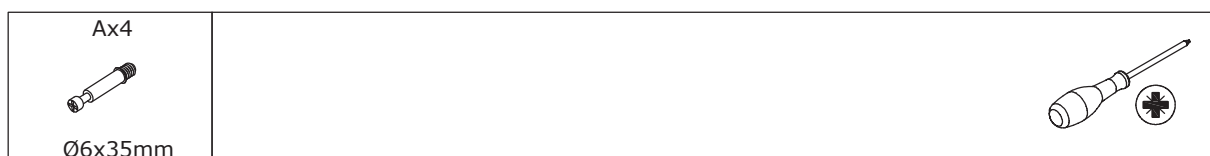 

  Insert quickfit screw(A) into No.4 and No.5 plate with a screwdriver as shown.


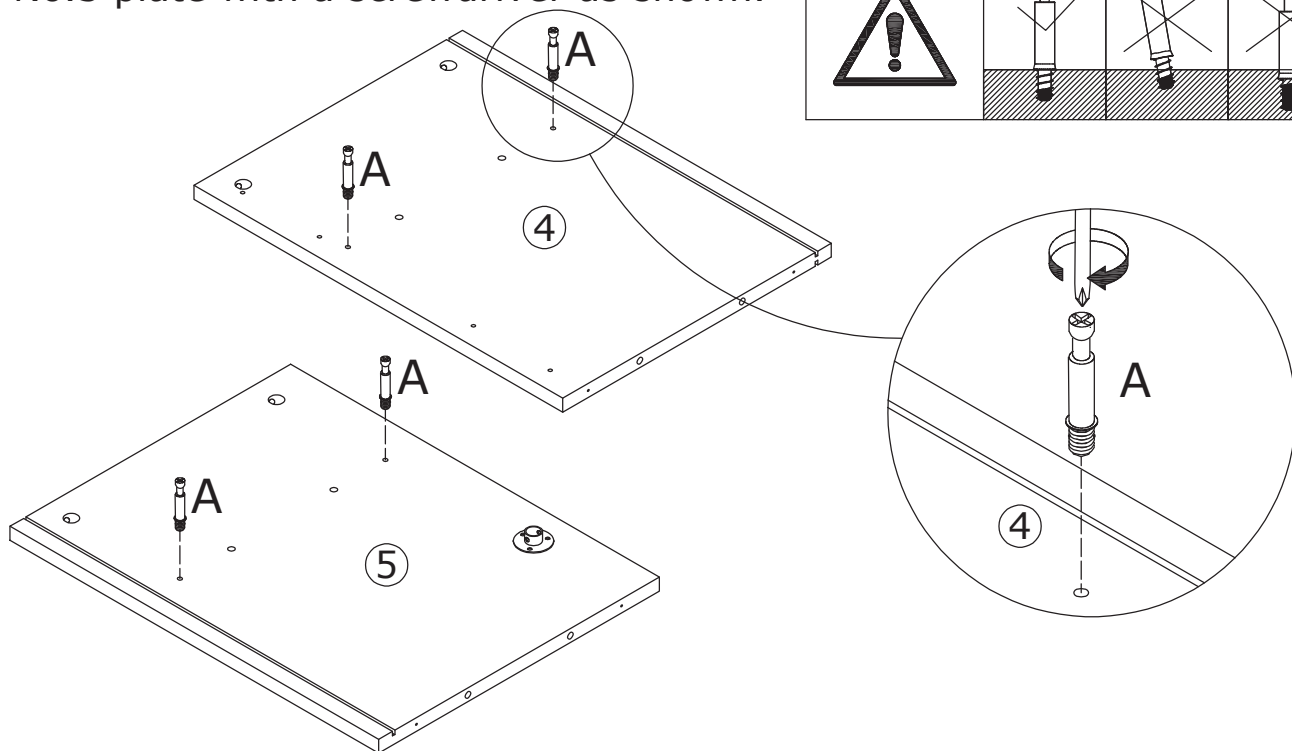
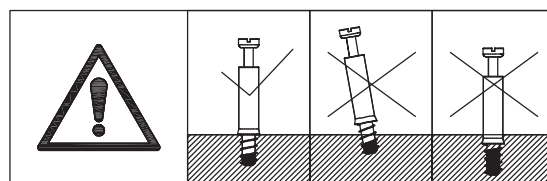




# 7

Bx2  Ø15x10mm	Cx2  Ø6x30mm	
--	---	---

 
 
 
Connect No.6 with No.5 plate using wooden dowel(C) and turn cam lock(B) clockwise to tighten as shown.

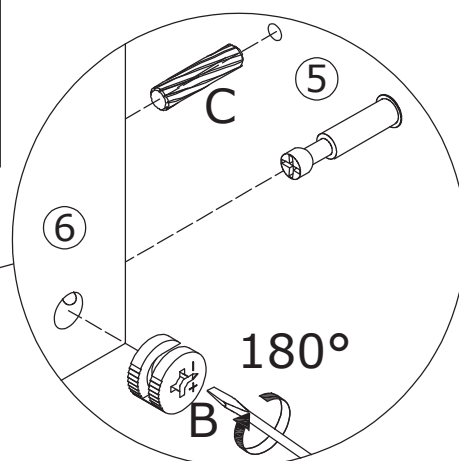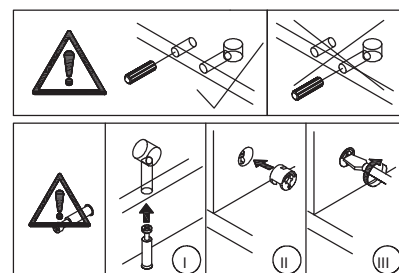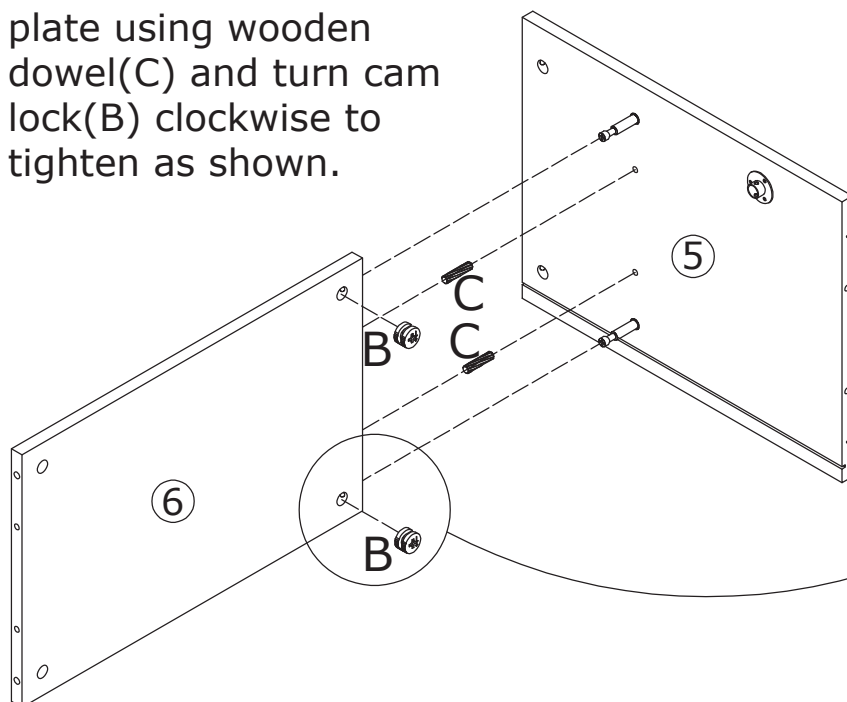


# 8

Bx2  Ø15x10mm	Cx2  Ø6x30mm	
--	---	---

   
Connect No.4 with No.6 using wooden dowel(C) and turn cam lock(B) clockwise to tighten as shown.

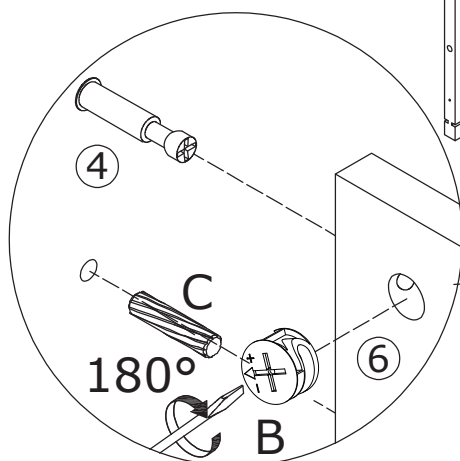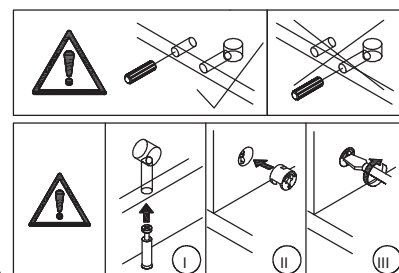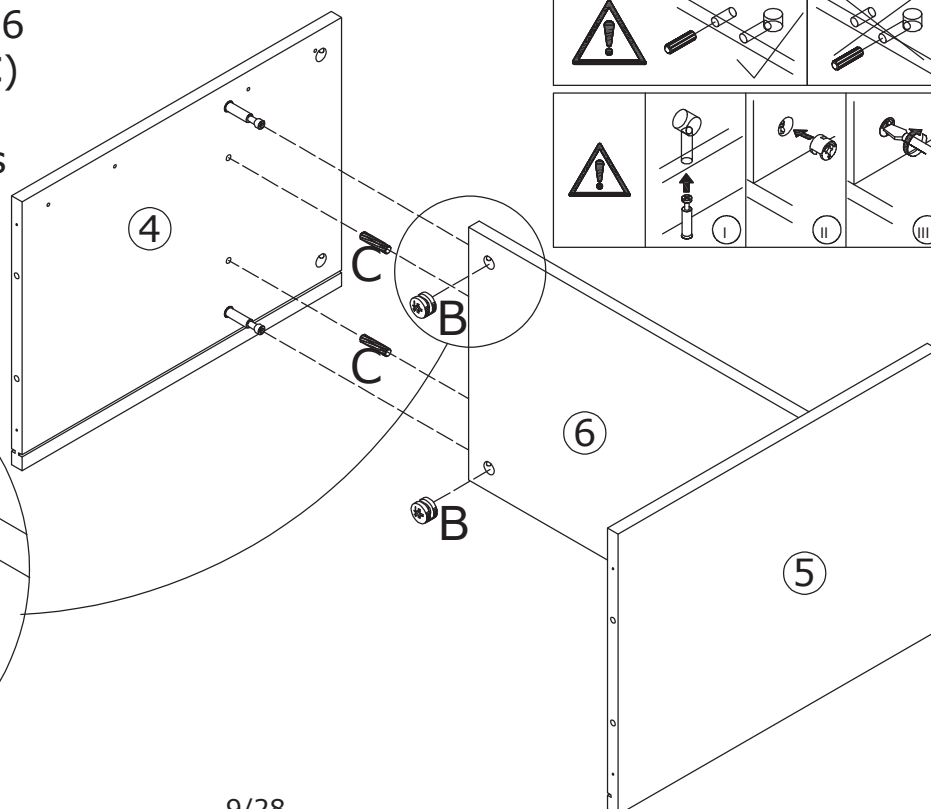

9

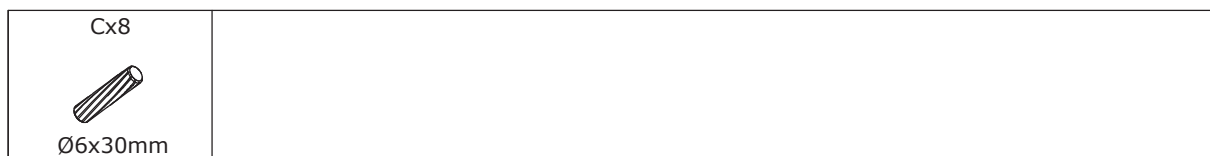 

 
Insert wooden tenon(C) into No.2, No.3, No.4 and No.5 plate as shown.

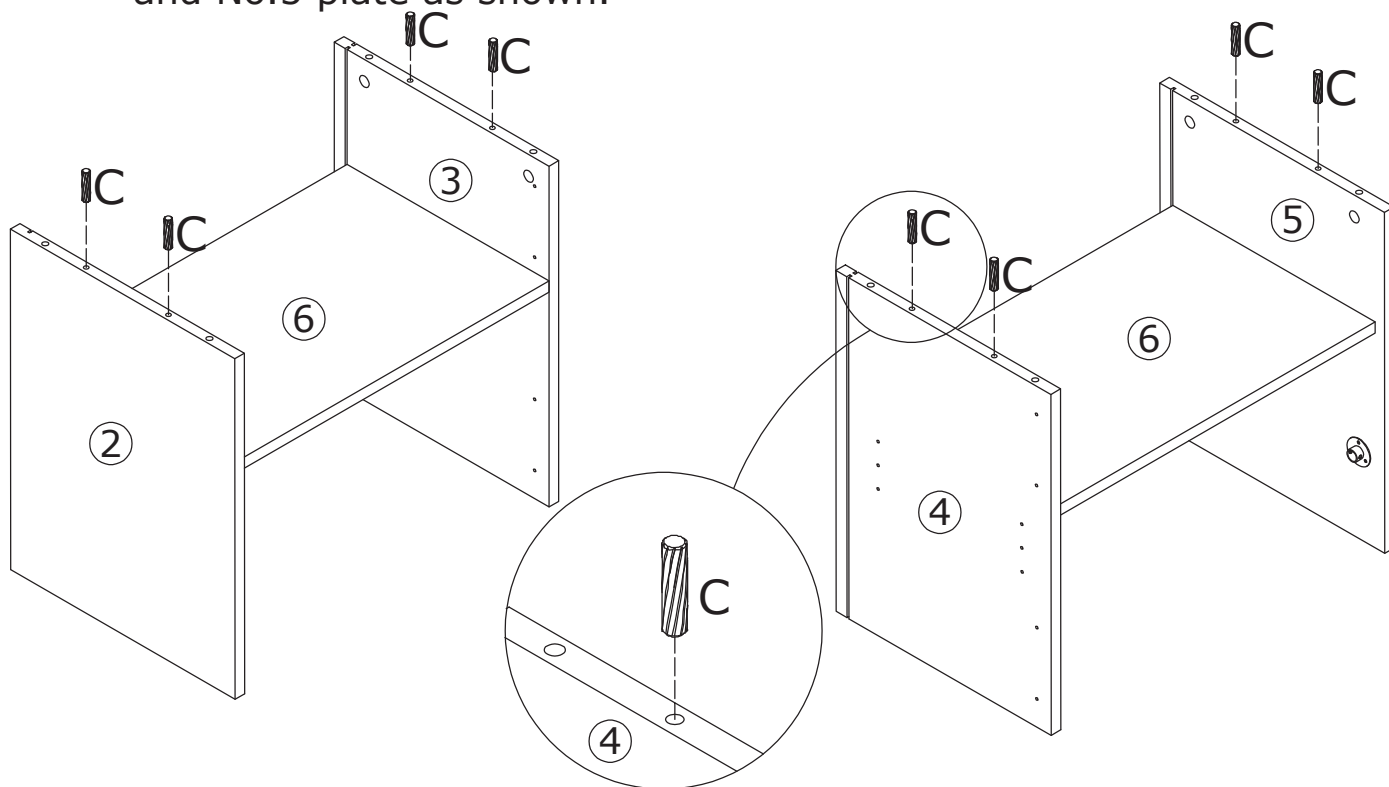

10



 Insert quickfit screw(A) into corresponding holes in No.1 plate with a screwdriver as shown.

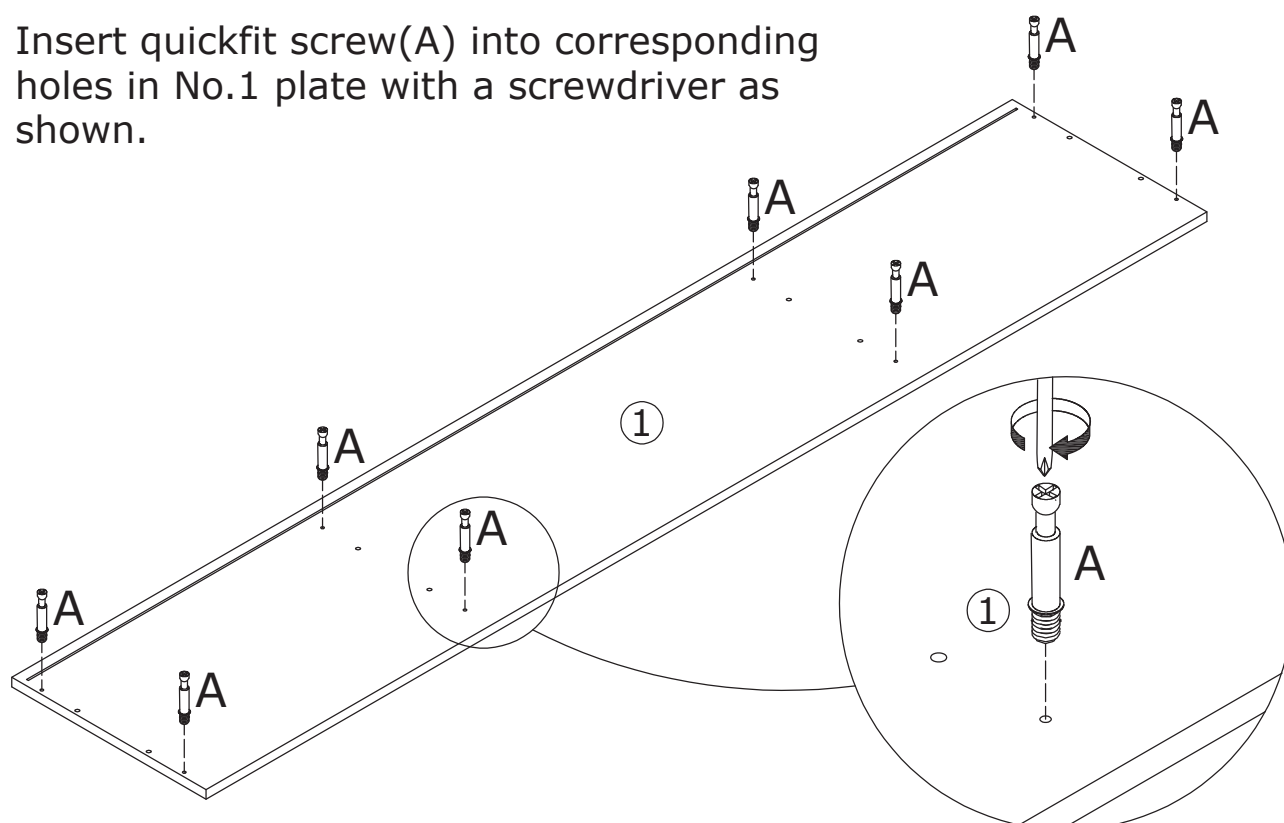

# 11


Bx8



Ø15x10mm



 
Attach the two components to No.1 plate,  
turn cam lock(B) clockwise to tighten as  
shown.

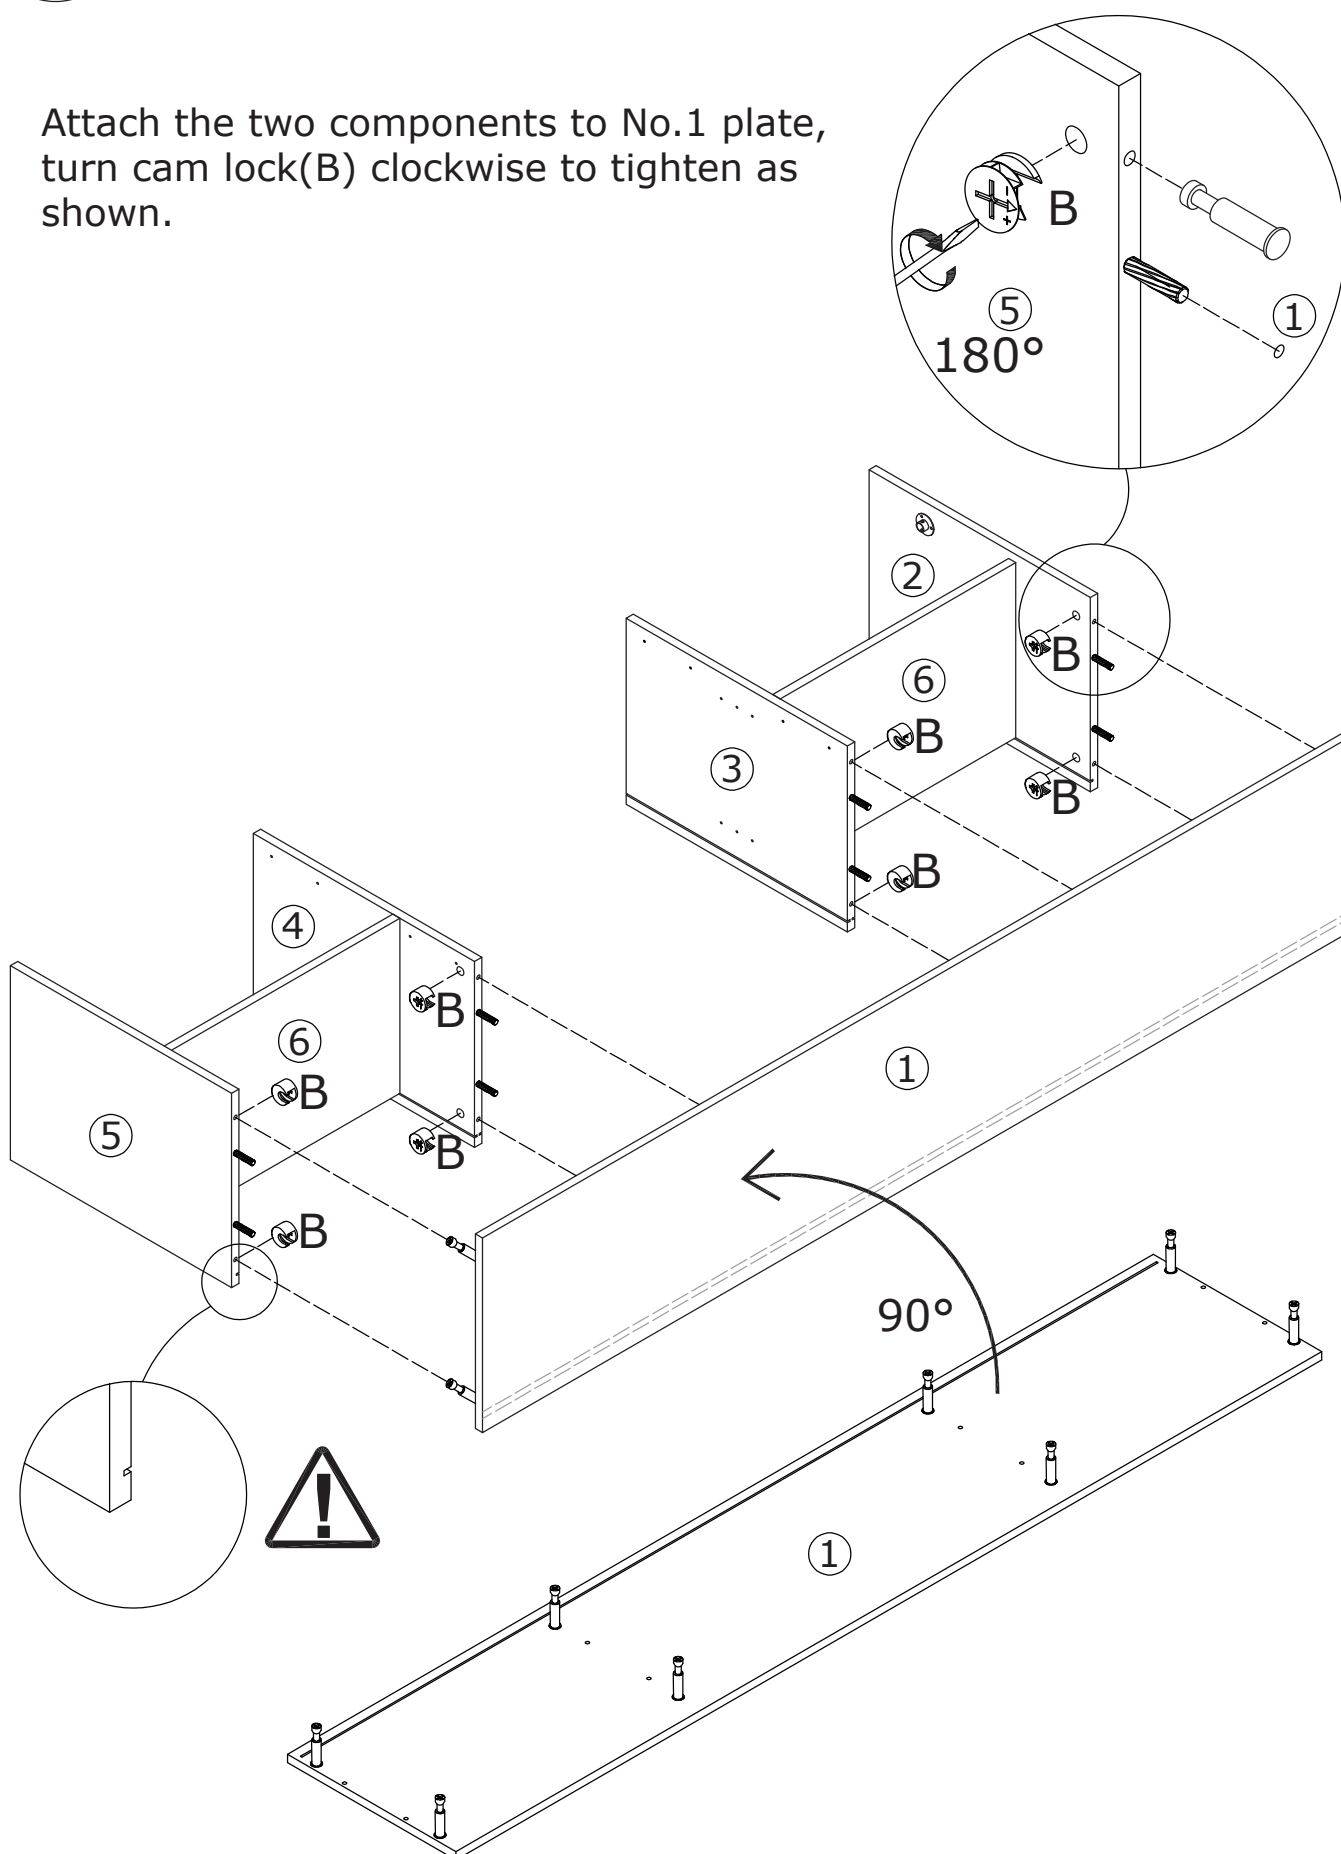

# 12

Please combine two No.9 plate with No.10;  
two No.11 plate with No.12 at first.

 Slide the back plate into available slots as  
shown.

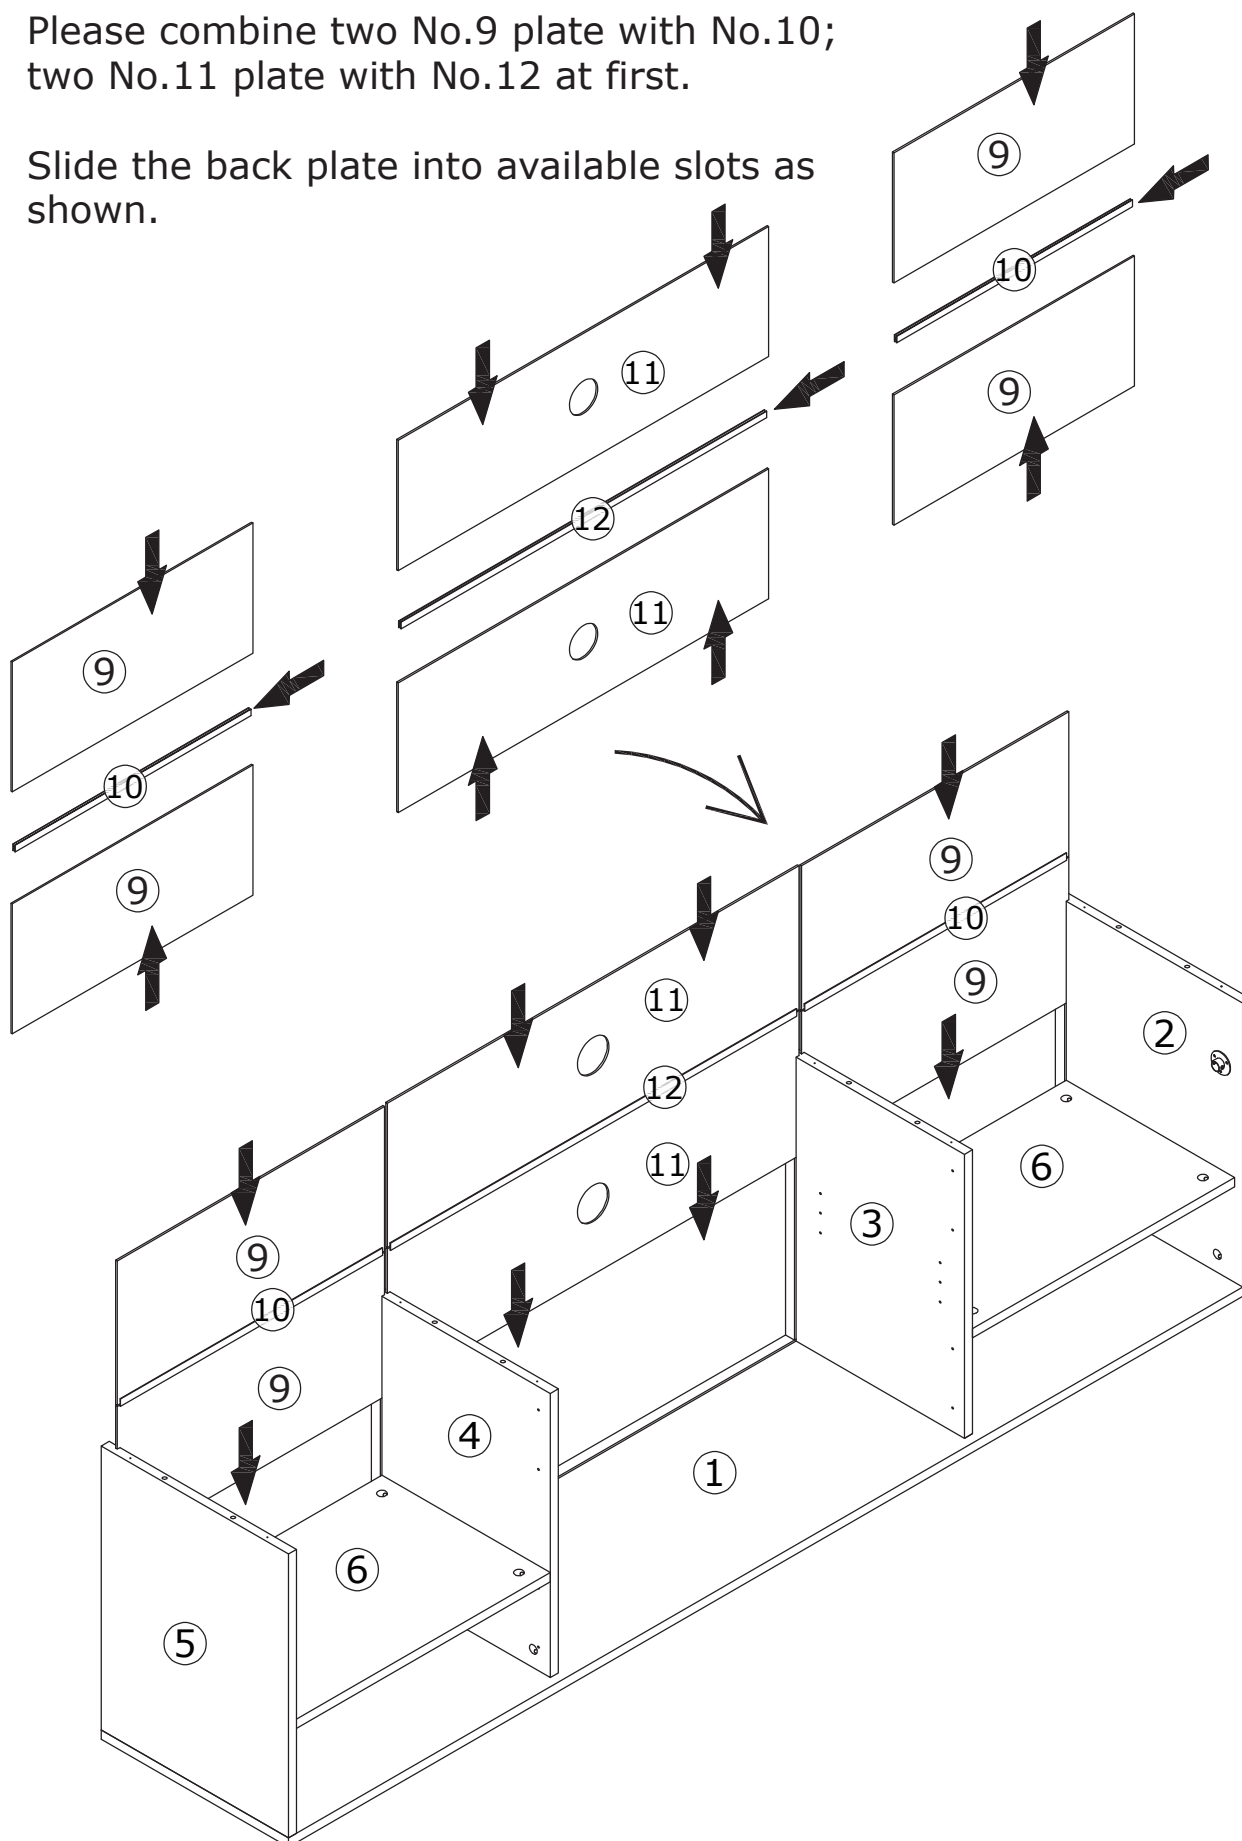

# 13

Cx8



Ø6x30mm


Dx8



Ø4x35mm




 Cover No.8 plate to the component using wooden dowel(C) and fix with screw(D) as shown.

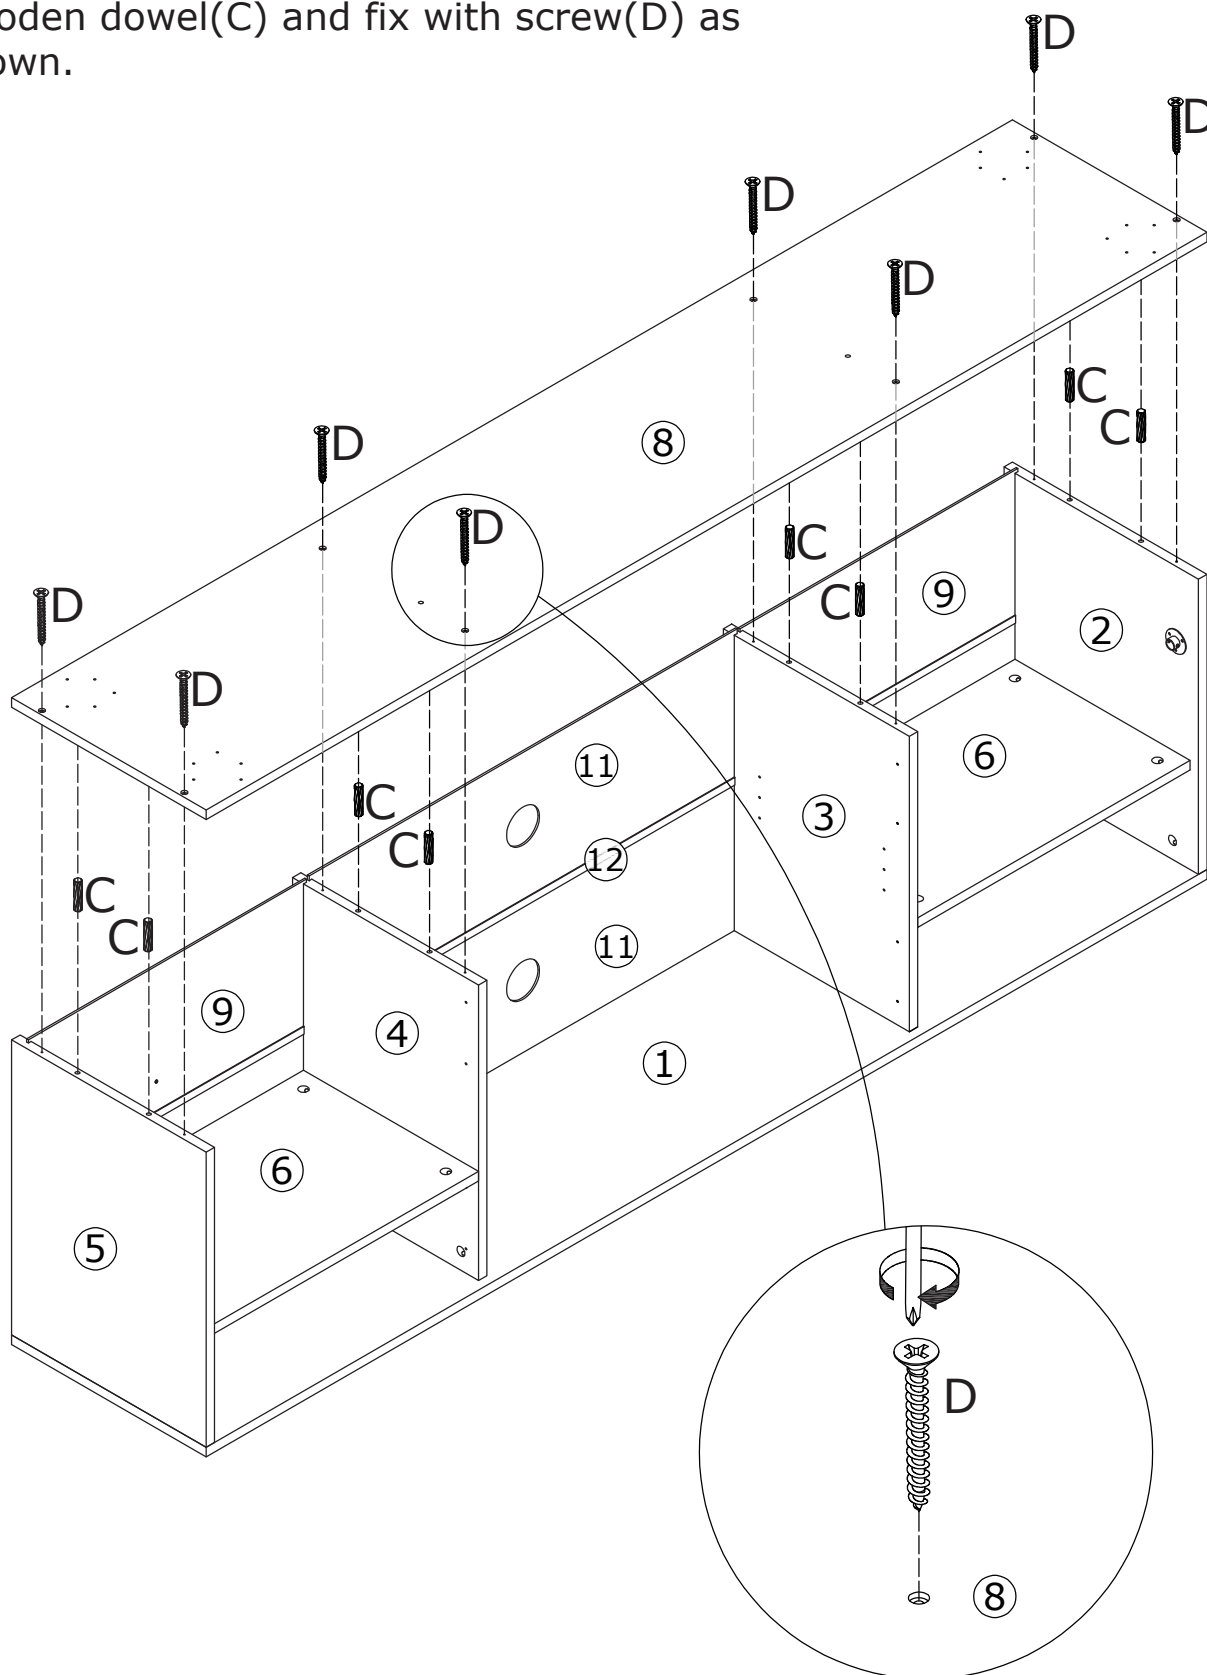

# 14

 
Gx4




Hx20



 Ø3x16mm



 
Fix iron sheet(G) to No.8 plate with screw(H) as shown.

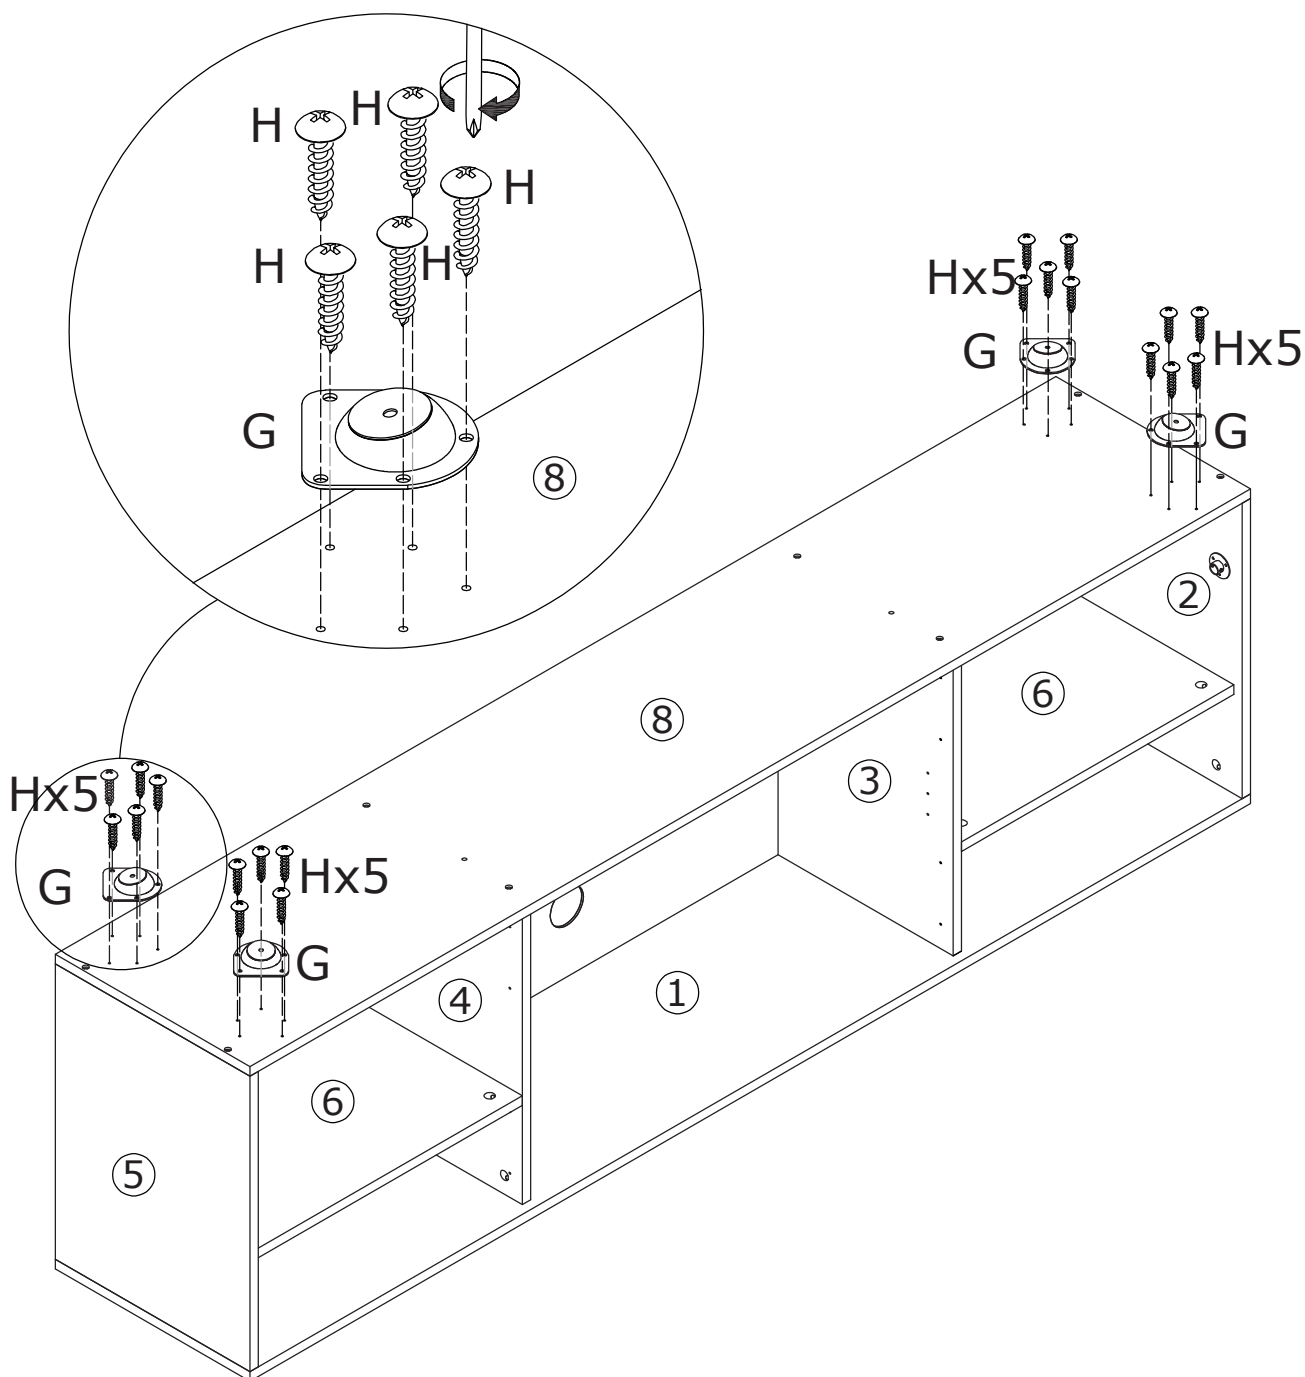

# 15

Rotate No.14 legs into the iron sheet part.

 Rotate No.13 leg support into No.8 plate as shown.

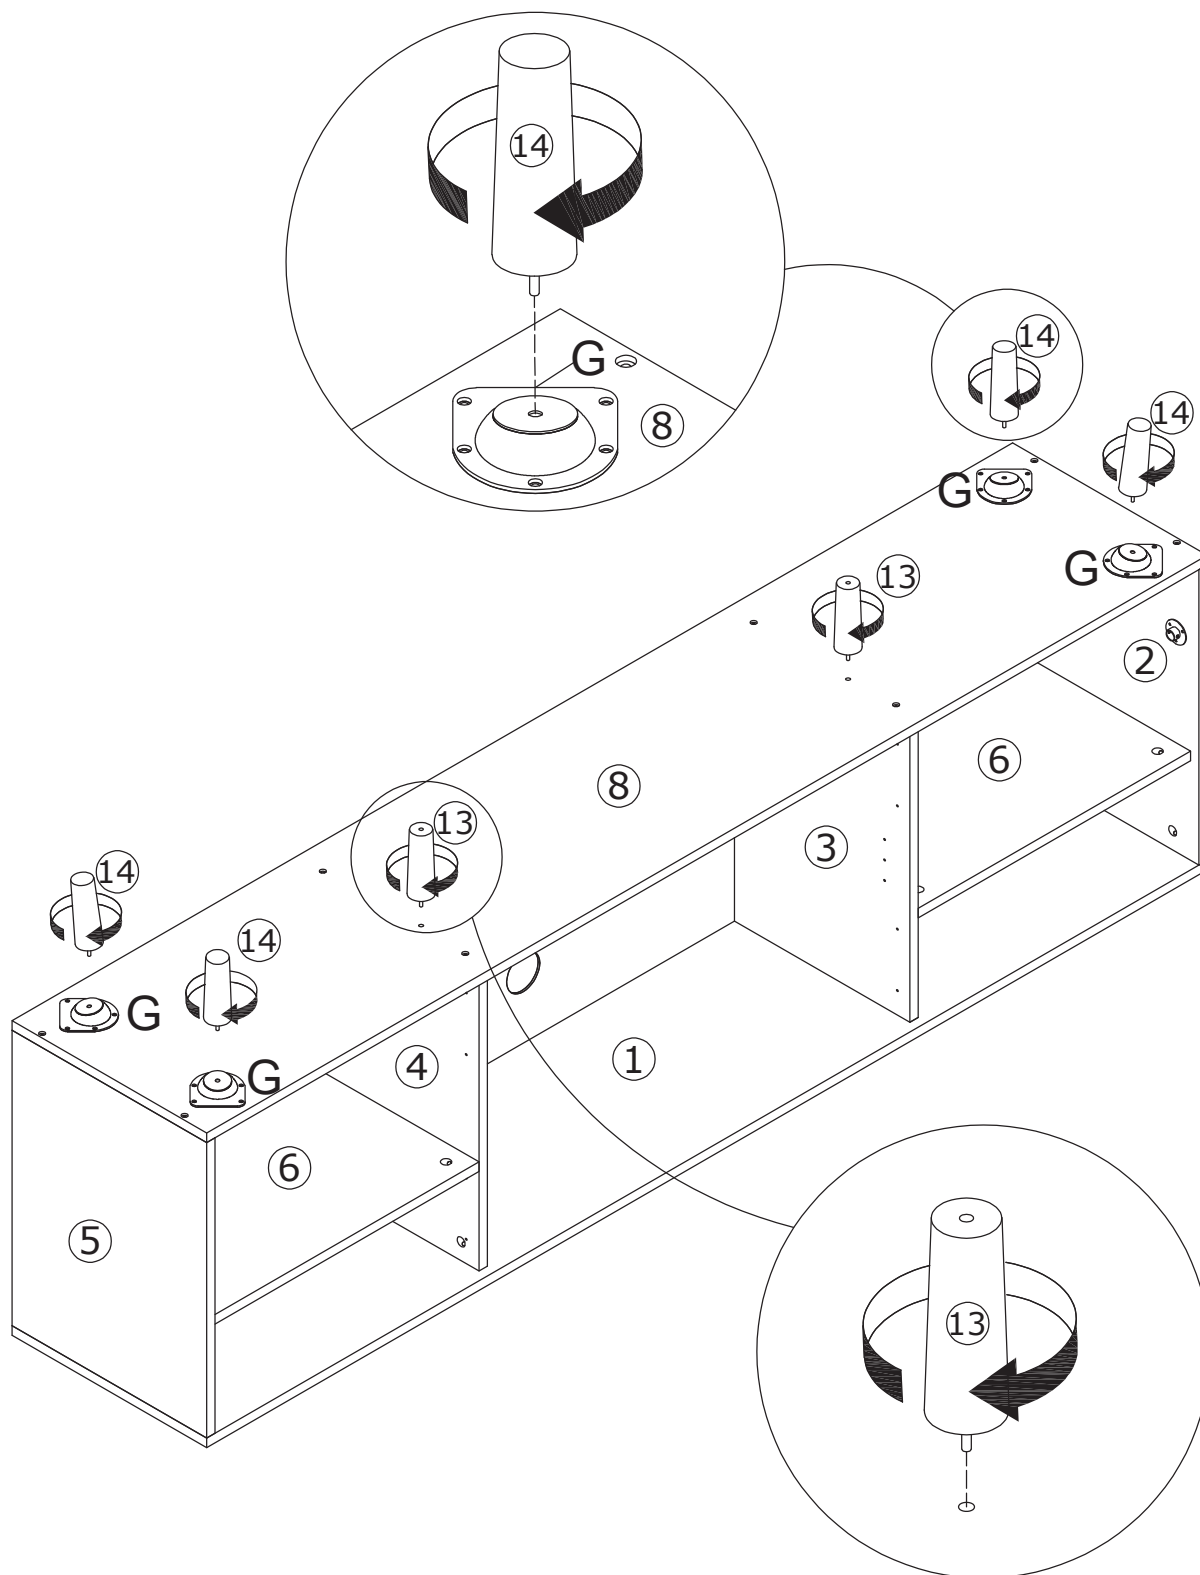

# 16


Mx2



Yx4



 Rotate part(M) into No.13 leg support as shown.  
Cover foot peg(Y) to No.14 leg.

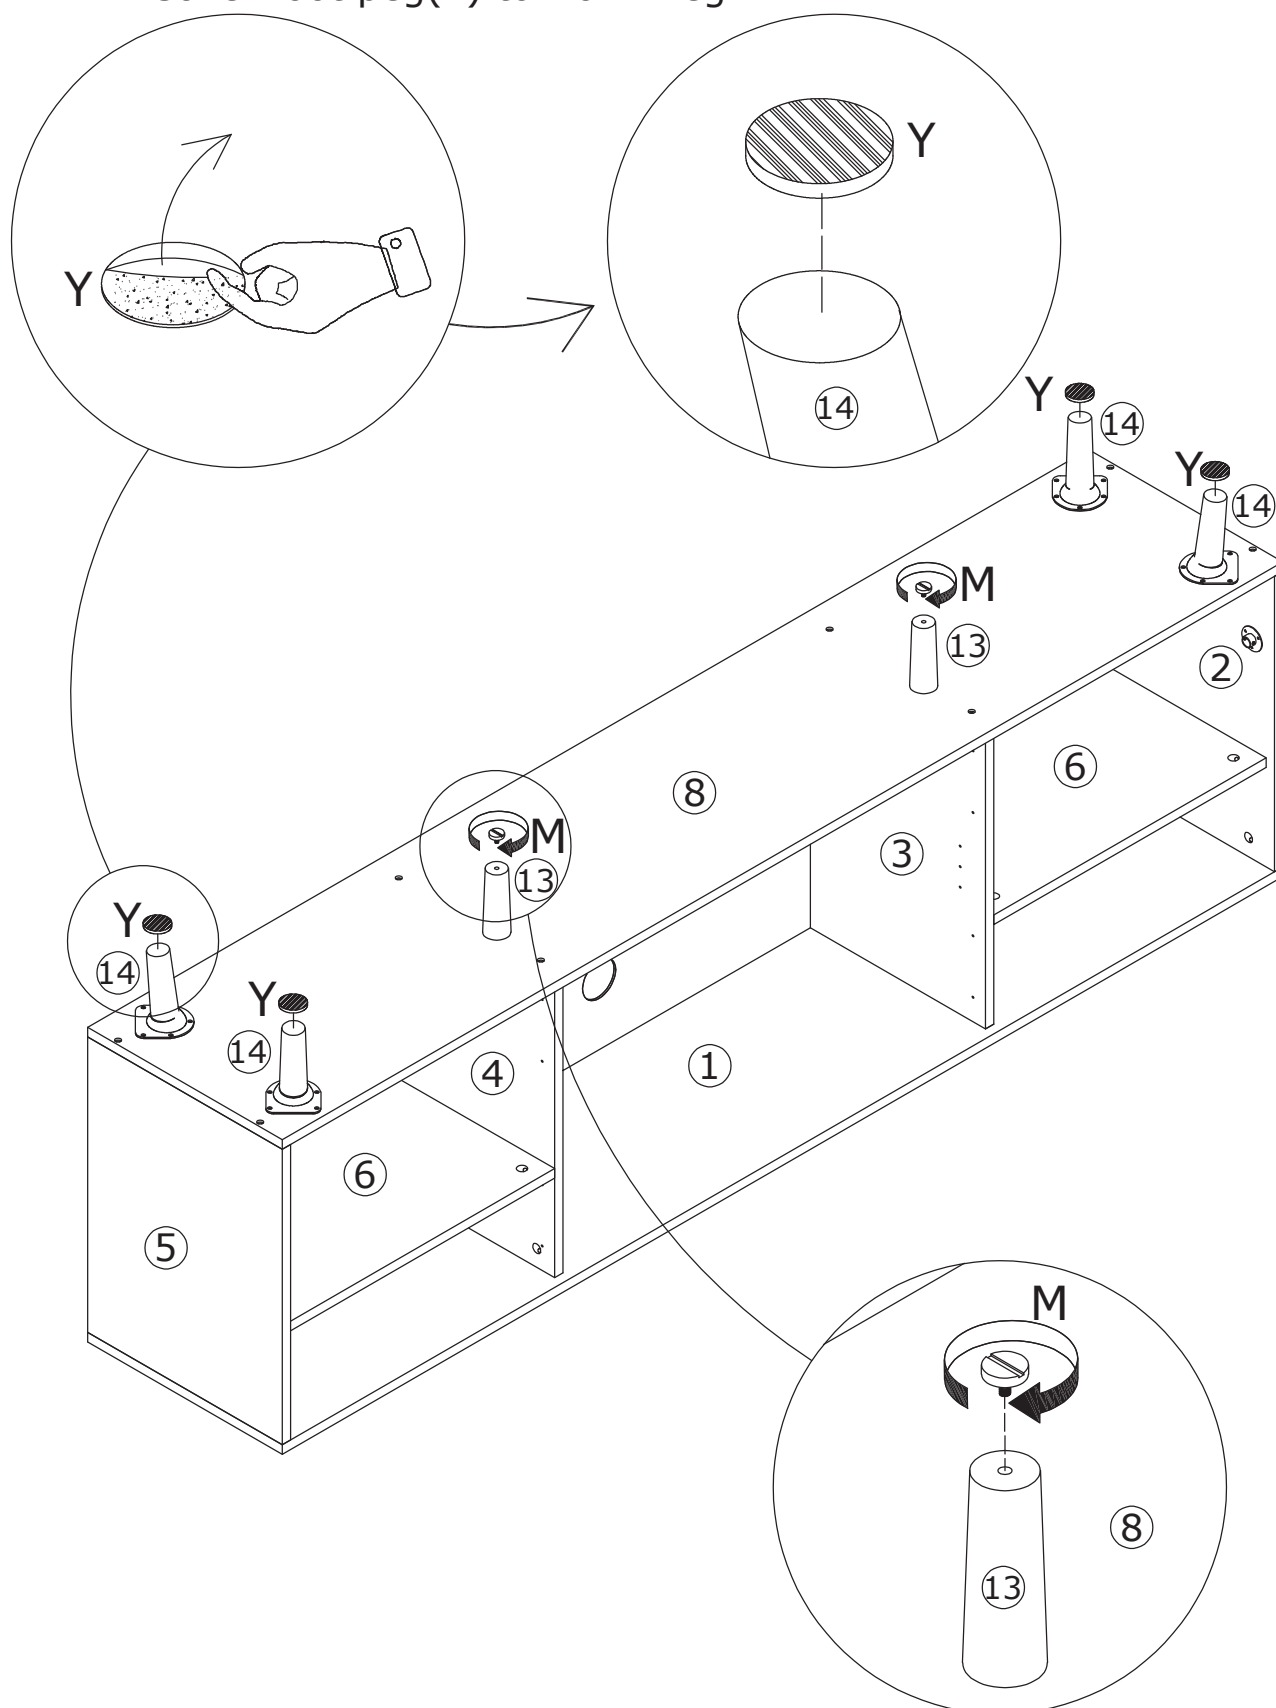



# 17

Px12



Qx12



Ø3x16mm

Vx2




Wx2



  
 
 
Ø4x14mm




 
 



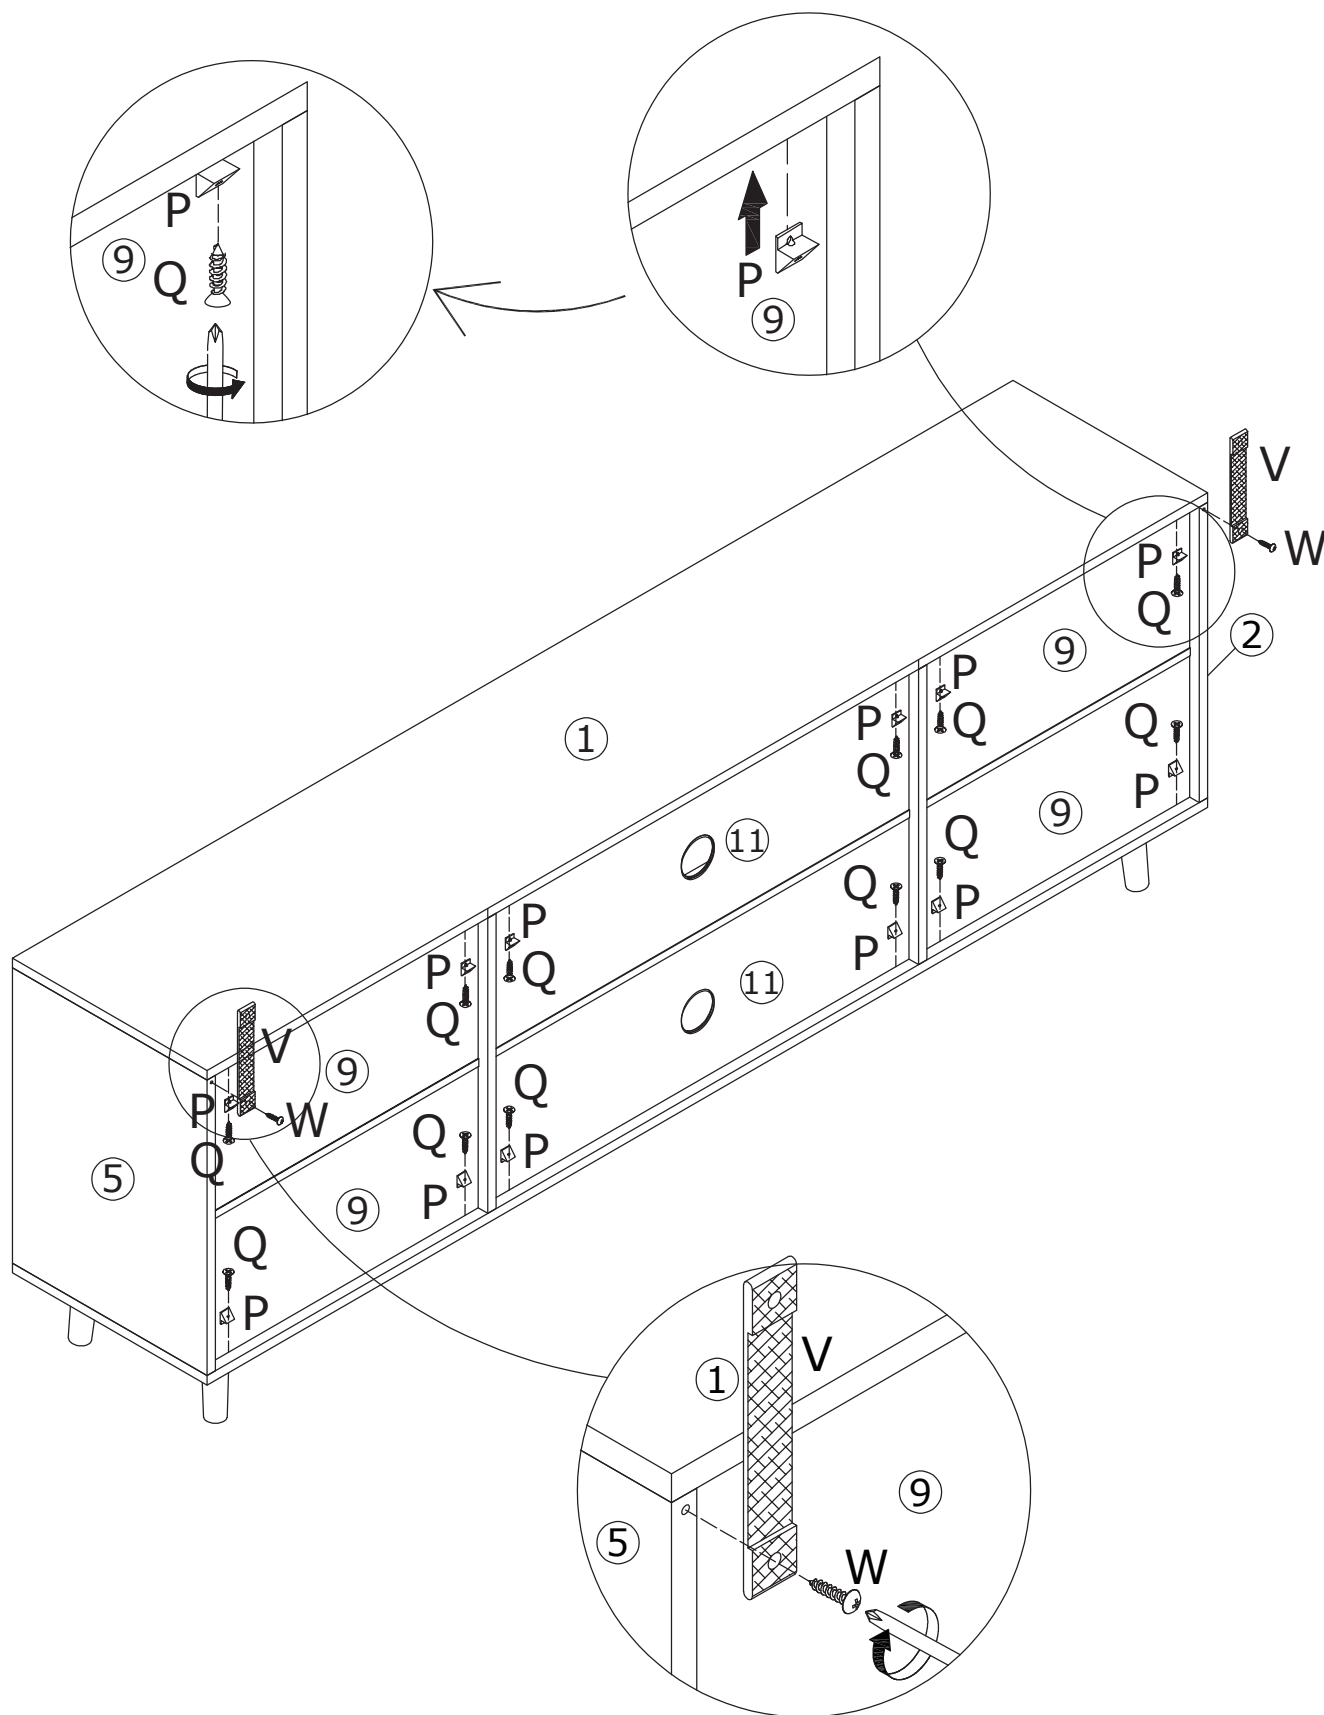
Reinforce back plates using part(P) and screw(Q) as shown.  
Fix part(V) to No.2 and No.5 plate with screw(W) as shown.

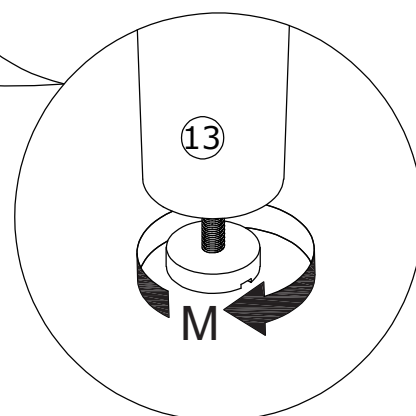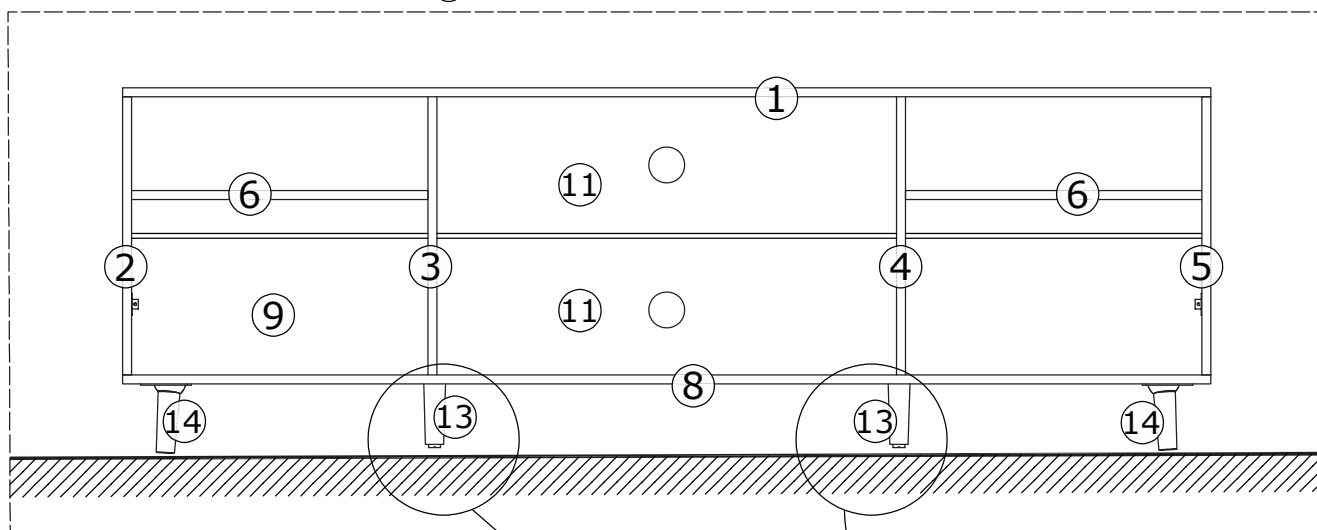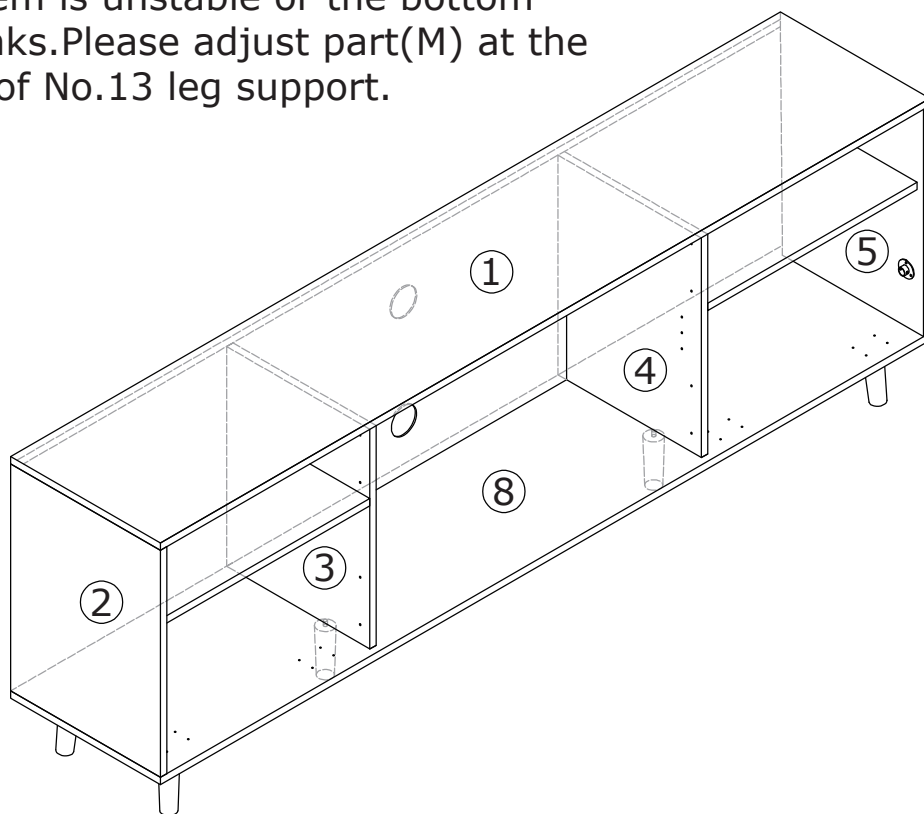


If the item is unstable or the bottom plate sinks. Please adjust part(M) at the bottom of No.13 leg support.



# 19

  Ex4  Ø3.5x10mm	F2x2 	Jx4 	Kx8  Ø3x12mm	Rx4  Ø3.5x10mm	Sx4 	
---	---	--	---	---	--	---

 Fix hinge(J) to No.16 and No.17 plate respectively with screw(K) as shown.  
Fix part(F2) to No.16 and No.17 plate respectively with screw(E) as shown.  
Fix handle(S) to No.16 and No.17 plate respectively with screw(R) as shown.

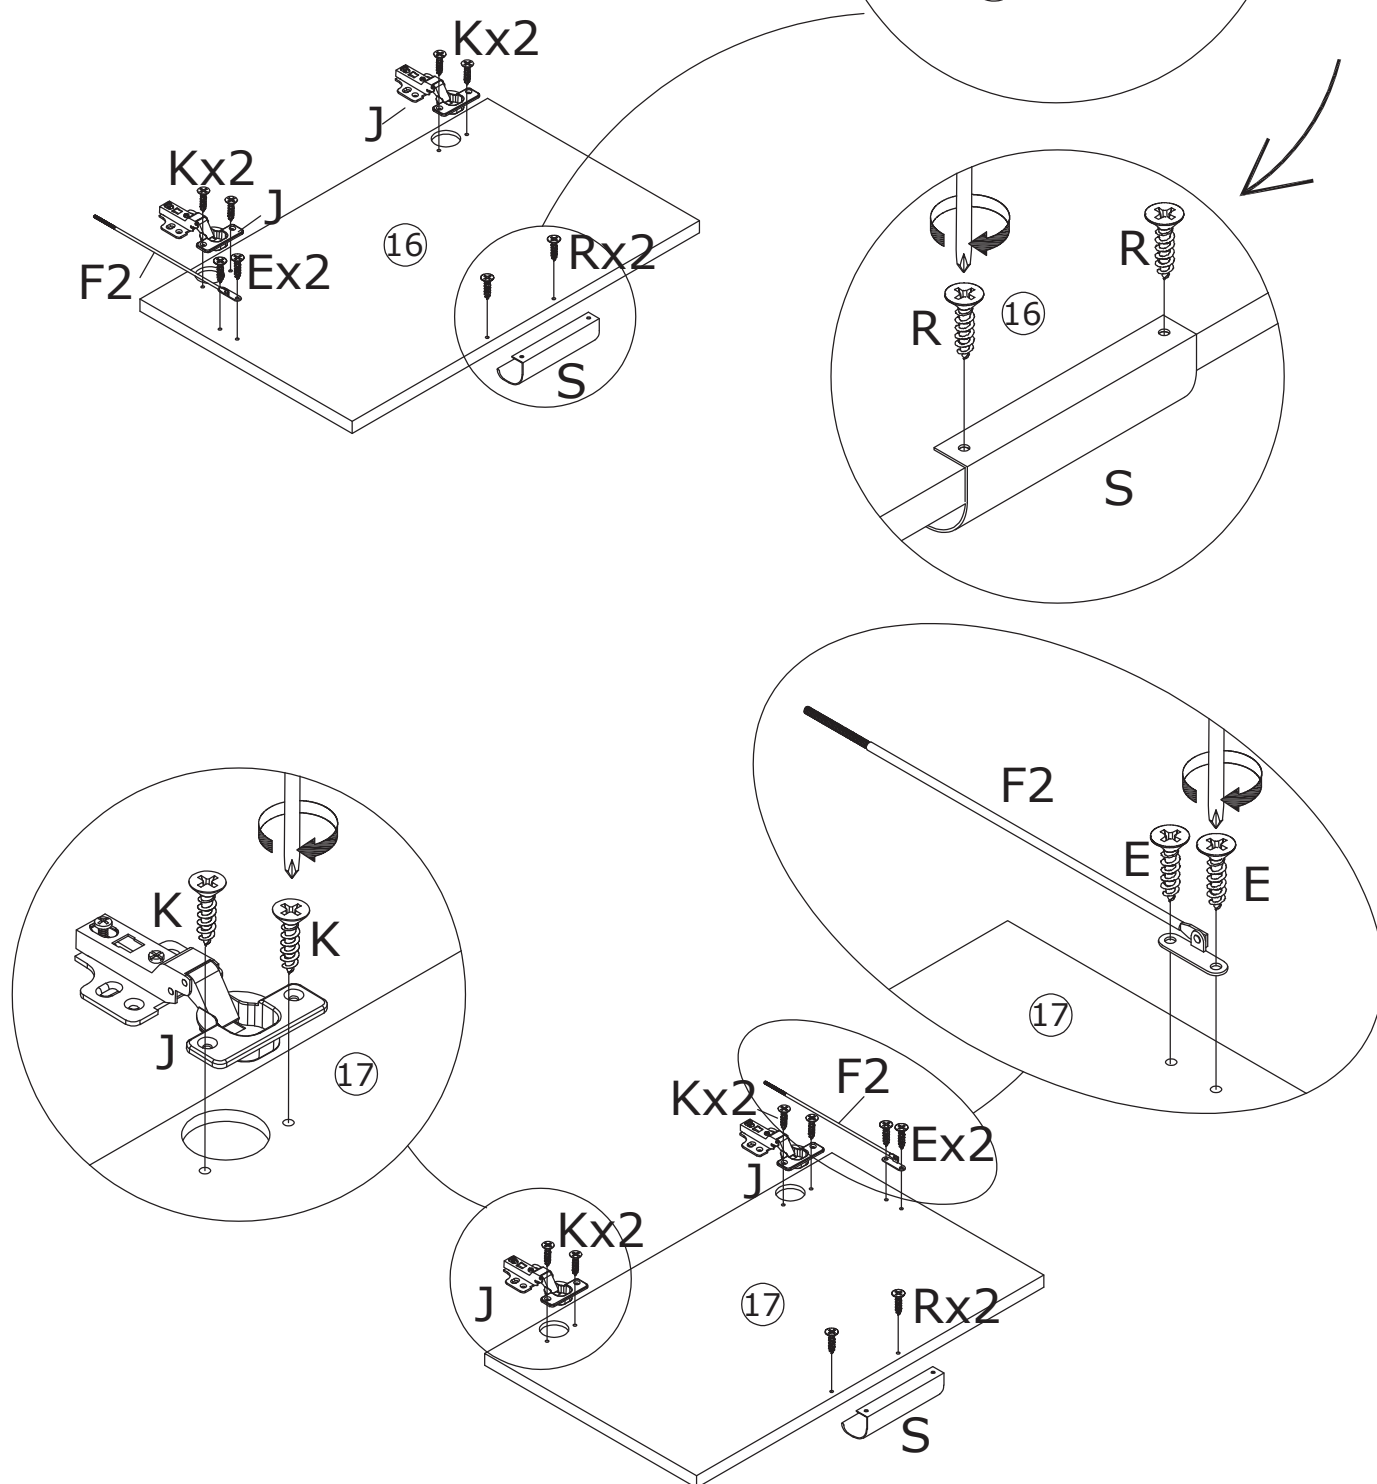

# 20

F3x2




Kx16






Ø3x12mm



 Attach No.16 door plate to left, No.17 to right by fixing hinge with screw(K) as shown.  
Combine all parts of accessory(F), as shown.

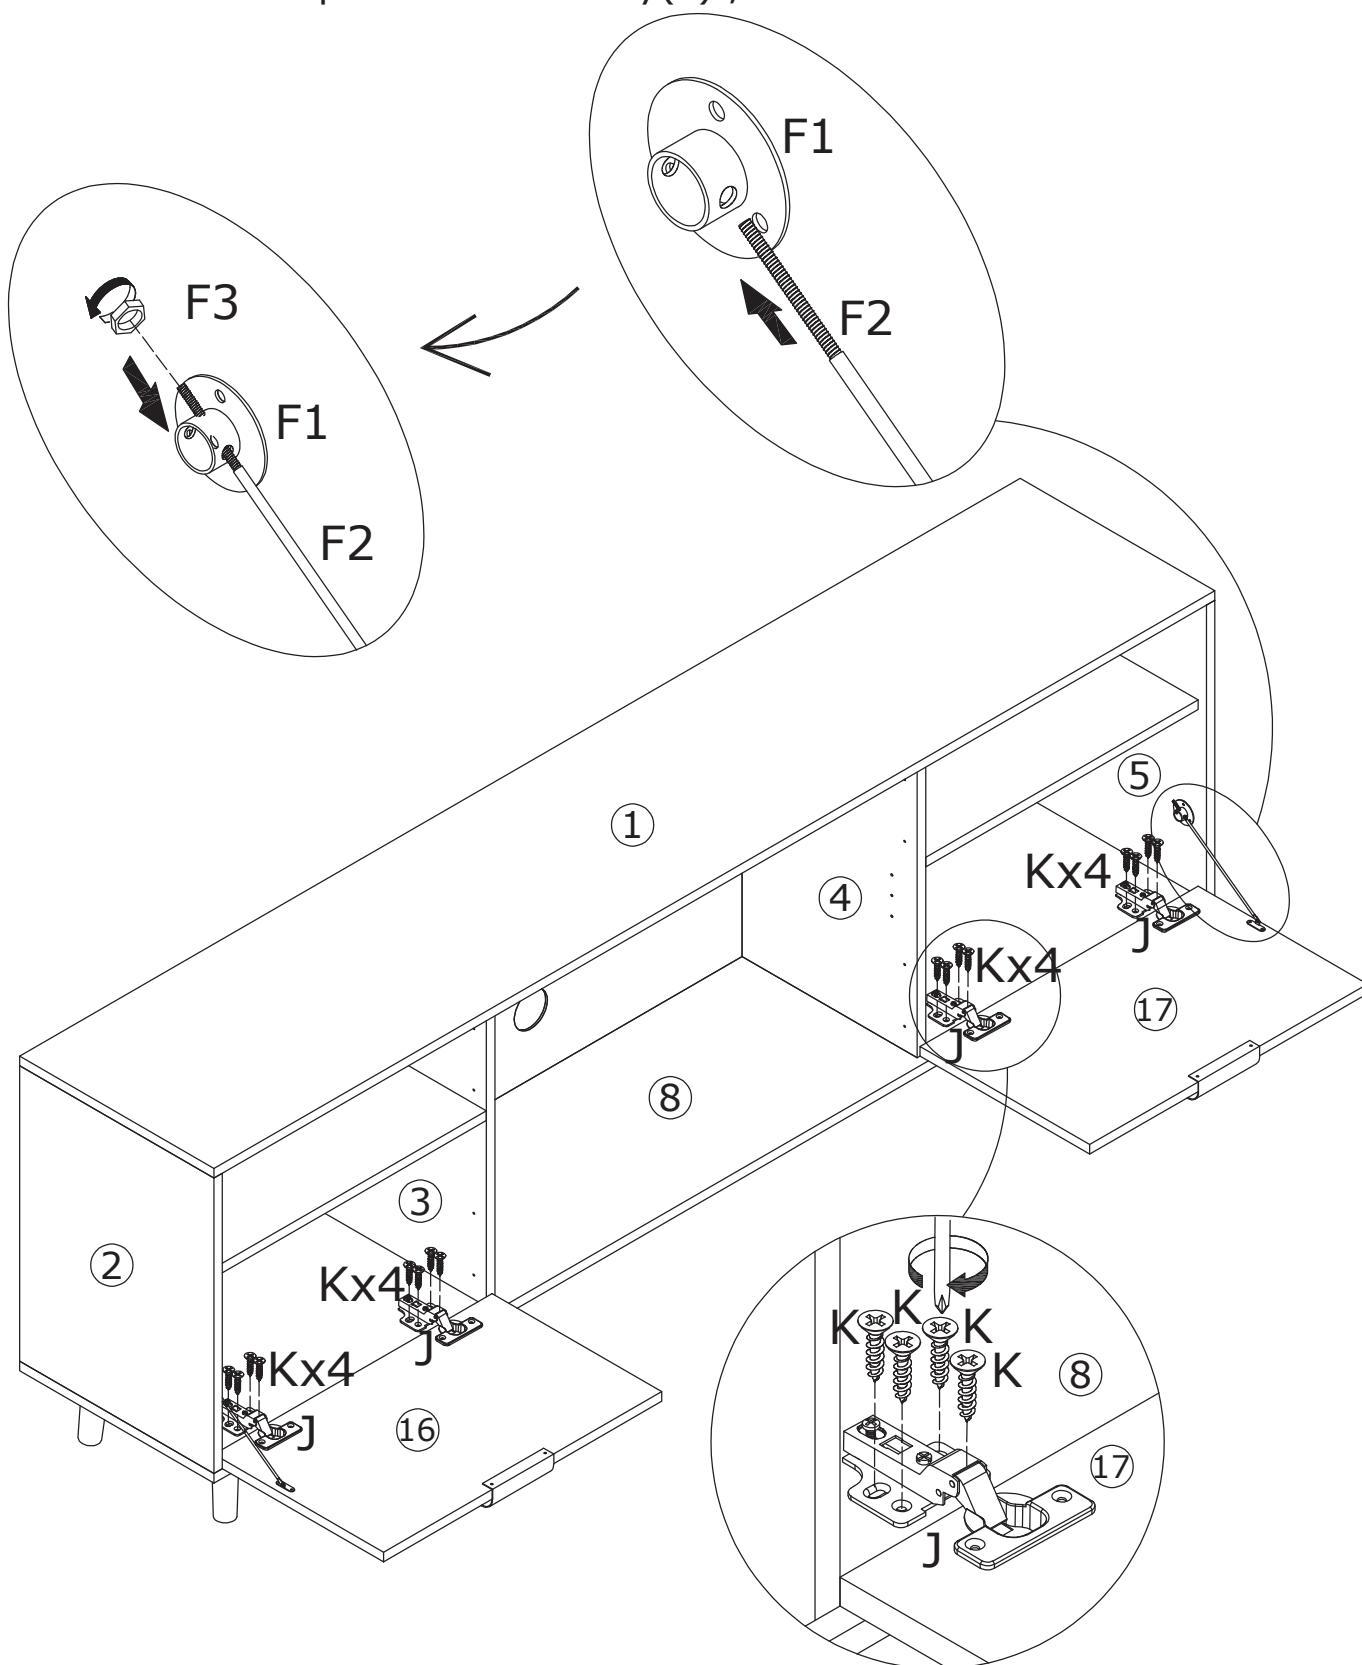


   If the TV table door panel tilts or sinks,  
please adjust part(F3).

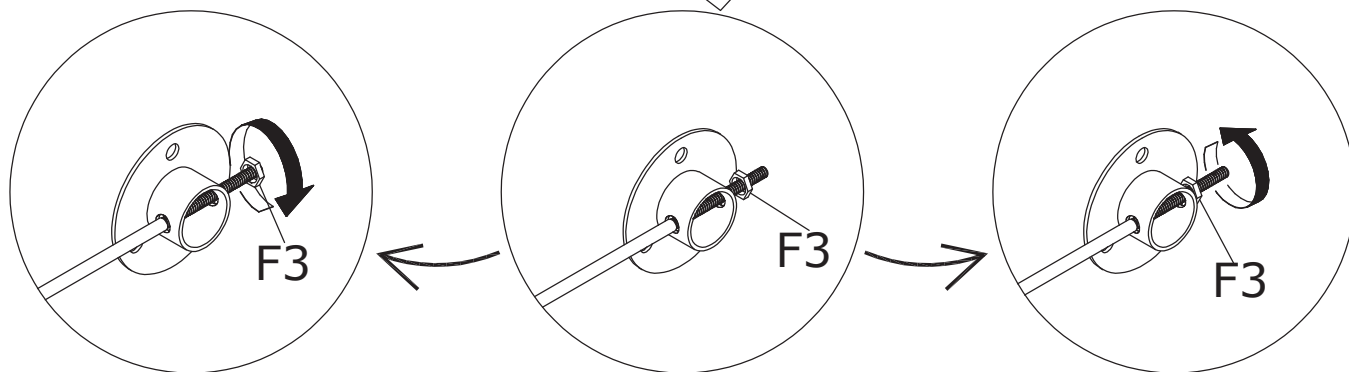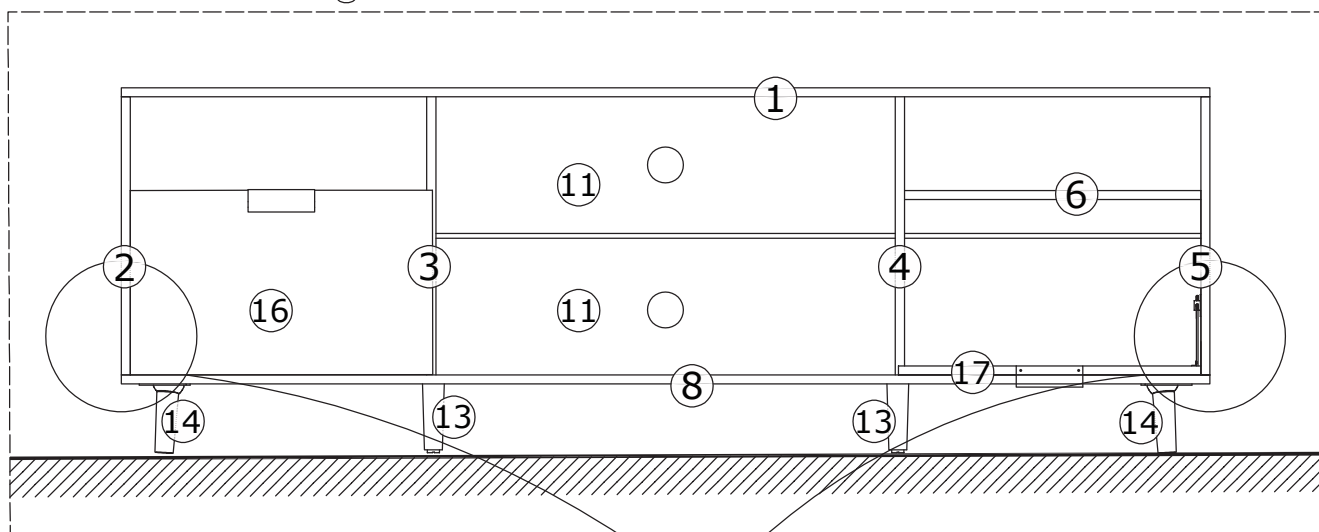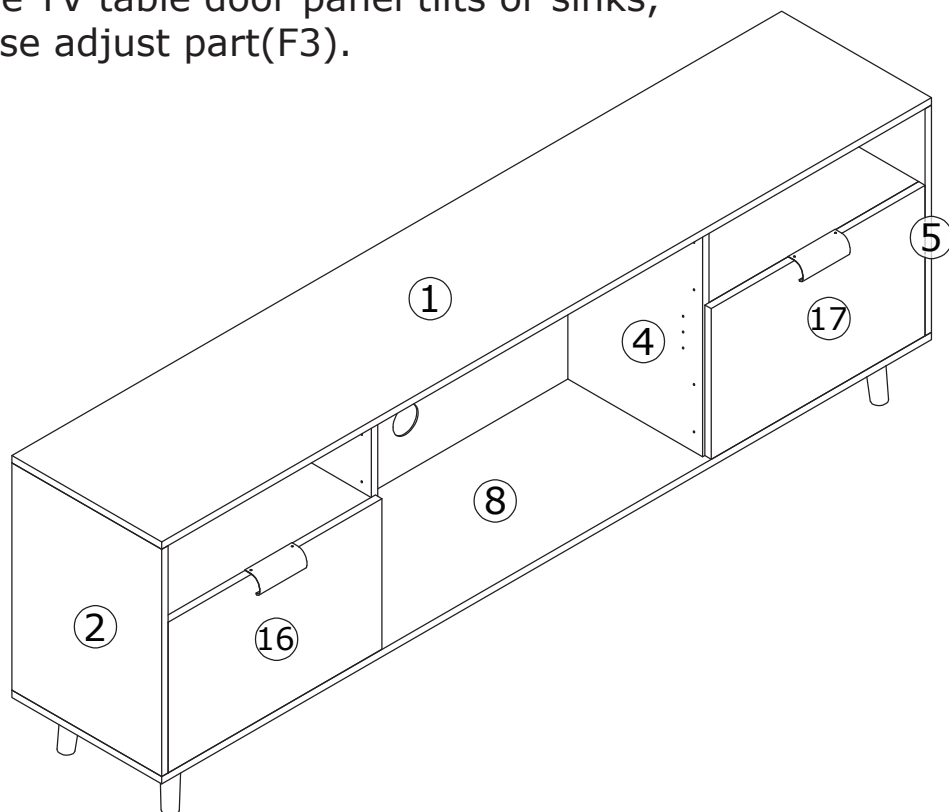


This TV cabinet can be used in two ways.  
Plan 1 is to add a removable plate that would be used only as a TV cabinet (steps are in step 23).  
Plan 2 is to install a matching fireplace, which can be used as a mantelpiece (steps 24 to 27).

 Plan (1)

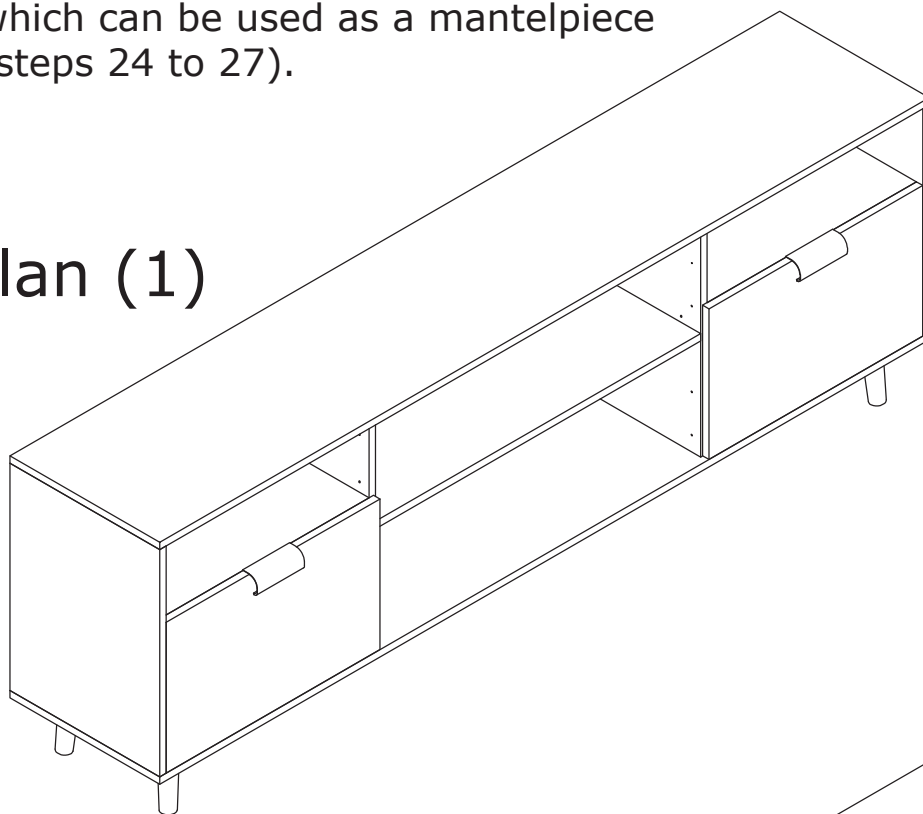

Plan (2)

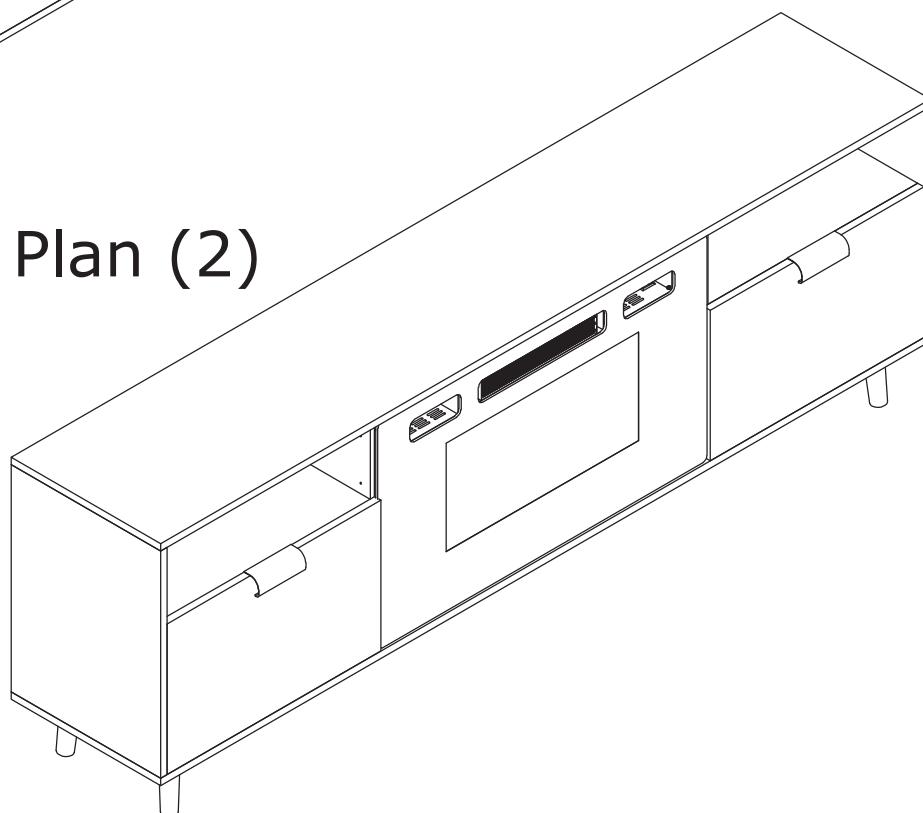 


23

Lx4




 Insert part(L) into the opposite positions of No.3 and No.4 plate. Place the No.7 plate in, as shown.

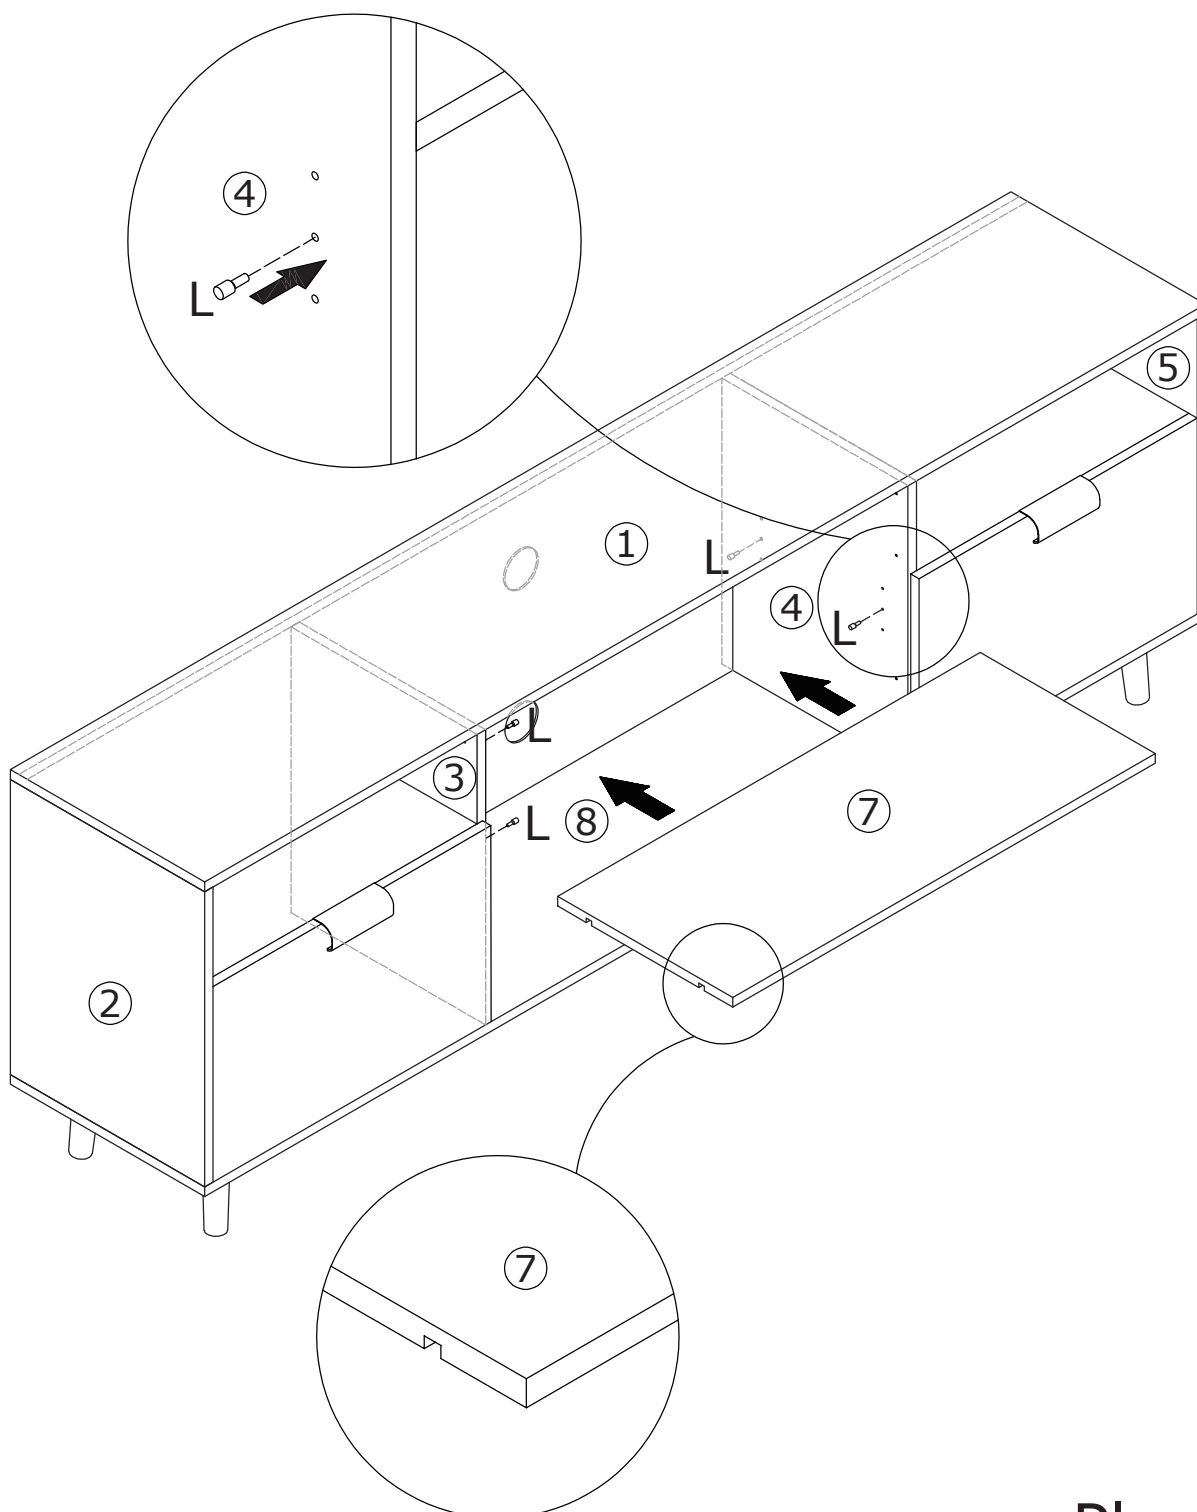


# 24

 Tx6  
Ø3x12mm




Please make sure you have bought a matching fireplace.  
Remove the shell of the fireplace.  
Connect No.15 plate with the fireplace using screw(R).


## Step 1

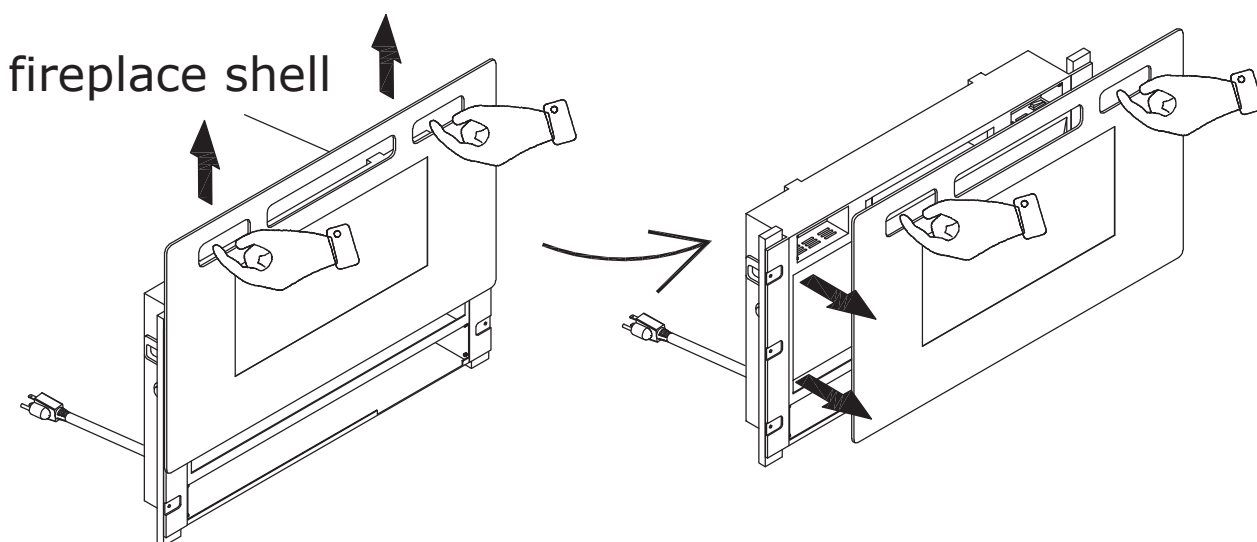 

## Step 2

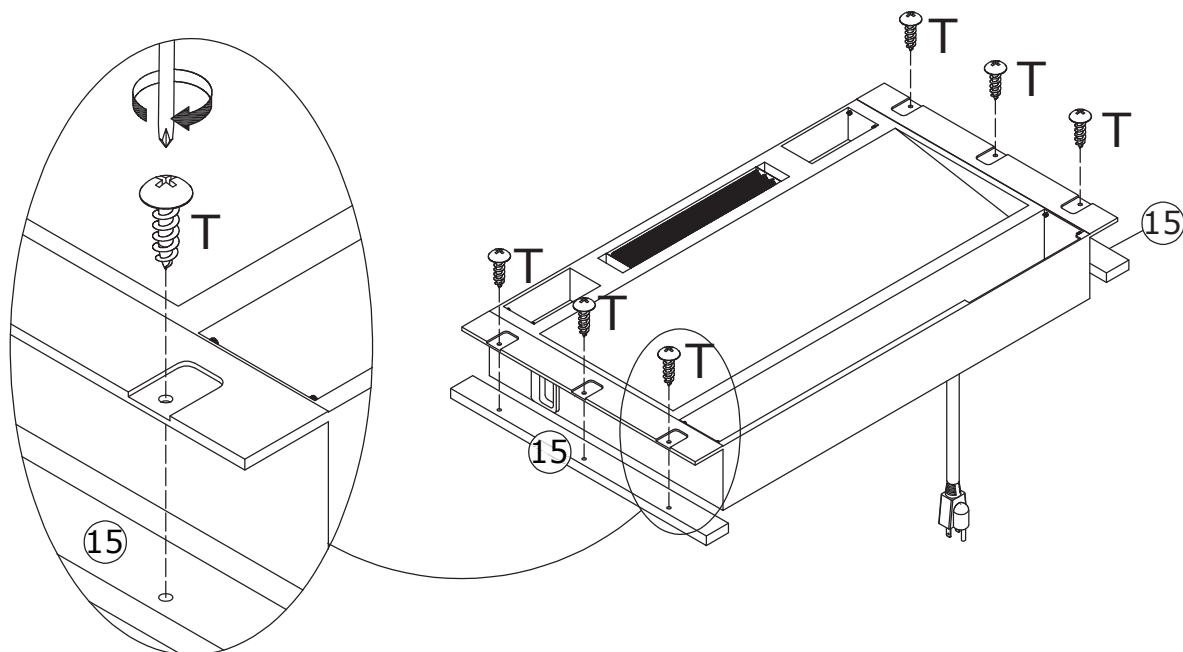 



 


Connect the data cable connector before hanging the glass frame on the appliance.


Gently push on the glass panel by aligning the 4 hooks until it snaps into position (sinks down 1-2 cm).

Thread the matching screw into the threaded holes on the glass panel.

 Check the alignment of the glass panel and securely tighten the screws.

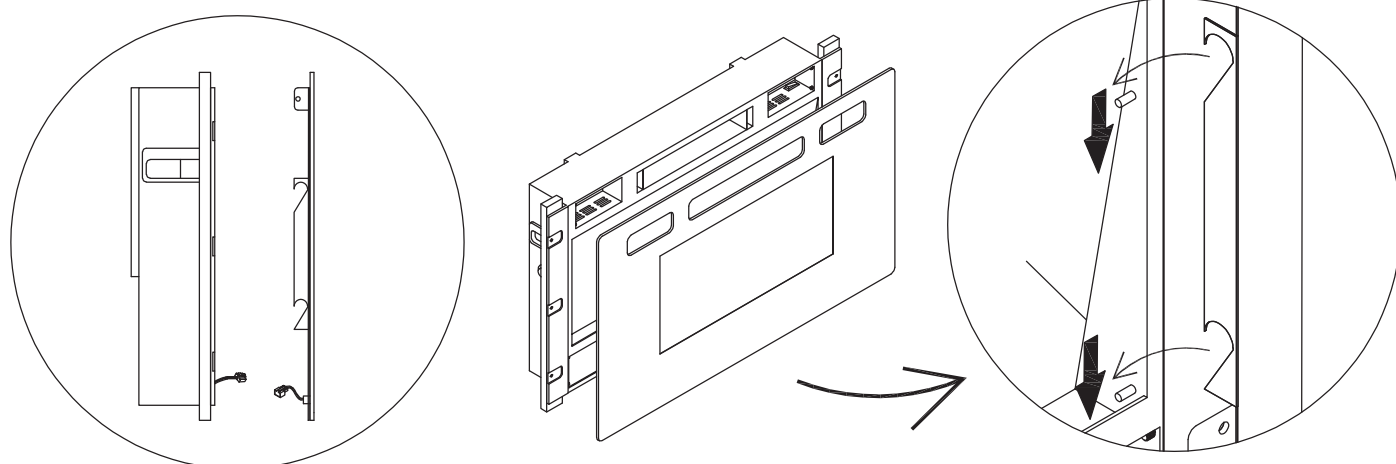


Connect the data cable connector

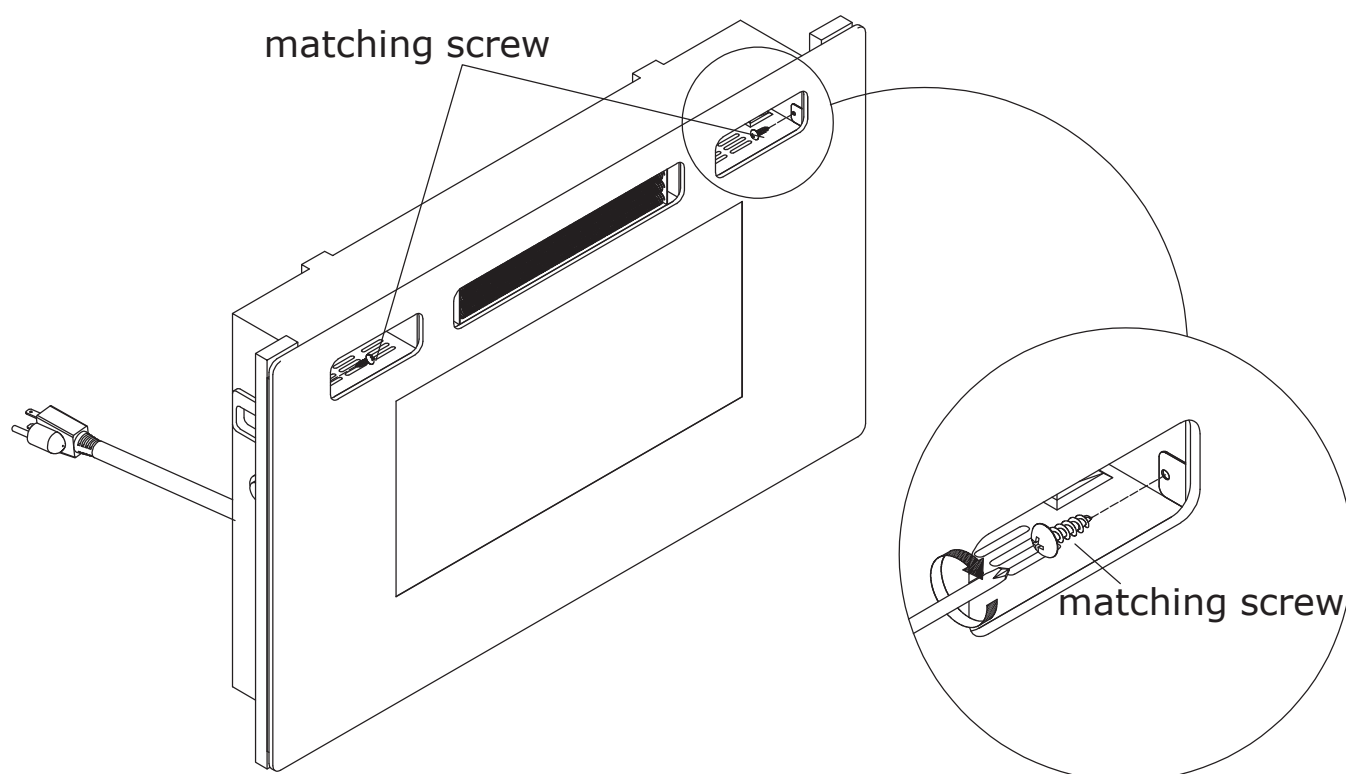 

Plan (2)

# 26

 
Push the fireplace vertically into the TV cabinet, as shown. Be careful to insert the fireplace plug through the round hole in No.11 plate.

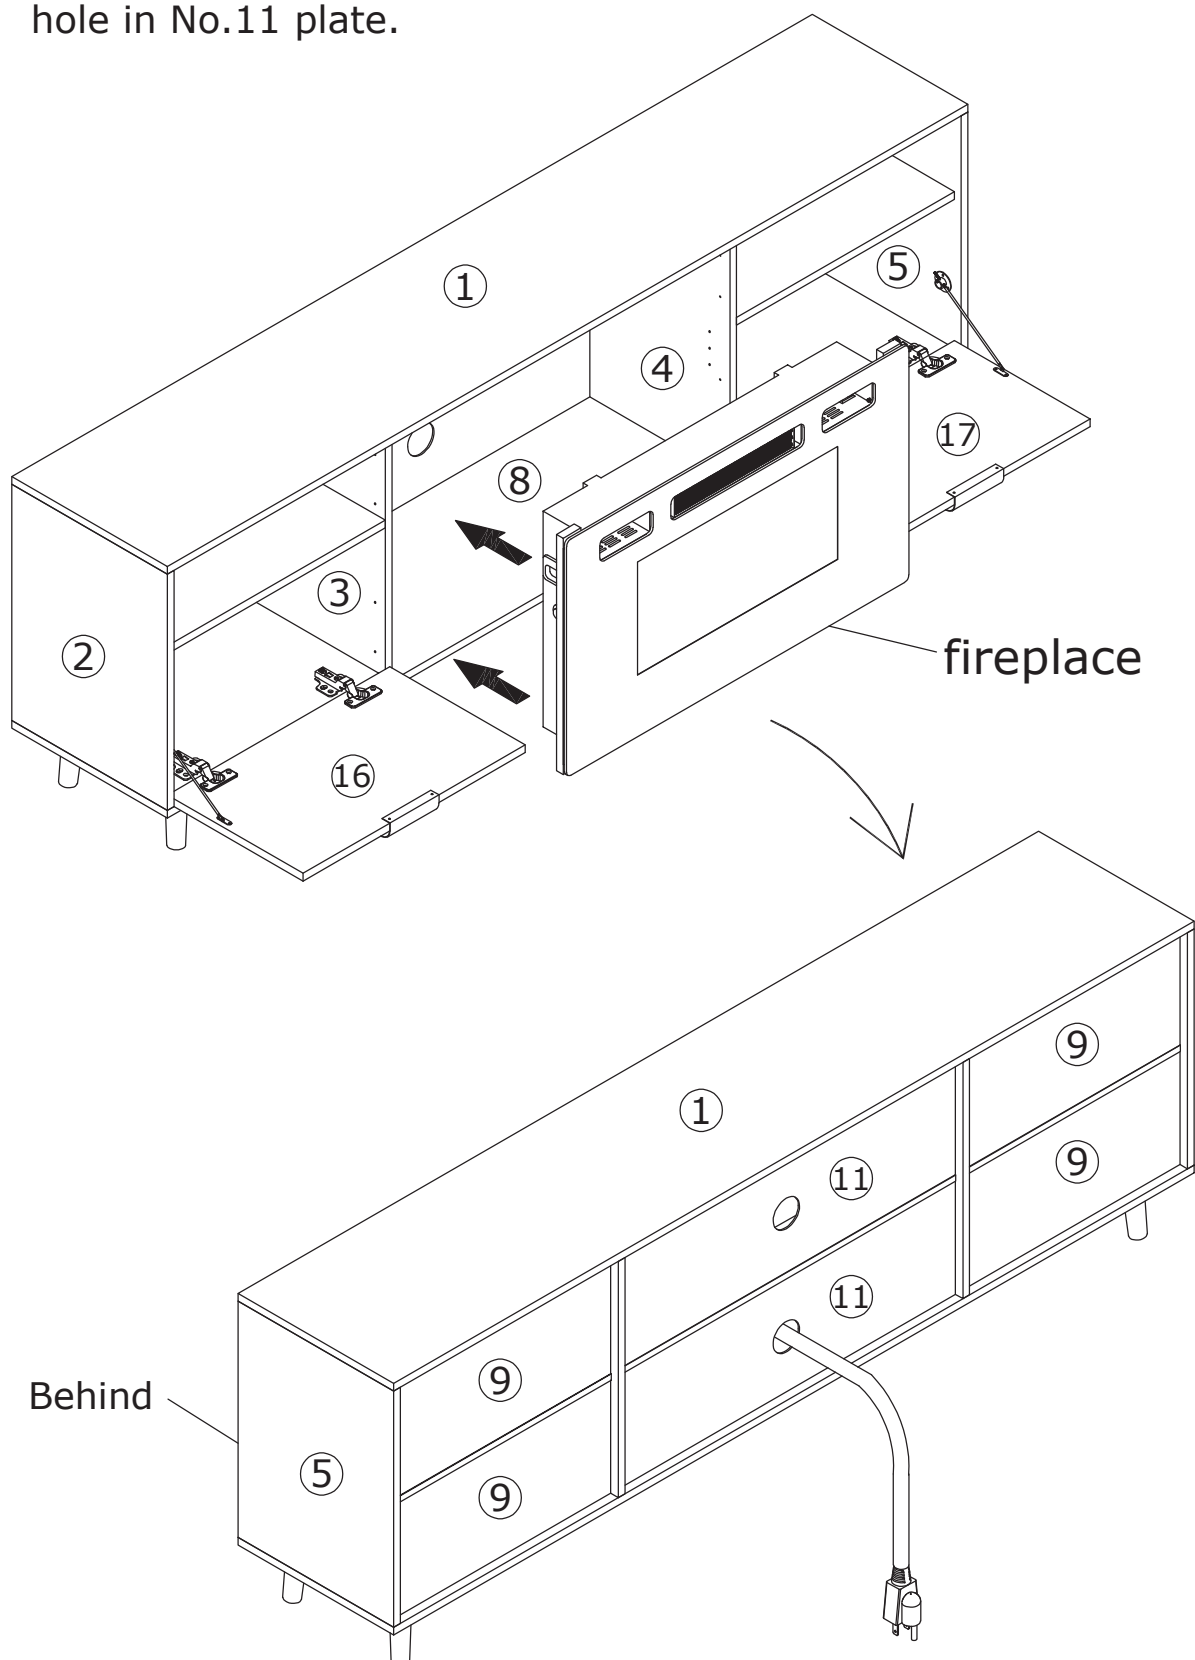


Plan (2)

# 27

 Nx8  
Ø4x35mm



 Please use screw N to secure the fireplace to panels 3 and 4, as shown.


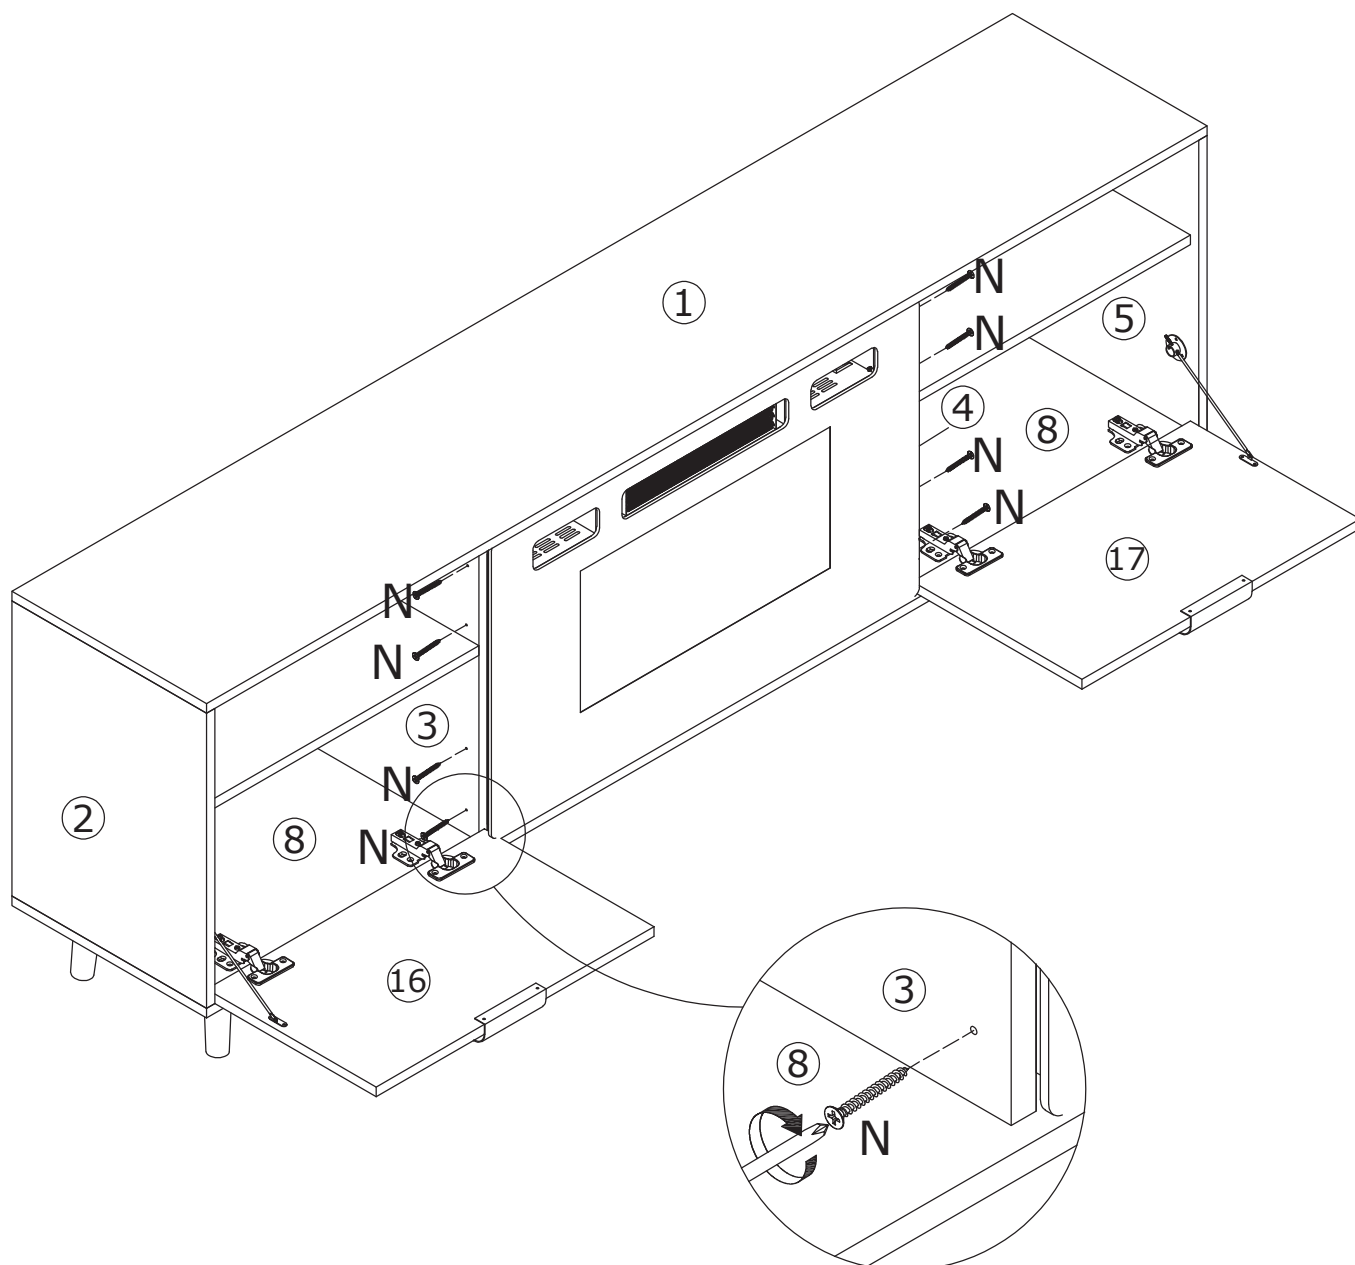


# 28

Dx2





  Ux2




For extra stability, it is recommended that you attach the TV cabinet to the wall. Additional hardware (D, U, V), as shown.

  Should you choose not to affix the product to the wall, serious injury may be caused if the product tips over.

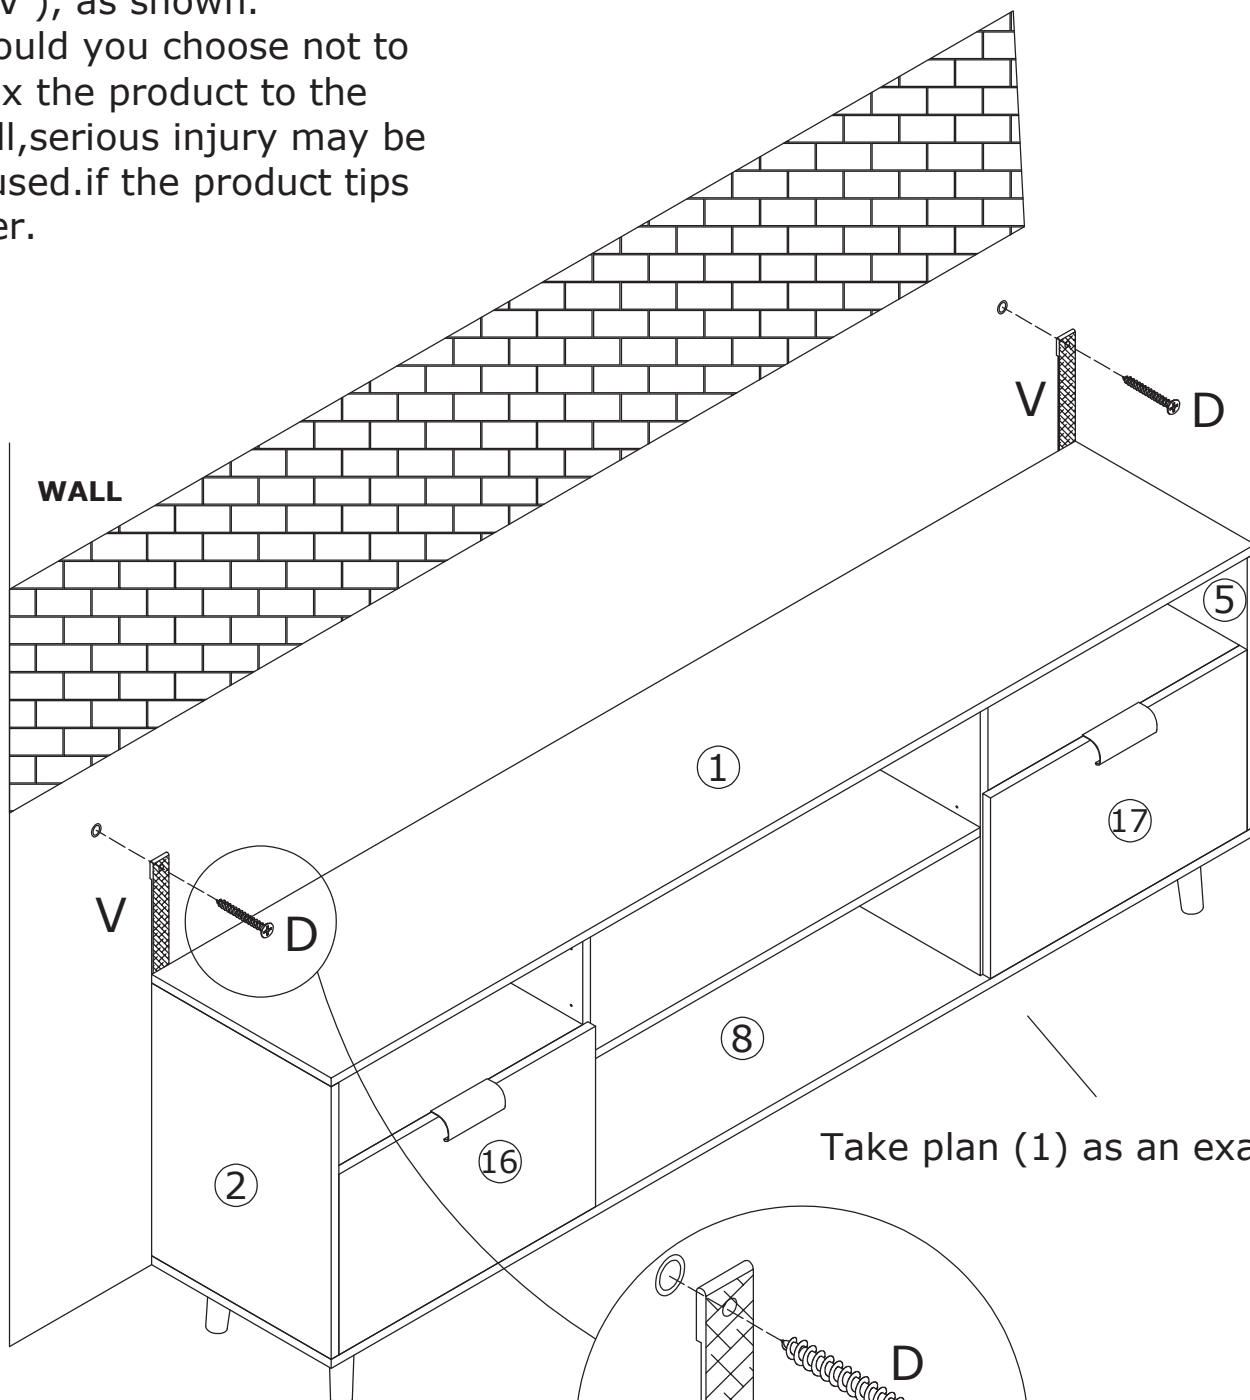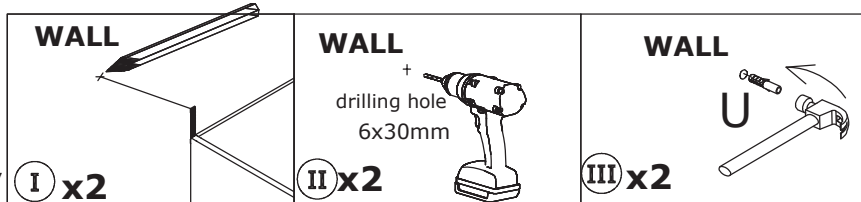

Take plan (1) as an example

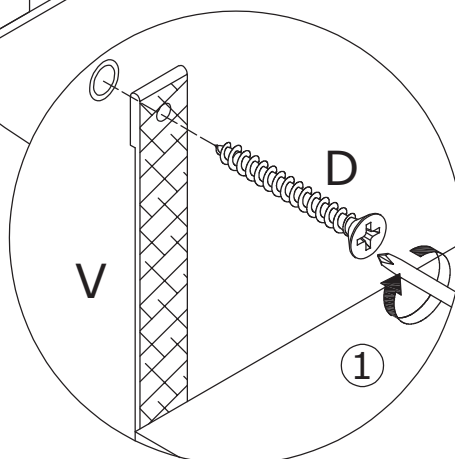 

# WARRANTY

## WARRANTY CLAIMS

- There is a 30-day warranty for broken furniture or any other problems that do not work properly. The warranty will start from the date of purchase which must be verified by proof of purchase.
- Before making a claim, we may be able to answer your query, simply call us. Please leave your purchase order number, along with some details of the problem, if you want a replacement part. We will arrange within 48 hours. If there is out of stock, we will reply with a shipping date.
- The product must be used in accordance with the instructions provided. For health reasons.
- For other reasons, if the furniture needs to be returned, it must be cleaned and dried and operated within 30 days of receipt.

## Type of Warranty Claim

- Failure to follow the furniture instructions will invalidate the warranty. Attention please.
- Does not include damage during installation, but includes damage during transportation.

## Scope of responsibility

- Shall not bear any responsibility for misuse or user damage and / or loss of parts during the installation of furniture.
- After using, the damage and scratches of the furniture are not covered by the warranty.

## The Warranty Relates to All Bought in The Us and Covers The Following Areas

- Sheet parts: 1 month from the date of purchase.
- Electrical parts: 1 month from the date of purchase.

# RETURNS

## CHANGED YOUR MIND AND NEED TO RETURN YOUR ITEM?

### PLEASE FOLLOW THE BELOW INSTRUCTIONS:

- If you have purchased and have simply changed your mind, follow the retailer's instructions for returns.

### DEFECTIVE ITEMS

- If your item is defective in any way, i.e. it doesn't work but you can't identify why, in the first instance, please call us.

### DAMAGED ITEMS

- If you receive an order with obvious shipping damage from the retailer, then we suggest the delivery is refused. If the delivery has been accepted and then shipping damage is found, please follow the specific instructions advised by the retailer.  
In all circumstances please save all packaging material and paperwork for the order. Please be aware that if you dispose of packaging material or attempt to return the merchandise without contacting the fulfiller, you jeopardise your chances of making a claim, and you may not receive a credit for the return.