

Care and Cleaning For best results, clean the swing with a soft cloth and dry thoroughly.

Store the swing in a dry, indoor when not in use.

Keep the swing away from fire, extreme heat, freezing conditions, and inclement weather such as rain, hail, sleet, snow, or wind.