

1. SAFETY WARNINGS (READ IMMEDIATELY)

This product is designed to comply with ASTM F963-23, ASTM F1148-24, and CPSC security standards. However, safety relies on proper installation, continuous maintenance, and adult supervision.

GENERAL WARNINGS:

ADULT ASSEMBLY REQUIRED: This product contains small parts and sharp points prior to assembly. Keep away from children until fully assembled.

ADULT SUPERVISION IS REQUIRED AT ALL TIMES: Never leave children unattended while using this equipment.

WEIGHT LIMIT: The total maximum weight capacity for the entire swing set frame is 330 lbs (150 kg). Do not exceed this limit.

ANCHORING IS MANDATORY: This swing set must be securely anchored to the ground to prevent tipping over during use. (Anchors are usually sold separately depending on ground type, check your specific kit content).

USAGE HAZARDS:

STRANGULATION HAZARD: DO NOT dress children in loose-fitting clothing, including ponchos, scarves, and garments with drawstrings. These can get caught on the equipment. DO NOT attach jump ropes, clotheslines, pet leashes, or similar items to the swing set.

PROPER SEATING: Children must sit in the center of the swings with their full weight. Do not stand or kneel on the swing seats.

MOVING PARTS: Do not allow children to walk close to, in front of, behind, or between moving items. Do not twist swing chains or ropes, or loop them over the top support bar, as this may reduce their strength.

WEATHER CONDITIONS: Do not use the equipment when it is wet, as seats may become slippery.

2. INSTALLATION & PLACEMENT GUIDELINES

Choosing the Location:

Level Ground is Crucial: Install the swing set on flat, level ground. Installing on sloping ground can cause the set to tip over.

Protective Surfacing: DO NOT install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury. We strongly recommend installing protective surfacing material such as wood chips, mulch, or rubber safety mats under and around the swing set.

Safety Zone: Create an obstacle-free safety zone that extends at least 6 feet (1.8 meters) in all directions from the swing set. This zone must be free of fences, garages, houses, overhanging branches, laundry lines, and electrical wires.

Swing Clearance: In front of and behind the swings, the safety zone should extend a distance equal to twice the height of the top bar.

3. USAGE GUIDELINES

Ensure children are dressed appropriately in well-fitting clothes and closed-toe shoes.

Instruct children not to swing empty seats.

Instruct children not to jump off the swing while it is in motion.

Adjust the height of the saucer swing and belt swing using the adjustable ropes so they are at a safe height for the children using them (low enough for their feet to touch the ground when stopped, but high enough not to drag).

4. MAINTENANCE AND CARE

To ensure safe play and prolong the life of your Amictoy Swing Set, routine maintenance is required. This set features rust-resistant paint and durable materials, but outdoor elements still require management.

At the Beginning of Each Play Season:

Tighten all hardware: Check all nuts and bolts on the frame and swing attachments. Tighten as needed.

Lubricate: Apply a light coat of metallic lubricant to all metallic moving parts (swing hangers/hooks).

Inspect Ropes and Seats: Check the adjustable PE ropes for fraying or wear. Inspect the saucer swing fabric and the belt swing seat for cracks or deterioration. Replace

immediately if damaged.

Check Rust: Inspect metal tubing for any scratches in the anti-rust paint. If rust is found, sand gently and repaint with a non-lead-based touch-up paint.

Check Anchors: Ensure the ground anchors are still securely held in the soil.

Twice a Month During Play Season:

Tighten all hardware.

Check all protective coverings on bolts, pipes, edges, and corners. Replace if they are loose, cracked, or missing.

Rake and check depth of loose-fill protective surfacing materials (like mulch) to prevent compaction and maintain safe depth.

At the End of Play Season / Winter Storage:

Remove the plastic belt swing and the fabric saucer swing from the frame.

Store these soft components indoors in a dry place. Leaving ropes and plastic seats exposed to freezing temperatures and heavy winter moisture can shorten their lifespan and cause them to become brittle.