

INSTRUCTION SHEET

FOR FIREBACK MODELS • FB1515 • FB1618 • FB2020 • FB2424 • FB2727

Firebacks protect the walls of the heat chamber in a fireplace from premature cracking and degradation. They also boost a fireplace's heat output by reflecting more of the fire's heat into the room and not up the chimney.

Installation Considerations:

- *No tools are required for this installation.*
- *All work must be performed after the fire is extinguished and all coals/ashes are cold.*
- *All coals/ashes should be stored or disposed of properly.*
- *Please remove the mounting brackets from the box before discarding.*
- *The finish on the the fireback may peel or crack due to the extreme heat. Firebacks may be cleaned, lightly sanded, and painted with a high temperature paint.*

STEP 1

Remove all existing equipment from the fireplace, including grates, andirons, and/or gas logs. Clean the firebox by properly storing or disposing of all coals/ashes.

STEP 2

 
Inspect the firebox for severe cracks, voids, or refractory failure and if necessary contact a professional to repair any existing damage.

STEP 3


Place the support brackets/feet [included in the fireback packaging] into the base of the fireplace and position the fireback into the same slot on both brackets. The slots in the brackets allow for a slight forward-leaning, straight upright, or a slight rear-leaning stance. Select the desired position to maximize heat output. Center the fireback right to left in the firebox and approximately 1" from the back wall. It may be necessary to rotate the brackets to select the desired position.

STEP 4

Re-install andirons, grates, and other equipment removed in Step 1.

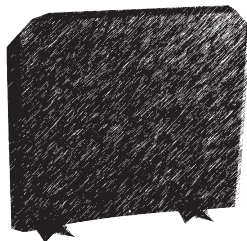

UPRIGHT STANCE

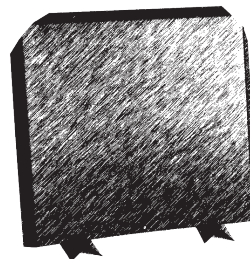 

REAR-LEANING STANCE

[Optional Installation Method: center the fireback right to left in the firebox and then lean it against the rear wall of the firebox.]

