



WARRANTY

Register your product within 30 days of purchase to activate your one-year limited manufacturer's warranty at [ovente.com/register](https://www.ovente.com/register)

WARRANTY IS ONLY VALID IF YOU REGISTER WITHIN 30 DAYS AFTER PURCHASE.

LIMITED ONE (1) YEAR WARRANTY

Your product has a one (1) year warranty period starting from the date of purchase from an authorized retailer. In the event that the product is defective, please contact us to arrange for a replacement. This warranty only covers defects in workmanship and materials. The warranty does not include damage due to misuse, commercial use, accidents, or natural wear and tear.

LIMITATIONS

The warranty stated above is the only warranty applicable to this product. Other expressed or implied warranties are hereby disclaimed. No verbal or written information given by the Manufacturer, its agents or employees shall create a guarantee or in any way increase the scope and duration of this warranty. Repair or replacement as provided under this warranty is the exclusive remedy of the consumer. The manufacturer shall not be liable for incidental or consequential damages resulting from the use of this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the applicable warranty period set forth above except to the extent prohibited by law. Consumer rights may vary from state to state.

Customer Service: (855) 926-2626

Visit us at [ovente.com](https://www.ovente.com)



Facebook.com/ovente



@OventeTweets



@Ovente

OVENTE®

Double Portable Ceramic Infrared Cooktop Burner

BGI202 Series



Before using please read the instruction manual and keep it for future use.

6. The cooktop will still be hot after turning OFF and can be used to keep the food warm.
7. Unplug after the cooktop cools down.



COOKTOP MAINTENANCE

- Unplug the power plug prior to cleaning the device. Do not use any caustic cleaning agents and make sure that no water penetrates the device.
- After cool down, wipe off the ceramic field with a damp cloth or use a mild, non-abrasive soap solution.
- Wipe off the casing and the operating panel with a soft cloth or a mild detergent.
- Do not use any petrol products to not damage the plastic parts and the casing/operating panel.
- Do not use any flammable, acidic or alkaline materials or substances near the device, as this may reduce the service life of the device and lead to deflagration when the device is turned on.



TECHNICAL SPECIFICATIONS

Input Voltage: 120V

Power: 1500W

Hertz: 60Hz



USING YOUR COOKTOP

1. Make sure the control knob is in the "0" position when plugged in.
2. Any high temperature resistant cookware with flat bottom can be used on the cooktop
3. Put the food into the cookware and put the cookware on the center of heating plate.



Note: The better the pot, the better the cooking result. The base should be flat as possible.

4. Heating Select Switch:

Knob	Temperature
1	572°F
2	662°F
3	752°F

Knob	Temperature
4	842°F
5	932°F
MAX	986°F



176°F


5. After use, turn the heating switch to "0" position and unplug the cooktop from electrical outlet.



IMPORTANT SAFEGUARDS

When using your cooktop, basic safety precautions should always be followed, including the following:

- Read all instructions carefully before use.
- Provide close supervision when the burner is being used near children.
- Do not submerge the cooktop unit or electrical cord in liquid, touch the unit with wet hands, or use in a wet outdoor environment.
- Do not use the cooktop when the cooktop surface is cracked.
- Do not operate if the electrical cord is frayed or if wires are exposed.
- Do not let the electrical cord hang over the edge of a table or countertop.
- To disconnect, turn the control OFF, then remove the plug from wall outlet.
- Do not touch the cooktop surface for several minutes after using as it will be hot.
- Do not move the cooktop while cooking or with hot cookware on the cooktop surface.
- Do not place on or near a hot gas, electric burner or in a heated oven.
- Do not use the appliance for other than its intended use. Do not use outdoors.
- Before plugging in the appliance, check that the socket and power matched those of the appliance. Attention shall be paid to whether the rated value of input supply voltage is according to that of rated input value or not.
- Do not use without a pot on the heating surface or it may lead to internal damage.

- Always remove the plug from the socket when the hot plate is not in use.
- Allow it to cool before putting or taking parts off. Do not touch or insert the plug with wet hands to avoid electric shock.
- Do not remove the pan when in use as the temperature on the glass is high. The glass is hot when in use or shortly after use, power cord and other non heat-resistant items are strictly prohibited from touching hot surfaces.
- When using the appliance or the appliance is still hot, please protect the appliance from touching inflammable materials, such as oil, curtains, cloth, etc
- Never put plastic foils, paper or other inflammable objects on the cooker or cover the plate exhaustively with metallic foil.
- Keep the cooktop out of the reach of children. Do not leave children unsupervised with the cooktop.
- This appliance should not be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised by the person who is responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
-  The center surface gets extremely hot; refrain from touching the appliance.

- The hot plate is designed only for heating and cooking food, and must only be used with cooking pots and pans placed on it.
- For the most efficient operation of the hot plate, the pots and pans that you use must be in good shape: having a solid base, the bottom of pans should be flat and even for maximum heat efficiency.

COOKTOP PARTS

