

 
# ASSEMBLY INSTRUCTIONS

---

# TELEVISION STAND

---

SKU: T-TS106S22BG  
T-TS106S2FE  
T-TS106S2GY

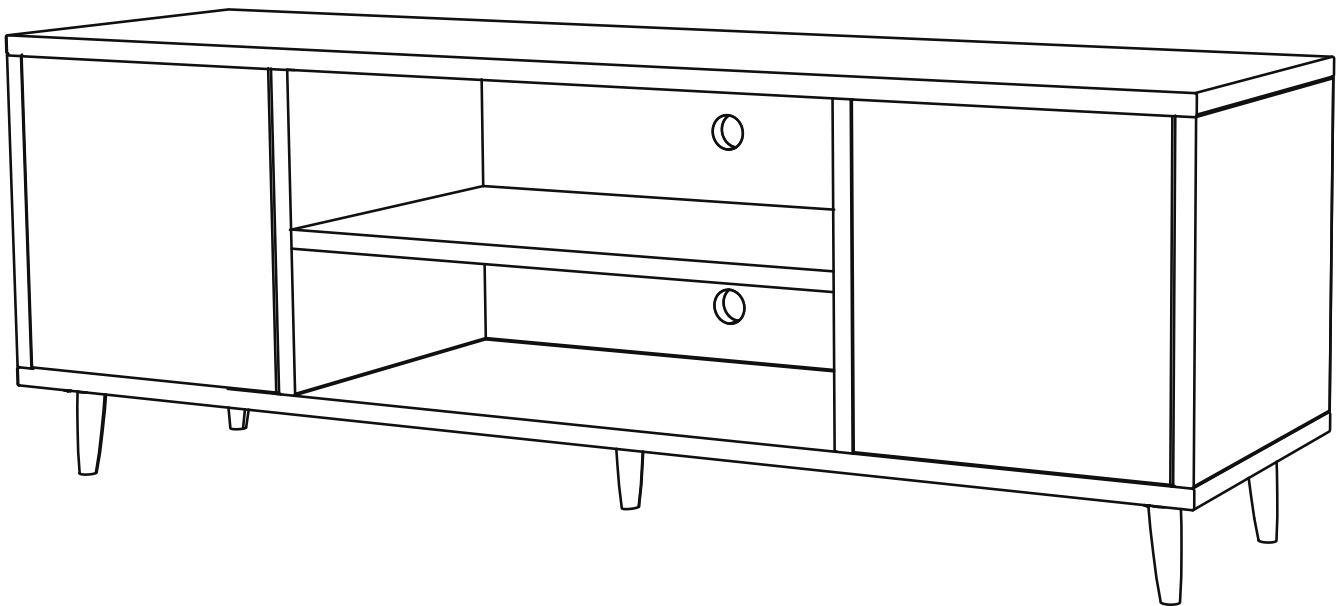

---

E-mail:  
[hofficeservice@gmail.com](mailto:hofficeservice@gmail.com)




---

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

---

# WARNING

 **MAXIMUM LOAD**  
220 lb / 30 kg

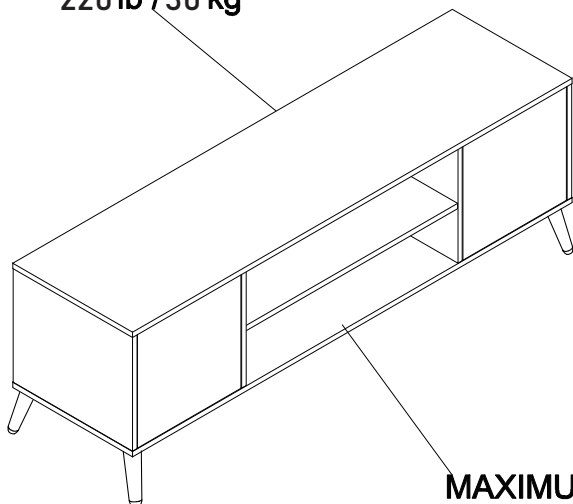


**MAXIMUM LOAD**  
20 lb / 9.1kg




Estimated Time for Assembly

**60 mins**

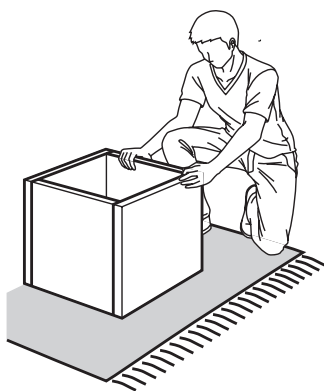 












**Assembling the furniture on empty carton, carpet, or rug to prevent scratches or damage.**

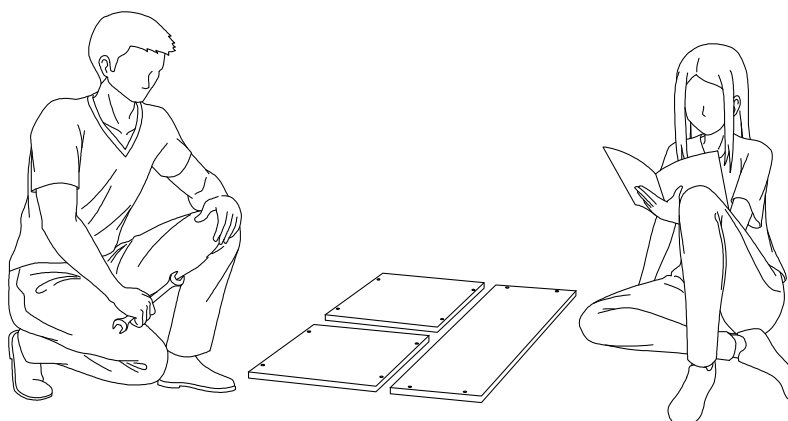 




**This furniture requires 2 people to assembly.**


**Make sure no parts missing or damaged before assembly.**
           
# CABINET PARTS
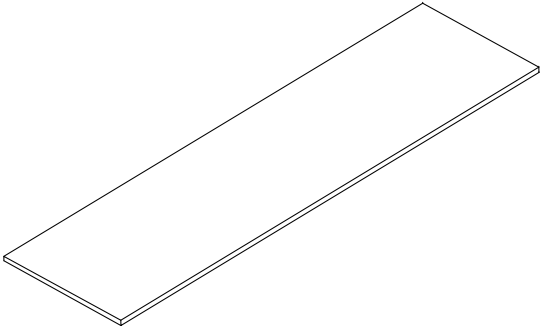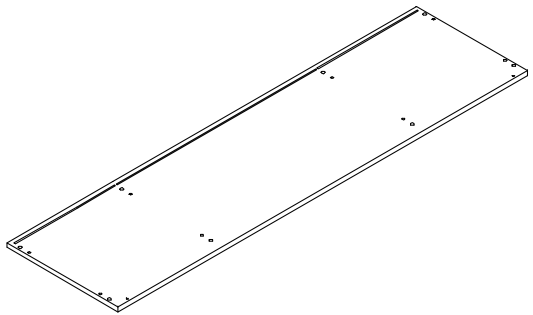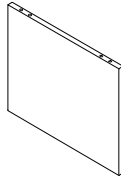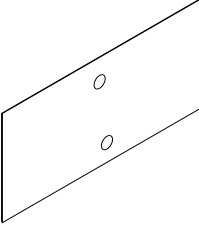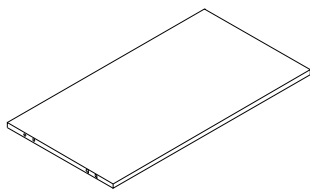
|                                                                                                 |                                                                                                 |                                                                                                   |
|-------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------|
|  <p>① X1</p>   |  <p>② X1</p>  |                                                                                                   |
|  <p>③ X2</p>   |  <p>④ X2</p>   |  <p>⑤ X2</p>   |
|  <p>⑥ X1</p>  |  <p>⑦ X1</p>  |  <p>⑧ X1</p>  |
|  <p>⑨ X1</p> |  <p>L X4</p> |  <p>R X1</p> |




 
 
 
PARTS

|                                                                                                                                |                                                                                                                               |                                                                                                                                |
|--------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------|
| <br>A<br>$\varnothing 6 \times 35$<br>X20+2   | <br>B<br>$\varnothing 15 \times 12$<br>X20+2 | <br>C<br>$\varnothing 8 \times 40$<br>X20+2 |
| <br>D<br>$\varnothing 3.5 \times 14$<br>X38+2 | <br>E<br>X4                                  | <br>F<br>F1<br>F2<br>X2                     |
| <br>G<br>X10                                  | <br>I<br>X4                                  | <br>J<br>X1                                 |
| <br>L<br>72*30*5mm<br>X1                      |                                                                                                                               |                                                                                                                                |


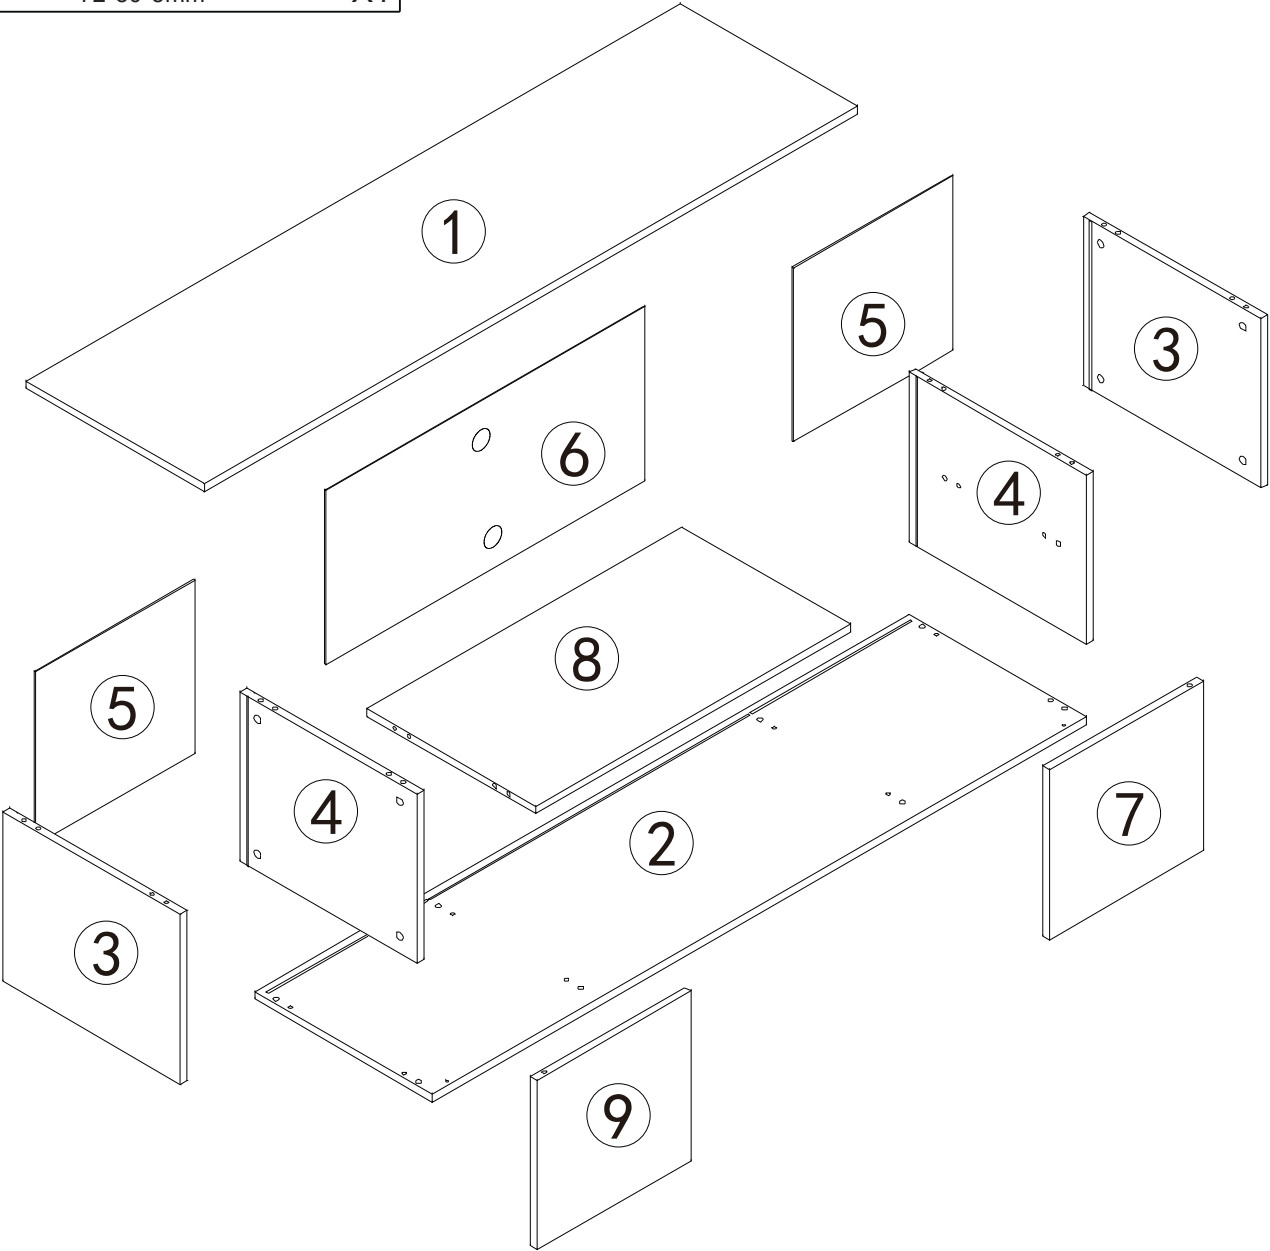 


# STEP 1

      
Push a CAM LOCK into the part  
The arrow in the CAM LOCK  
must point toward the hole on the  
edge of the board.

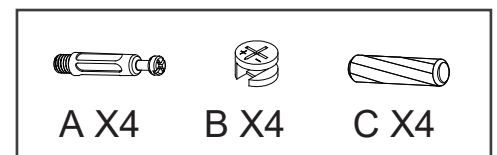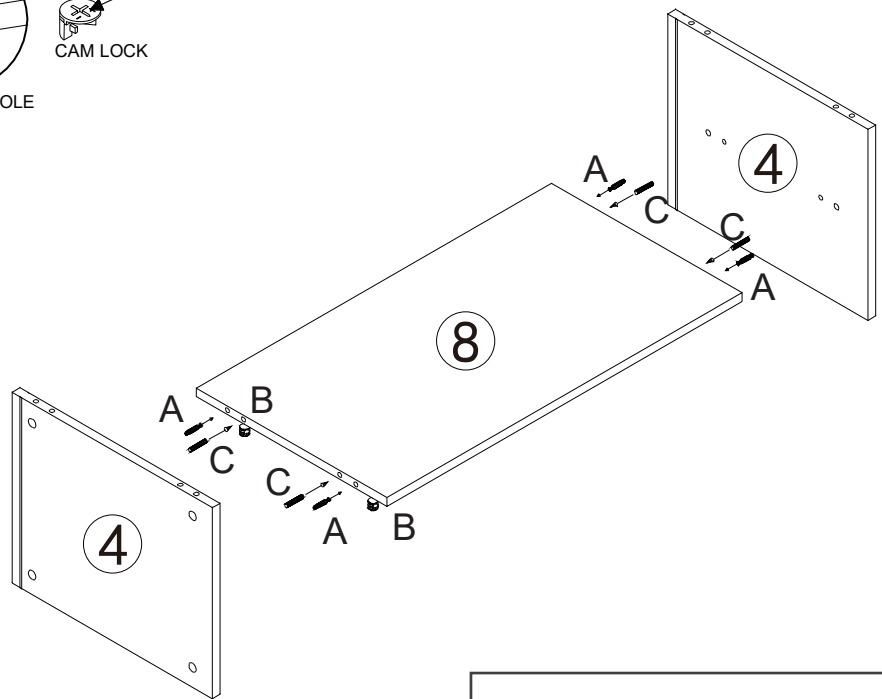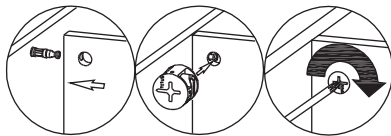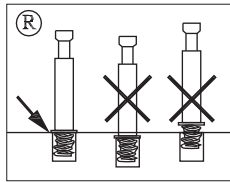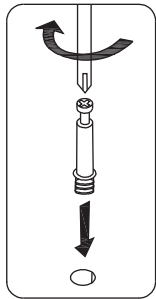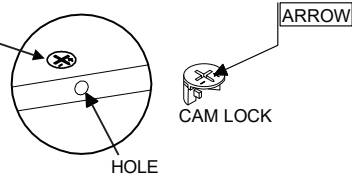



# STEP 2

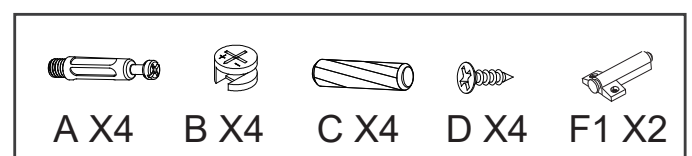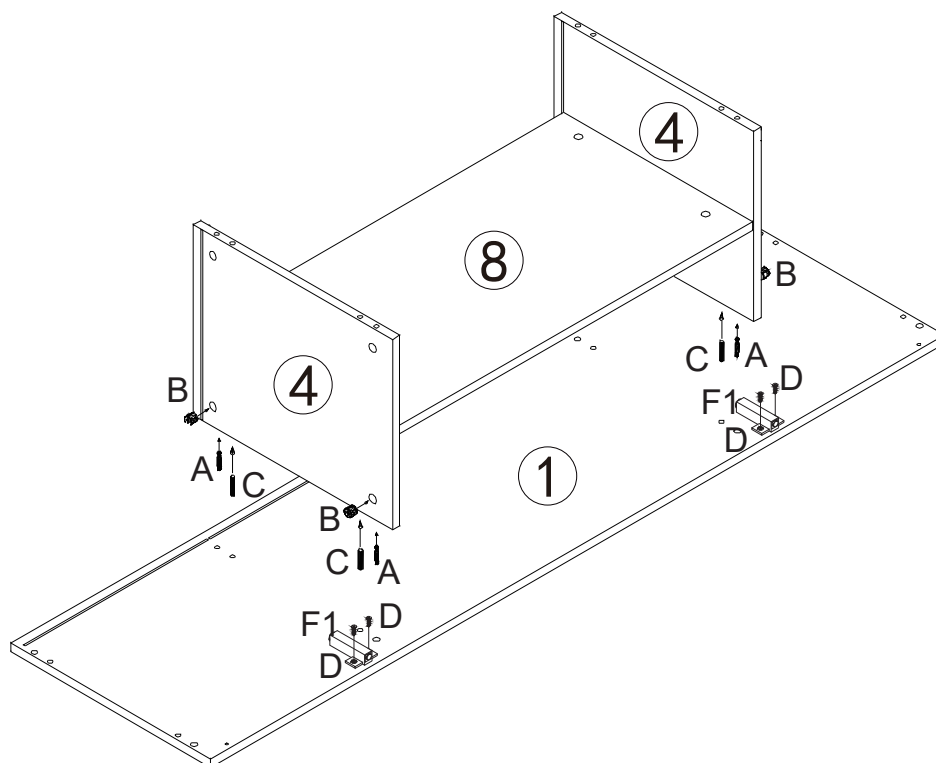  


## STEP 3

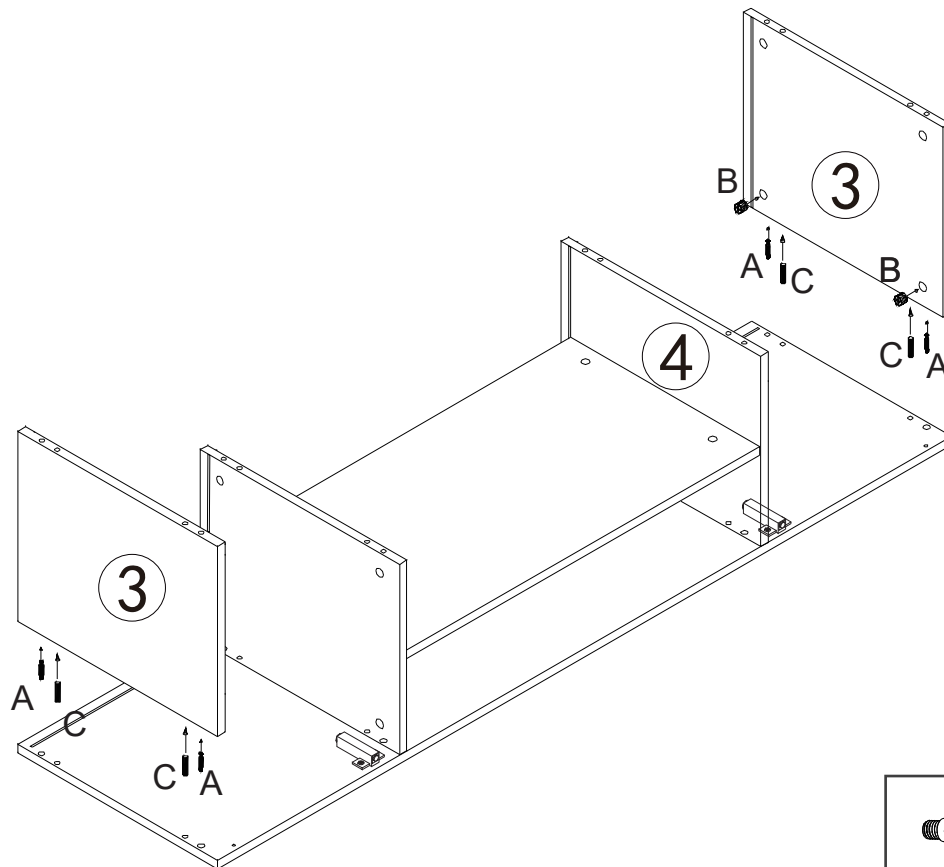 


## STEP 4

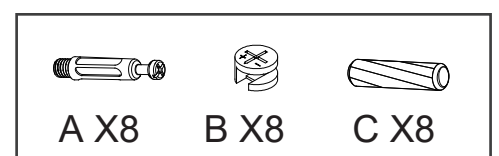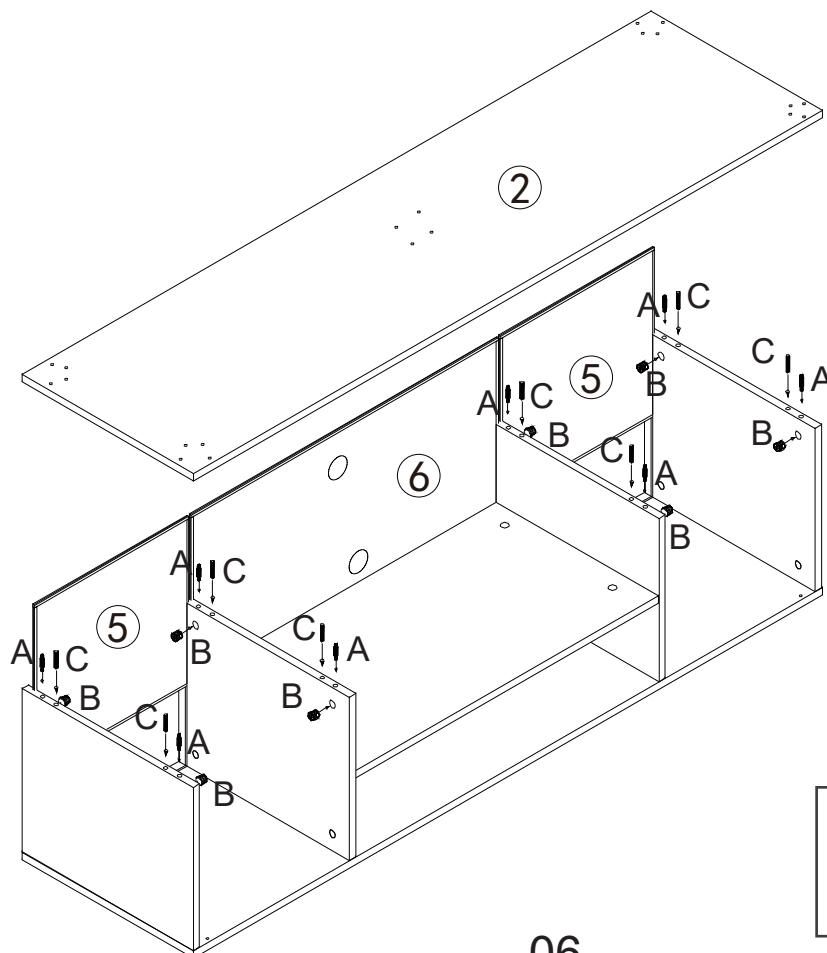  


## STEP 5

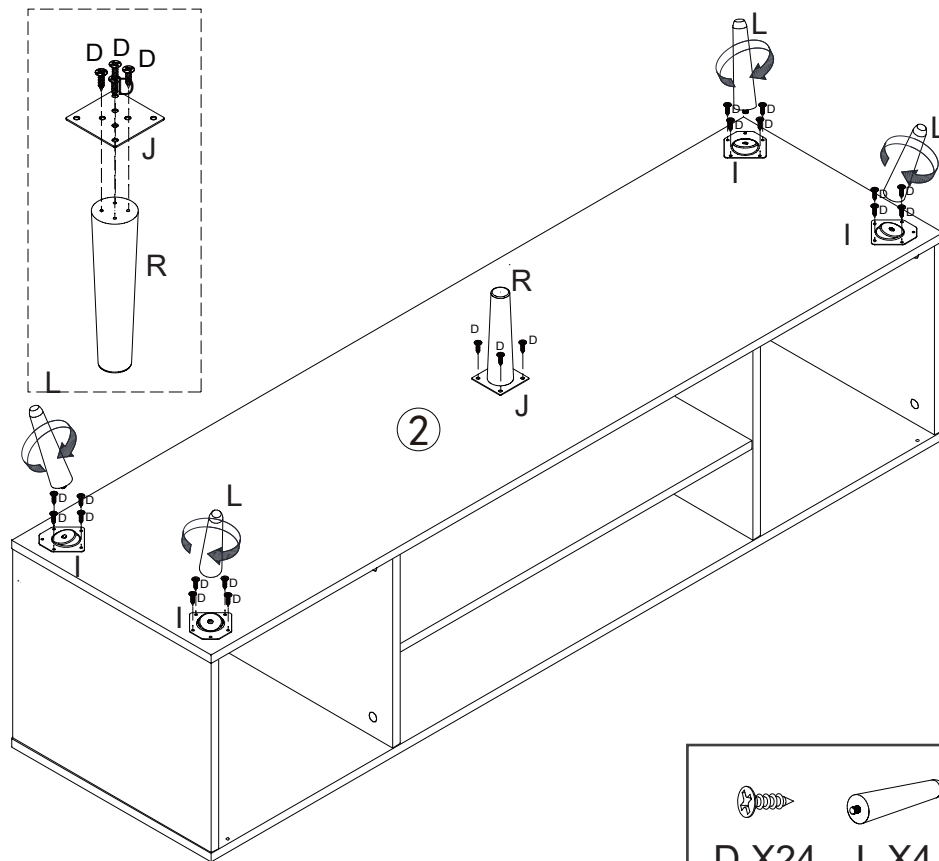 


## STEP 6

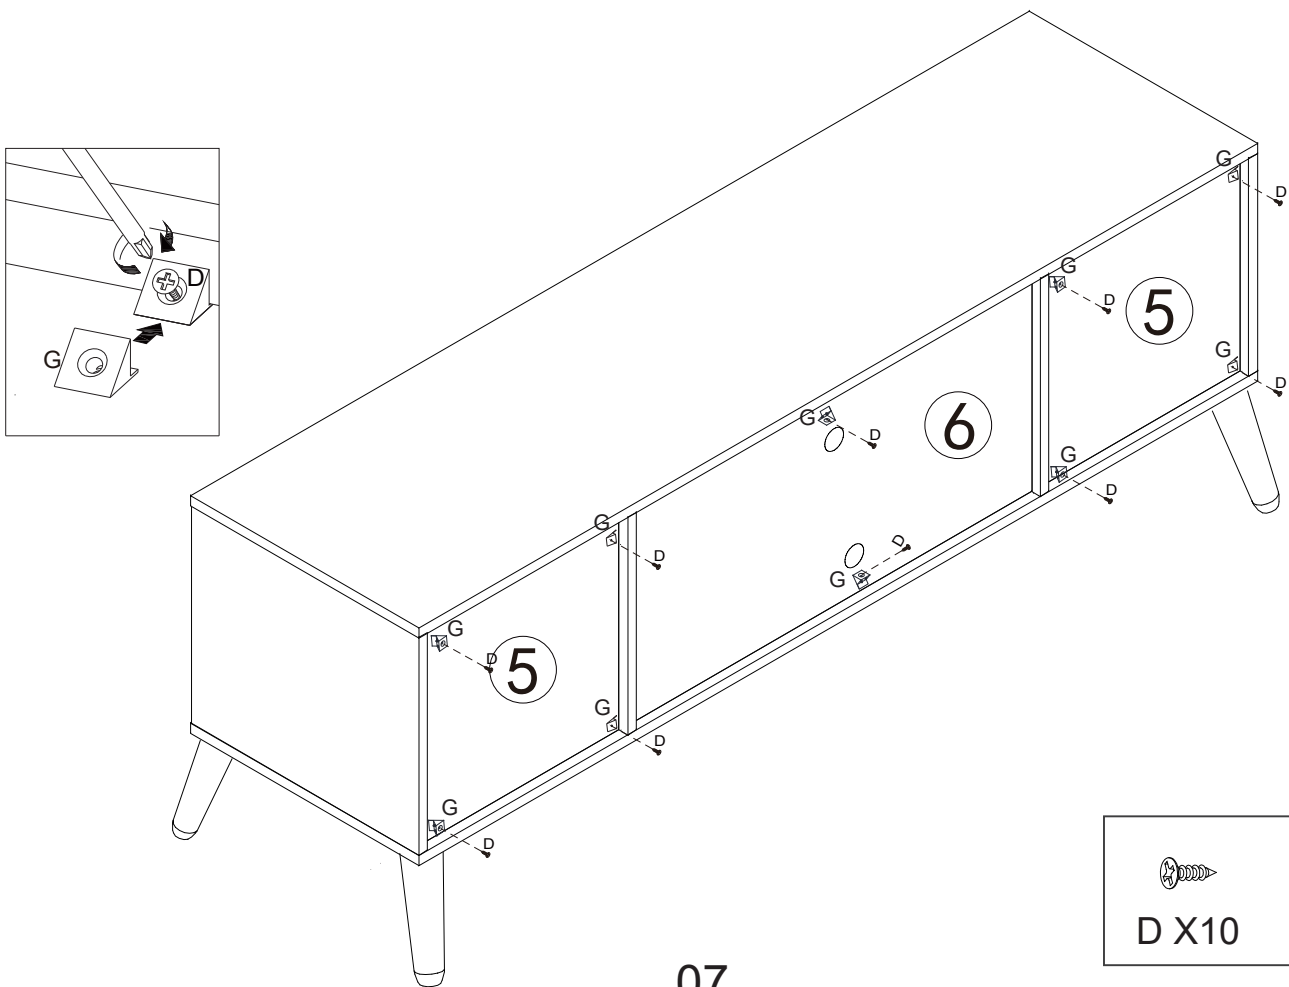 

## STEP 7

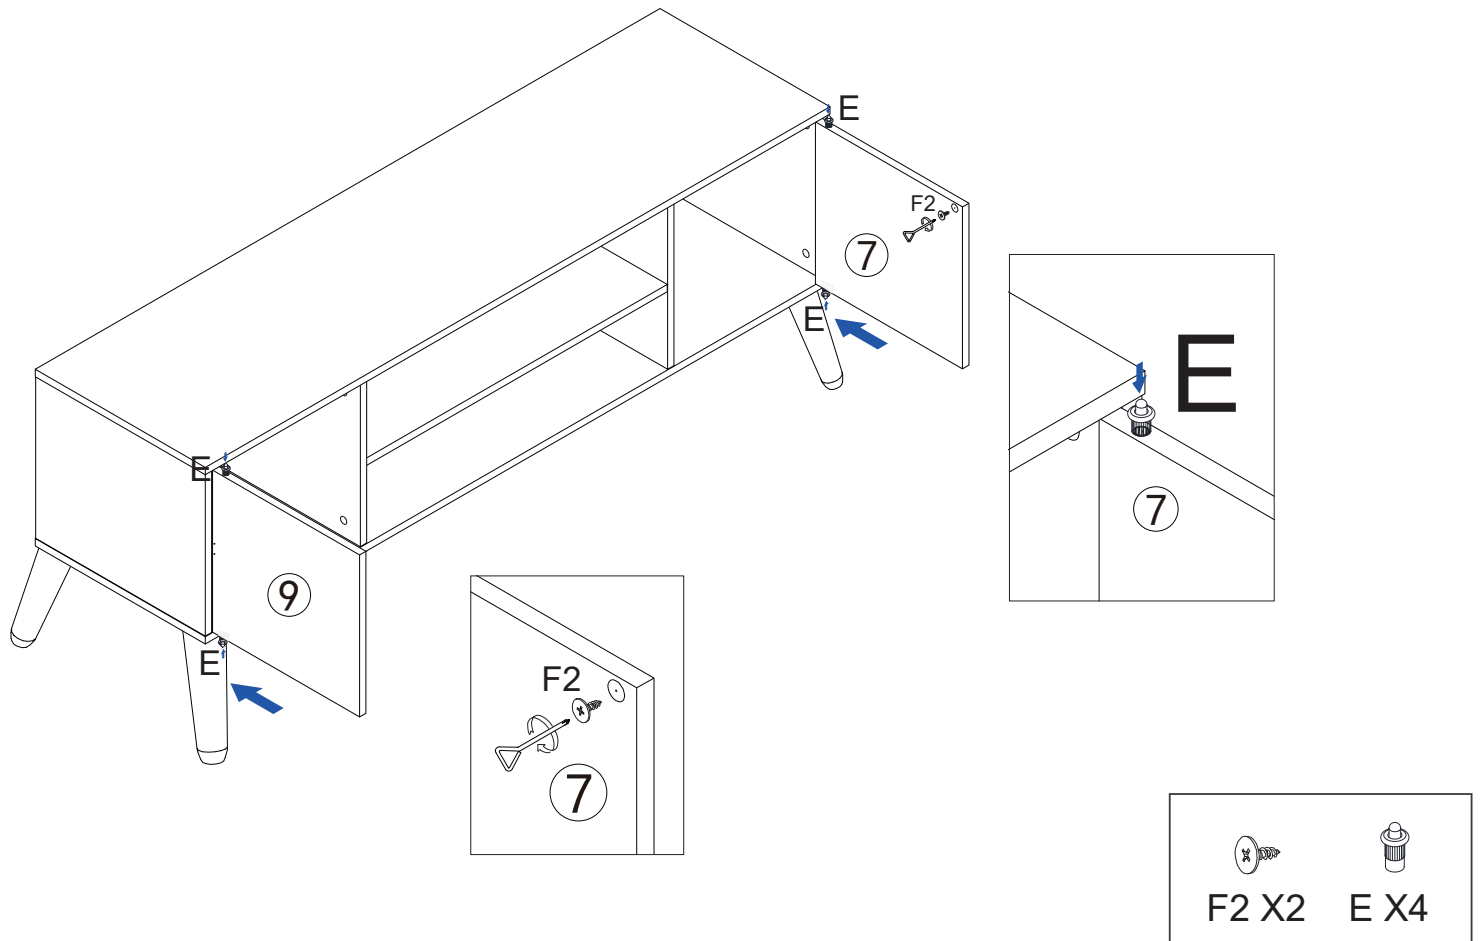 

## STEP 8

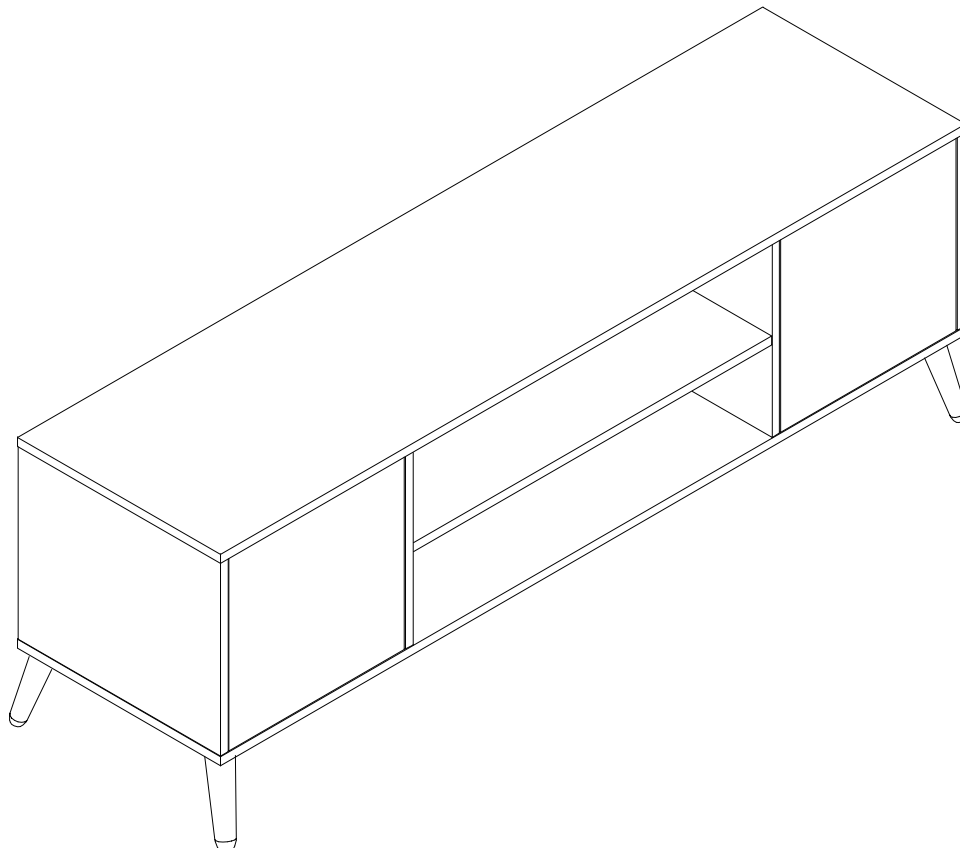 



# FURNITURE CARE AND MAINTENANCE

## Particle Board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



### MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



### CLEANING

- Clean the surface of the MDF (medium - density fiberboard) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

- ⚠ DO NOT use bleach or alcohol detergent to clean the surface.
- ⚠ DO NOT apply wood treatment on parts made with MDF.

Medium - density fiberboard will swell and distort when suffer from water damage.  
Make sure to dry the furniture immediately after cleaning