

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Support and E-Warranty Certificate www.vevor.com/support

CENTRIFUGAL JUICER INSTRUCTION MANUAL

We continue to be committed to provide you tools with competitive price.

"Save Half", "Half Price" or any other similar expressions used by us only represents an estimate of savings you might benefit from buying certain tools with us compared to the major top brands and does not necessarily mean to cover all categories of tools offered by us. You are kindly reminded to verify carefully when you are placing an order with us if you are actually saving half in comparison with the top major brands.

VEVOR®

TOUGH TOOLS, HALF PRICE

CENTRIFUGAL JUICER

MODEL:JE-70D



NEED HELP? CONTACT US!

Have product questions? Need technical support? Please feel free to contact us:

Technical Support and E-Warranty Certificate
www.vevor.com/support

This is the original instruction, please read all manual instructions carefully before operating. VEVOR reserves a clear interpretation of our user manual. The appearance of the product shall be subject to the product you received. Please forgive us that we won't inform you again if there are any technology or software updates on our product.

IMPORTANT ASSURANCE

WARNING: Before operating this device, please read this instruction manual completely and keep it handy for future reference. Always follow basic safety precautions when using these devices. These include:

This appliance may not be used by children. Store the appliance and its cord out of the reach of children.

The appliance may be used by persons with limited physical, sensory, or mental abilities or persons with no experience and knowledge if they remain under supervision or use the appliance safely per the user manual and understand the hazards.

Children may not play with the appliance.

Never use the juicer if the filter is damaged.

Clean all parts of the appliance in contact with food in accordance with the description in section CLEANING AND MAINTENANCE.

Switch off the appliance and unplug it before replacing accessories or coming into contact with moving parts of the appliance.

The appliance must always be used according to the recommended operating time. The maximum duration of continuous operation is 1 minute. After this time the appliance must be switched off for 2 minutes. After 3 cycles, before restarting it is recommended to stop using the appliance for 15-20 minutes until it cools down. The method adopted shall prolong the service life.

Do not use other accessories apart from those sold with the appliance.

WARNING: There is a risk of injury if the appliance is used contrary to its intended use. Care must be taken when handling the filter blades, emptying the filter and cleaning.

Always unplug the appliance when left unattended before assembly/disassembly and cleaning.

If the power supply cord is damaged, it must be replaced by the manufacturer, an authorized service, or qualified persons to avoid any hazard.

This appliance is intended for private indoor use only.

Before using it, always ensure that the supply voltage specified on the appliance label corresponds to the voltage in the power supply grid.

Do not use the unit if the appliance's power cord, plug, or other parts are damaged.

Do not immerse the drive base in water or other liquids. Do not wash it under running water. Clean the motor housing with a damp cloth only.

Observe the basic safety rules to avoid fire or electric shock risks when using electrical appliances, especially if children are present.

Do not immerse the plug, the power cord or the appliance in water or other liquids in order to avoid electric shock.

Do not hang the power cord over the edge of table or sink .

Do not use the appliance near flammable fabric (curtains, carpets); do not place it close to heat sources: gas cookers, electric cookers.

Do not cover the appliance during operation.

Do not put any items (cutlery, tools, etc.) inside the device during its operation.

Do not leave the appliance unattended while connected to the power supply.

Do not use the appliance if it is damaged or works incorrectly.

Do not use the appliance if it falls or has clear damage signs.

Do not attempt to open the body or disassemble any parts of the appliance.

Do not place the drive base on wet surfaces.

Never immerse the drive base in any liquid and prevent the liquid from penetrating the inside of the drive base housing.

Protect the appliance from moisture. Indoor use only.

If liquid enters the drive base housing, disconnect the appliance from the power supply and have it repaired by a service center.

Do not hold the appliance, the power cord, or the plug with wet hands.

Do not exceed the maximum appliance operation time.

Do not combine with elements or parts of other manufacturers.

Before inserting the plug into a wall socket, assemble the appliance in accordance with the manual.

Please cut off the power before dismantling, assembling or tuning any parts of the product.

If repairs are required during operation, please contact our customer service department or an authorised service centre. Never try to repair the juicer on your own.

Before starting the juicer, ensure the accessories, e.g., filter and lid, are correctly installed.

In operation, putting your hands or sharp objects into the feed port and any objects instead of the push rod is forbidden. In case of any accidents, please keep your eyes away from the feed port.

To avoid any personal injury or product damage, keeping your body or other complex objects away from the filter or motor wheel when starting up the product is required.

If the appliance stops working when in operation, it may be caused by the motor overheat protection. In such a case, before starting the appliance again, it is necessary to unplug it and wait for 20-30 minutes until the appliance cools down.

To prevent any damage caused by thermal strain, it is forbidden to disinfect the parts of the product with hot-water and microwave oven more than 80°C. Parts contacting the food are clean, sanitary and reliable, and have passed the necessary certificate.

The juicer body shall not be washed in water or other liquid (soft cloth available).

The product shall not be cleaned with the steel wool, abrasive cleaners or corrosive fluids (e.g. gasoline or acetone) .

Before processing, fruits, and vegetables with kernels, hard seeds, thick skin, or hard shells shall be removed.

This appliance is intended for home use only and may not be used for professional purposes . Any other use is considered to be inappropriate, and therefore, dangerous .


The manufacturer is not responsible for any damage resulting from improper use of the appliance.

This juicer is intended for squeezing citrus fruits such as orange, grapefruit, mandarin, lemon, and lime.

SAVE THESE INSTRUCTIONS

PARTS

Parts list

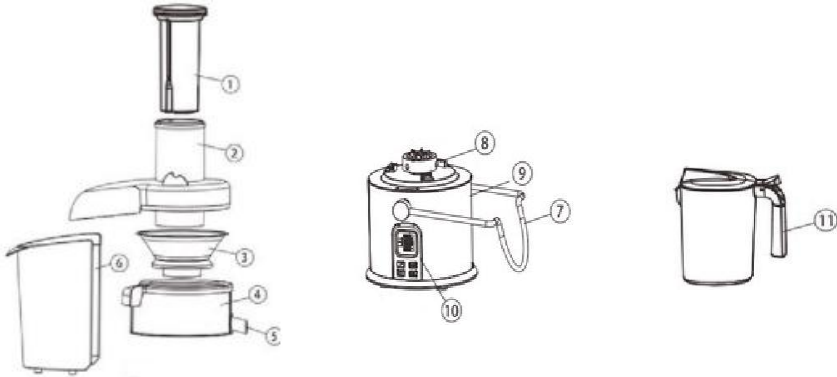

1. Pusher
2. Feed tube and Lid
3. Filter Basket
4. Juice Collector
5. Juice Spout
6. Pulp Container
7. Locking Arm
8. Driving Shaft
9. Motor Unit
10. LED digital control
11. Juice Jug

SPECIFICATIONS

Model: JE-70D

Power Supply Voltage: 120V~ 60Hz


Power: 850 W

Rotation Speed:11000~18000PRM


Material: PP, stainless steel

OPERATION INSTRUCTIONS

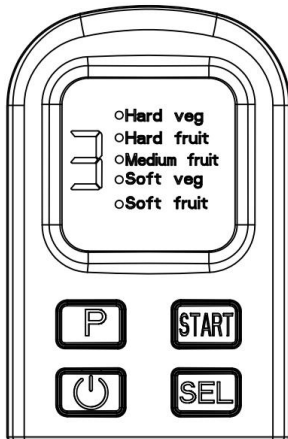


NOTE: Before using the appliance for the first time, clean it according to the instruction specified in Chapter CLEANING AND MAINTENANCE.




LED Monitor Description

- 1.On/Off 
- 2.Select Function (SEL)
- 3.Start (START)
- 4.Pulse(P)

 How to use LED digital control function

- 1.Plug in and Press "  " button, speed displaying number'3".
- 2.Press "SEL" to select the desired speed according to different fruit or vegetable.
- 3.After selecting the desired speed, press" START" to start process, After finishing  food process, press"  "button to power it off.
- 4.For precision operation, press"P" continuously. It stops when release the press finger.

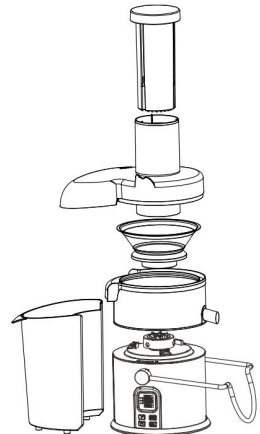

How to Dismantle and Assemble

DISMANTLE:



1. Unplug the appliances from the power supply.
2. Release the lock arm.
3. Remove the pulp container, transparent lid, and pusher, and pull the filter basket upwards and juice collector separately.

ASSEMBLE:

1. Place juice collector on the motor unit, and insert filter basket.
2. Mount transparent lid onto the juice collector, and fasten the lock arm upwards until it clicks into place.
3. Place the pulp container under pulp spout and put the juice jug under the juice spout.
4. Plug in and ready for operation.

Preparing for use

1. After unpacking the unit and before use, ensure all mechanical parts and attachments are not damaged.
2. Wash and dry all parts of the appliances, which will come into contact with food (figure 1). Clean the body of unit with a soft dry cloth.
3. Practice assembling and dismantling the unit a few times before making juice.
4. Wash fruit and/or vegetables and cut them into pieces that fit into the feeding tube (figure 2).

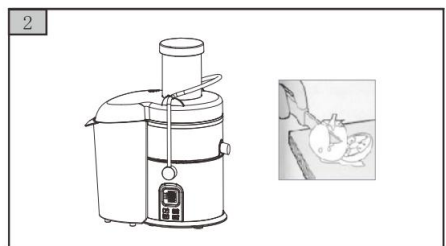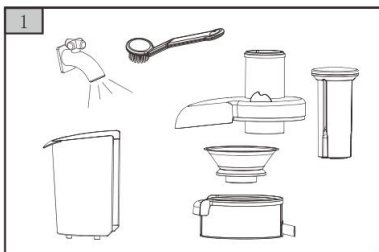


Using Juice Extractor


The appliance will only function if all parts have been properly assembled and the lid has been properly locked in place with the locking arm.




Place the juice collector onto motor unit and put the filter basket in the juice collector. Make sure the filter basket is fitted securely onto the driving shaft.

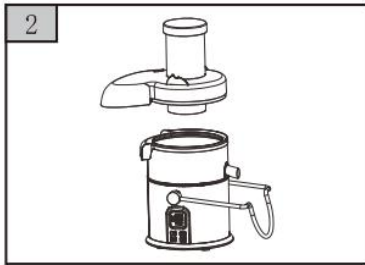

Place the lid, and lift the lock arm upwards to lock in position on either side of the lid.

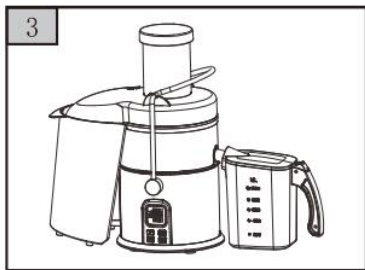

Place the pulp container into the appliance by tilting it forward slightly.

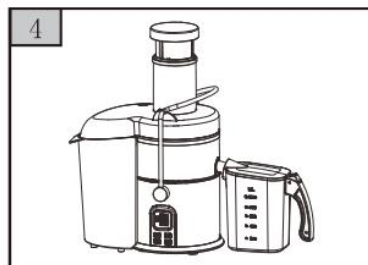

Slide the pusher into the feeding tube by aligning the groove in the pusher with small protrusion towards the inside of the feeding tube.

Operating Instructions

- This appliances is equipped with a safety lock system. If the transparent lid is not correctly placed or the lock arms are unfastened. The appliance will not function.
- Before starting, ensure the appliance is switched off and the transparent lid and locking arm are fastened properly.
- Wash fruits and vegetables thoroughly. Cut fruits into small pieces to fit into the feed tube. Remove the stone or peel from that citrus and fruits: prunes, apricots, cherries or oranges, lemons, melons, etc.
- Plug in, switch on the appliance, and choose the desired speed according to different fruits and vegetables.
- Speed 1:Soft fruits:grape, tomato and melon.
- Speed 2:Celery, citrus and cucumber
- Speed 3:Apple, pear,peach.
- Speed 4:Carrot, garlic, beet.
- Speed 5:Hard fruits and vegetables: pomegranate and potato.
- Put the pre-prepared fruits and vegetables into the feed tube and press the pusher down gently.
- NEVER USE FINGERS OR OTHER OBJECTS AS PUSHER.
- When pulp container or juice jug is full, switch it off and empty the containers before continuing the process.

ATTENTION:

- Do not run the juice extractor continuously for longer than 2 minutes. Should more time is required, occasionally switch it off to allow the appliance to cool down.

CAUTION:

- Remove large seeds or pits from fruits like apricot, peach, plum, cherry, etc., and peel off if the fruits with thick seedcase or seedcase are inedible.
- Unsuitable fruits and vegetables: banana, mango, papaya, and coconut or other hard foods.
- When the process is completed, switch it off and unplug the unit.

CLEAN AND MAINTENANCE

Switch off the appliance and unplug before cleaning.

The appliance is easier to clean if you clean it immediately after use.

Do not use abrasive cleaning agents, scourers, acetone, alcohol etc. to clean the appliance. All detachable parts are dishwasher-safe.

Clean these parts with the cleaning brush in warm water with some washing-up liquid and rinse them under the tap.

Wipe off the motor unit with a soft dry cloth, and keep it away from water. Blade is sharp, take special care when cleaning.

Check the filter basket regularly for signs of damage. Do not use it if the filter basket is damaged. Never immerse the motor unit in water nor rinse it under the tap.

After cleaning, allow all the parts to dry completely before reassembling the appliance. The filter may be cleaned with the cleaning brush attached.

TROUBLESHOOTING

If any irregularities are found during operation of the appliance, read the table below to identify the cause and to find a solution to the problem .

| Problem | Possible cause | Solution |
|----------------------------------|--|--|
| The appliance does not turn on . | <ol style="list-style-type: none">1. Incorrect installation of the central ring .2 . Head cover installed in wrong place. | <ol style="list-style-type: none">1. Install the central ring in a proper place.2 . Install head cover in place .3 . Replace the lid . |

| | | |
|--|--|---|
| <p>During the first start of the appliance, unpleasant smell may be released .</p> | <p>It is normal.</p> | <p>Please send the product to our company's maintenance point nearby if the product still gives off unpleasant smell after repeated use.</p> |
| <p>The product stops while in operation.</p> | <ol style="list-style-type: none"> 1. Under voltage 2 . Excessive ingredients 3 . Push the rod with excessive force 4 . Motor thermal control protection | <ol style="list-style-type: none"> 1. Check if under voltage 2 . Disconnect power, take out the surplus ingredients . 3 . Push the rod gently. 4 . Restart it after stopping 20-30 minutes . |
| <p>The juice contains a lot of pulp .</p> | <ol style="list-style-type: none"> 1. Juice extraction net damaged . 2 . Too much pomace in the central ring . | <ol style="list-style-type: none"> 1. Replace the net . 2 . Clean the central ring . |
| <p>Abnormal vibration or big noise .</p> | <ol style="list-style-type: none"> 1. Improper installation of juice extraction net and poor running balance. 2 . Unstable placement of product or come off of foot pad . 3 . Over voltage 4 . Excessive ingredients | <ol style="list-style-type: none"> 1. Install juice extraction net in proper place. 2 . Place product stably or install the foot pad in proper place . 3 . Check if any over voltage . 4 . Disconnect power, take out the surplus ingredients . |
| <p>Small amount of juice.</p> | <ol style="list-style-type: none"> 1. Much pomace in the central ring . 2 . Press the push rod with excessive force. | <ol style="list-style-type: none"> 1. Clean central ring . 2 . Press the push rod with proper force. |

| | | |
|--------|--------------------|---|
| Filter | Filter is clogged. | Unplug the appliance and remove any clogging pieces of food material from the filter. |
|--------|--------------------|---|

VEVOR[®]

TOUGH TOOLS, HALF PRICE

Technical Support and E-Warranty Certificate

<https://www.vevor.com/support>

Made In china