

# IMPORTANT SAFEGUARDS

1. READ ALL INSTRUCTIONS BEFORE USE.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock, and injury to persons, do not immerse cord or plug in water or other liquids.
4. This should not be used by or near children.
5. Unplug the unit from an outlet when not in use and before cleaning. Allow it to cool before putting on or taking off parts, and before cleaning appliance.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been damaged in any manner.
7. The use of accessory attachments not recommended by Blue Diamond may result in fire, electrical shock, or risk of injury to persons.
8. Do not use outdoors.
9. Do not let power cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near hot gas or electric burner, or in a heated oven.
11. Unplug the unit when finished using.
12. Do not use appliance for other than intended use.
13. Extreme caution must be exercised when moving an appliance containing hot oil or other hot liquids.
14. To disconnect, remove plug from wall outlet.
15. Do not use on plastic or synthetic tablecloths or any unstable surface or near flammable goods, including curtains, draperies, walls, and the like as fire may occur.
16. Do not touch the plate surface while in use or before cooling down, even when then the power is switched to the "OFF" position.
17. Do not touch the stainless steel cover during use.
18. Do not leave unattended during use.

# SAVE THESE INSTRUCTIONS

## FOR HOUSEHOLD USE ONLY

---

### CORD SET INSTRUCTIONS

To reduce the risks of tripping or entanglement, a short power-supply cord is provided. Extension cords are available and may be used with care. If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it may be pulled by children or animals, or tripped over.

### NOTICE

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will only fit in a polarized outlet one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.

### CONTENTS

Introduction.....	3
Parts & Features .....	3
Before Using .....	3
Bring Diner Classics Home.....	3
Assembly Instructions .....	4
Operating Instructions .....	5
User Maintenance .....	6
Cleaning & Care.....	6
Storage.....	6
Warranty.....	7