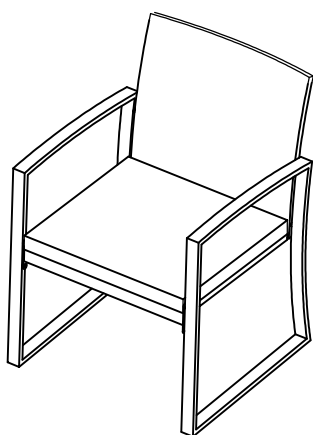 
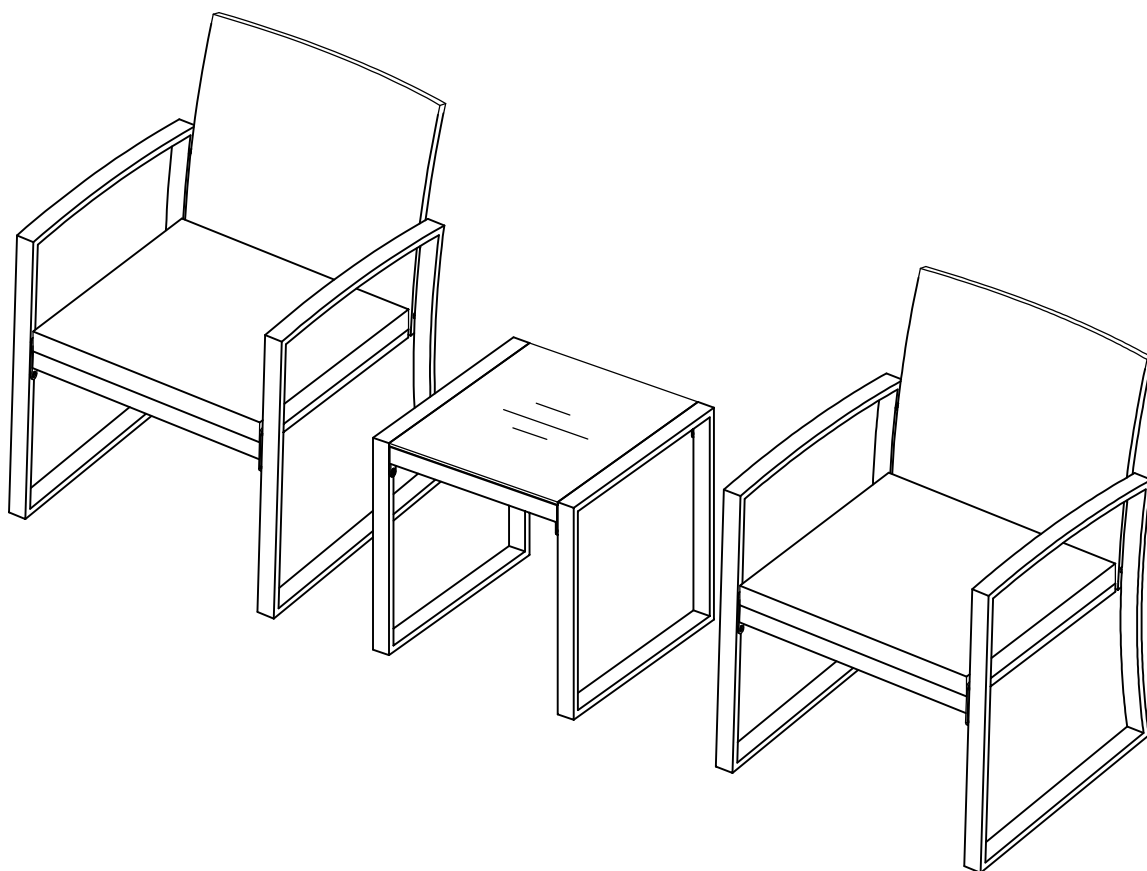 
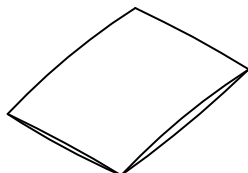 
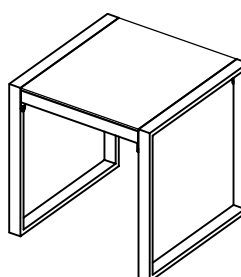 


F02B141-F & F02B142-F & F02B143-F & F02B144-F
3-PIECE WICKER BISTRO SET



x 2

 
 
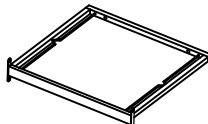 
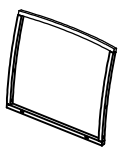 
 
 
 


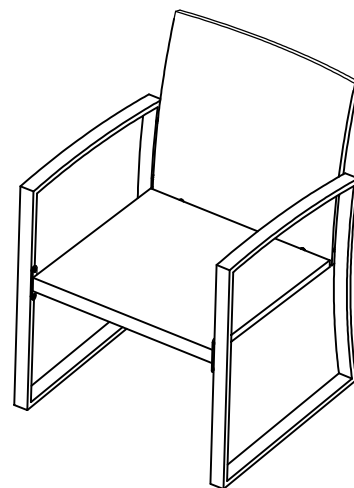 
Assembly
bag

1SET/CTN

F02B141 & F02B142 & F02B143 & F02B144 Chair

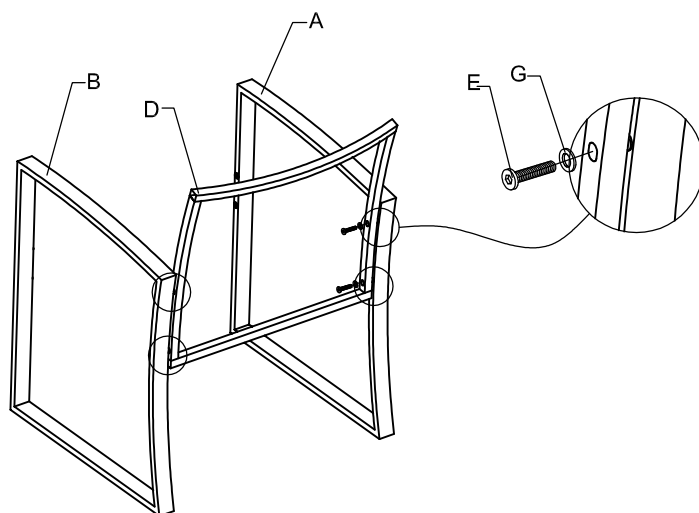 
(DO THIS TWO TIMES)

A		Right Arm Rest	1
B		Left Arm Rest	1
C		Seat Base	1
D		Seat Back	1
E		M6x35 Socket Head Cap Screw	6
F		M6x20 Socket Head Cap Screw	4
G		Flat Washer	10
H		4-mm Allen Key	1
J		Riser 6	4



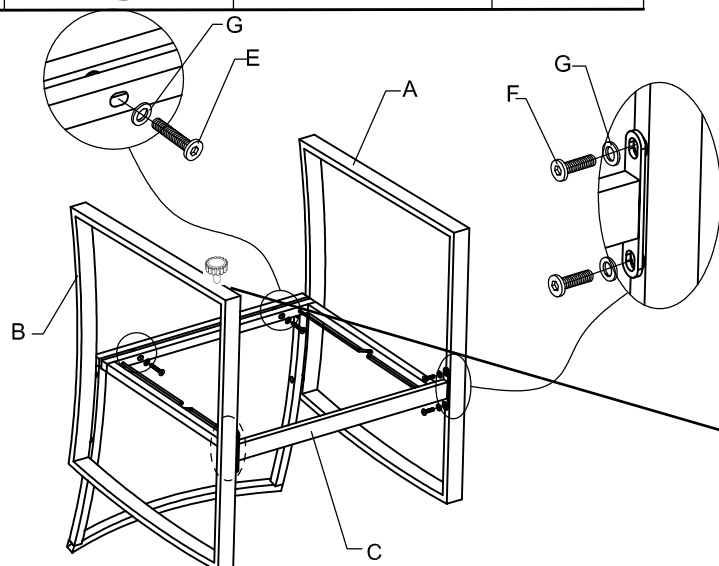 
1

Secure the arm rests (A & B) to the seat back (D) using a M6 x 35 socket head cap screws (E) with a washer (G), Do this in four places.

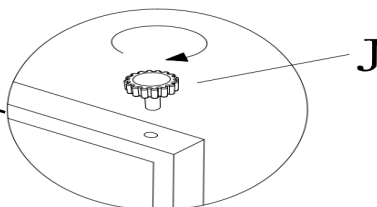 


2

Attach the seat base (C) and the seat back (D) using a M6 x 35 socket head cap screw (E) with a flat washer (G). Do this in two places.



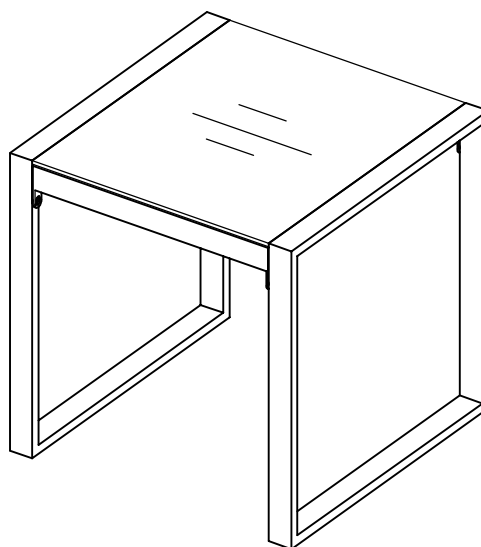 
Secure the seat base (C) to the arm rests (A & B) using a M6 x 20 socket head cap screws (F) with a washer (G), Do this in four places.



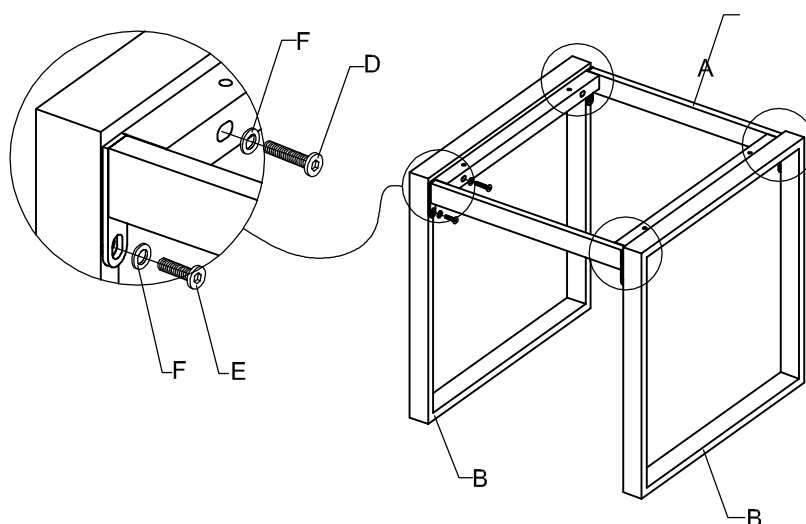 
F02B141-F & F02B142-F & F02B143-F & F02B144-F

Coffee Table

A		Table Top	1
B		Legs	2
C		Glass Top	1
D	 M6*35	M6x35 Socket Head Cap Screw	4
E	 M6*20	M6x20 Socket Head Cap Screw	4
F		Flat Washer	8
G		4-mm Allen Key	1
H		Riser 6	4

**1**

Attach the table top (A) and the legs (B) using a M6 x 35 socket head cap screw (D) and M6 x 20 socket head cap screw (E) with a flat washer (F). Do this in four places.

**2**

Flip the assembly back then place the glass top (C) on it.

