

- Fits Fiskars® pruning saw models 9301, 9300, 9261, 9240 and 9461
- WoodZig® blade technology cuts on the pull stroke for less binding
- Fully hardened steel blade

## Saw Blade Assembly

- **WARNING** – Loose, sharp saw blade in packaging.
- Remove and save wing nut that holds packaging to pruner head.
- Carefully remove saw blade from packaging and align blade end openings with carriage bolt and locking pin in pruner head.
- Attach washer-faced wing nut to bolt and tighten securely.

