




# Assembly Instructions

**Caution : You must read this before you proceed**

## Glider Recliner with Swivel

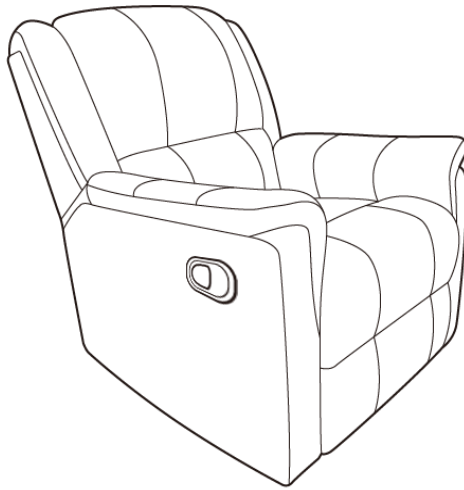

 
### Parts List

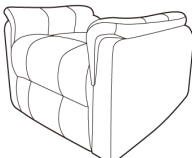Label	Picture	Description	QTY
A		Chair Backrest	1
B		Chair Base with Footrest	1

## Assembly Preparation

Before Beginning Assembly:

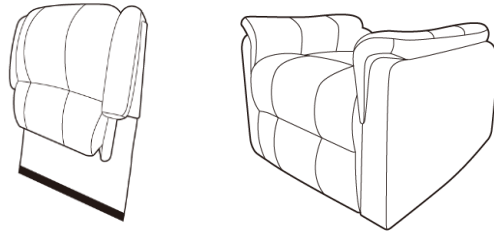

- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-



- Save all packaging until finished-


## Assembly Steps

Parts Introduction

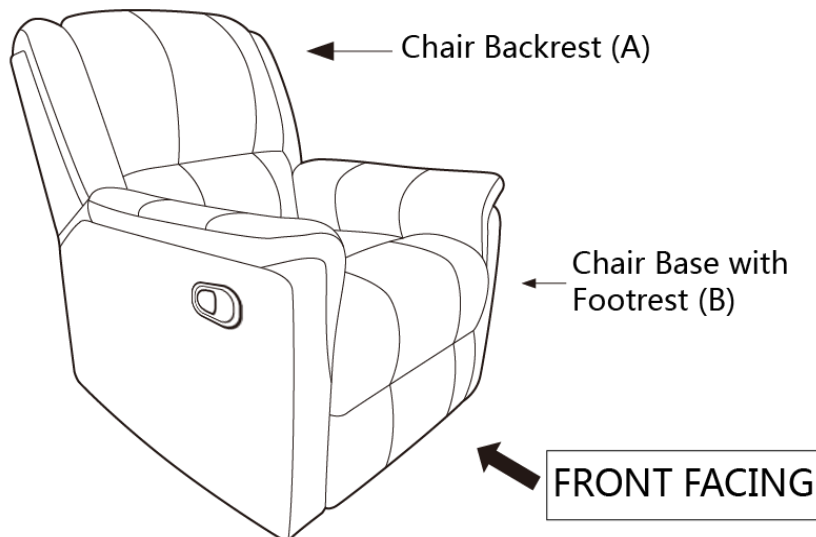


This Reclining Chair has multiple parts and may require up to some 30 minutes to assemble. To give you an overview of the Reclining Chair parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

**Step 1**

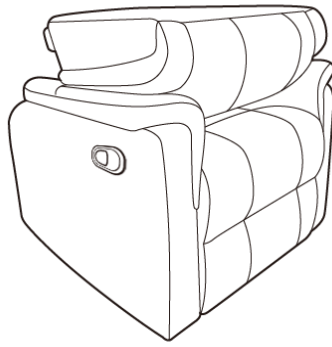


Remove the Chair Backrest(A) from the Base with Footrest(B).

**Step 2**

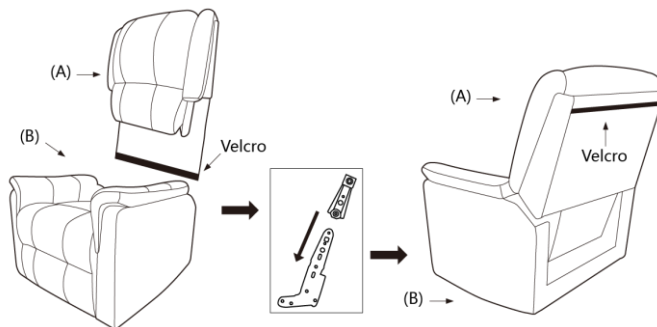


With assistance from your adult partner, hold up the Chair Backrest(A), standing behind the Recliner Chair. Insert the small metal arms on the sides of the Chair Backrest(A) into the prefabricated slide lock gadget on the Chair Base with Footrest(B) as shown above. Firmly but gently, push the Chair Backrest(A) downwards until the Backrest(A) is fully slotted and locked into position.

**Step 3**

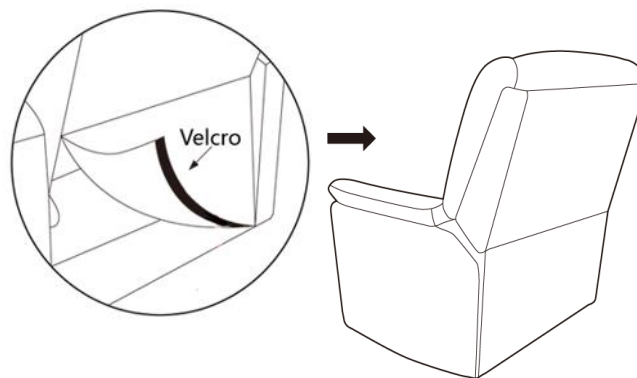


Smooth down the fabric flap on the Chair Backrest(A). Run your hands down both sides of the flap, from top to bottom, allowing the velcro tape to adhere to the flap under the seat of the Recliner Chair.

**Step 4**

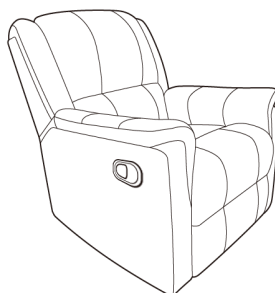

Make sure all parts are connected and securely locked into position.  
Your Glider Recliner Chair is ready for use.

### Step 5

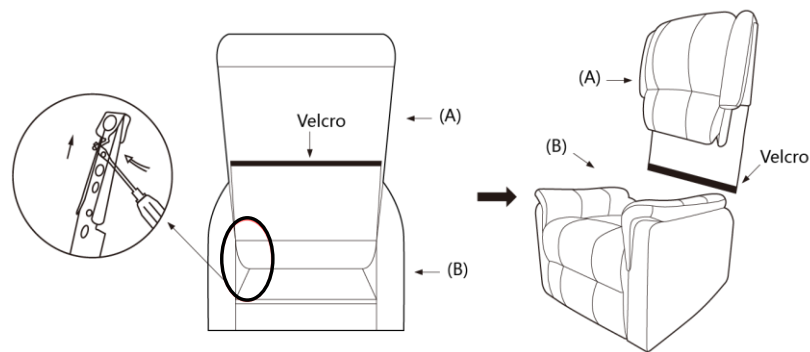


**Disassembly Note:** Open the flap on the Chair Backrest(A), use a screwdriver (Don't use fingers) pressing outward on the metal ear on the preattached Metal Bracket on one side of the Chair Base(B), with assistance of your adult partner to keep the Chair Base(B) in place, pull out the Chair Backrest(A) upward at the same time, repeat the same step for another side. Then the Chair Backrest(A) can be taken out.

**User Instructions.**

**Glider Reclining Chair**


Please read the Instruction Manual below carefully before use.

Children must be supervised when using this Recliner Chair.

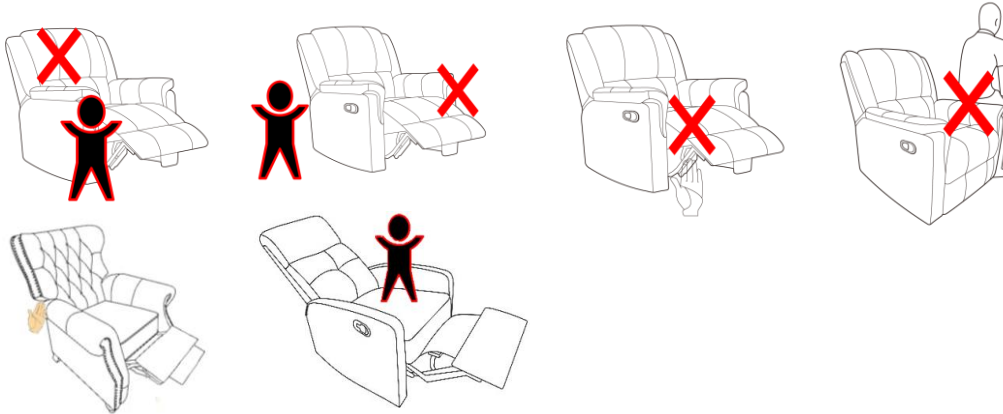

- Do not let children stand in front of or behind the Reclining Chair when opening or closing the footrest.
- Do not put your hands inside the Footrest when opening or closing the footrest.
- Do not sit any side of chair.
- Do not stand on the chair.
- Do not put your hands between the back and the armrest.
- Do not put your hands around the clips of the storage arm.


The Chair Backrest will slide down and footrest will open when you push your back firmly into the Chair Backrest.  
Push the button on the outside of the left armrest.  
Use your body weight and push backwards into the seat into a fully reclined position.

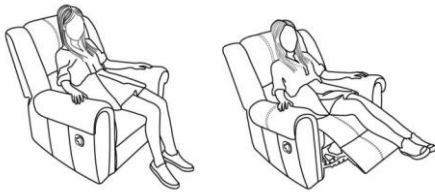







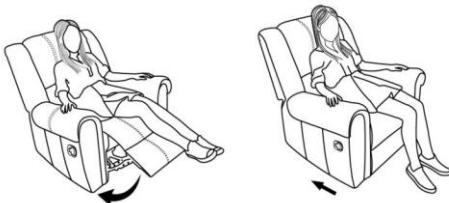



To get out of chair - move Seatback into Upright Position

Tilt your body weight slightly forward and upwards.  
The seat back will come up to an upright position.  
The chair will automatically lock when it is in the fully upright position.  
Where necessary, use your arms help lift/push yourself out of the seat.

Use your feet to push



## Care & Maintenance

-  Do not put hot items directly on furniture surface
  -  Do not clean furniture with harsh cleansers or polish.
  -  Do not place furniture under direct sunlight.
  -  Do not place furniture near heating or cooling vents.
  -  Do not write on furniture without a padded barrier to protect the surface.
  -  Do not place furniture outside . For indoor use only .
  -  Not for commercial use. For residential use only .
  -  Stains may be removed with mild soap solution and damp cloth.
  -  Children should not climb or jump on the furniture.
- 
-  Dust and pick-up spills using a clean, non-colored, lint-free cloth .

### What is Proposition 65?

Proposition 65 is a California law that requires warning labels on products that may contain one of more than 800-plus chemicals or ingredients that the California Office of Environmental Health Hazard Assessment (OEHHA) has deemed to cause cancer or other reproductive toxicity. Chemicals and elements on this list include wood dust, brass, and other everyday substances, which can be found in very common household items, such as: lamps, tableware, jewelry, crystal glasses, electric cords, beauty products, automobiles, and furniture.

### Why Did I Find a Proposition 65 Warning on My Home Goods Product?

We include Proposition 65 warnings on all of our products because there is always a chance that one of the 800-plus common chemicals and ingredients listed under this law could potentially be on our furniture or packing materials. We risk large fines under this law, if we don't include this warning.

### Should I worry?

We realize you may be worried finding this warning on our products, but we want to reassure you that the hazardous exposure limits for any of these chemicals have never been found on furniture products that we've shipped to our customers. Additionally, this warning label is very common and can be found on almost every piece of furniture sold in the state of California.

### Just How Common Are Proposition 65 Warnings?

Proposition 65 warnings have become so common in California that it is hard to take a trip to a local bank, grocery store, or restaurant without finding at least one warning. In fact, even the Disney Land Resort has a Proposition 65 warning:

