




## 2 TON EXTENDED REACH HEAVY DUTY STEEL JACK STANDS

### Maintenance

The jack stands shall be maintained in accordance with the product instructions.


#### 1 When the Jack Stands Are Not Jack Stands ar in Use

When stand is not in use, the ratchet should be in fully lower position.

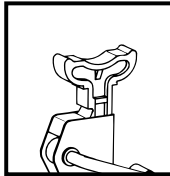

#### 2 Keep the Locking Mechanism Clean

Keep moving parts clean. Make sure the locking mechanism is free of debris.

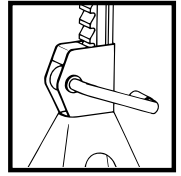

#### 3 Wipe the Jack Stands Every Two Months

Always keep jack stands clean and wipe them with oilcloth every two months.

Visual inspection shall be made before each use of the jack stands by checking for abnormal conditions, such as cracked welds, leaks, and damaged, loose, or missing parts.

Other inspections shall be made per the product operating instructions.

Each jack stand shall be made per the product operating instructions.

Each jack stand shall be inspected immediately if the device is believed to have been subjected to an abnormal load or shock. It is recommended that this inspection be made by a manufacturer's or supplier's authorized repair facility.

Owners and/or operators should be aware that repair of this equipment may require specialized knowledge and facilities. It is recommended that an annual inspection of the jack stand be made by a manufacturer's or supplier's authorized repair facility and that any defective parts, decals, or safety labels or signs be replaced with manufacturer's or supplier's specified parts. A list of authorized repair facilities is available from the manufacturer or supplier.

Any jack stand that appears to be damaged in any way, is found to be worn or operates abnormally **SHALL BE REMOVED FROM SERVICE UNTIL REPAIRED**. It is recommended that necessary repairs be made by a manufacturer's or supplier's authorized repair facility if repairs are permitted by the manufacturer or supplier.

Because of potential hazards associated with this type of equipment, no alterations shall be made to the product.

Only attachments and/or adaptors supplied by the manufacturer shall be used.

## Care and Cleaning

---

Maintain the product according to these instructions. You may not alter this product in any way.

1. Before using, inspect the jack thoroughly. Look for cracks in the welds, bent, damaged, loose, worn or missing parts.
2. Inspect according to this manual **ONLY**.
3. If the jack has been subjected to abnormal load or shock (abuse), perform an immediate inspection. Take the product to a local customer service representative for an authorized inspection before use.

## Troubleshooting

---

Problem	Possible Cause	Solution
The jack stand will not lift to full height.	Make sure nothing is obstructing the stem.	Clear out debris.
The jack stand will not hold the load.	Check the locking pin and release the handle to make sure they are functioning properly.	Call customer service.
The lift arm stem will not lower.	Check the locking pin and release the handle to make sure they are functioning properly.	Call customer service.