

USE AND CARE GUIDE

LED FLAT PANEL FIXTURE

| BLP-14-U-P-XX-XXK-80-D-X | |
|--------------------------|--------------------------|
| | |
| | BLP-24-U-P-XX-XXK-80-D-X |
| | |

BLP-22-U-P-XX-XXK-80-D-X

Questions, problems, missing parts? Before returning to the store, call Commercial Electric Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-844-584-3776

HOMEDEPOT.COM

Table of Contents

| Table of Contents |
|--------------------|
| Safety Information |
| Warranty 2 |
| Pre-Installation |
| Tools Required |
| Hardware Included3 |
| Specification |
| Installation |

Safety Information

For your safety, always remember to:

- Turn off the power supply at the fuse or circuit breaker box before you install the fixture.
- Ground the fixture to avoid potential electric shocks and to ensure reliable starting.
- Double-check all connections to be sure they are tight and correct.
- Wear rubber soled shoes and work on a sturdy wooden ladder.
- Account for small parts and destroy packing material, as these may be hazardous to children.

This fixture is designed for use in a circuit protected by a fuse or circuit breaker. It is also designed to be installed in accordance with local electrical codes. If you are unsure about your wiring, consult a qualified electrician or local electrical inspector, and check your local electrical code.

Supplier's Declaration of Conformity 47 CFR § 2.1077 Compliance Information

Unique Identifier: See detail on specification in user manual with marked Responsible Party – U.S. Contact Information

ERAN FINANCIAL SERVICES LLC 3500 NW Boca Raton Blvd, Suite 717, Jupiter, Florida, 33427, United States Telephone Number: 845-264-4855

\mathbb{N}

WARNING: RISK OF SHOCK. House electric current can cause painful shock or serious injury unless handled properly.



CAUTION: Turn off the main power at the circuit breaker before installing the fixture, in order to prevent possible shock.

NOTICE: All electrical connections must be in accordance with local and National Electrical Code (N.E.C.) standards. If you are unfamiliar with proper electrical wiring connections obtain the services of a qualified electrician.

Remove the fixture and the mounting package from the box and make sure that no parts are missing by referencing the illustrations on the installation instructions.

FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help. Any changes or modifications not expressly approved by the manufacture could void the user's authority to operate the equipment.


Warranty

LIMITED WARRANTY

This product is warranted to be free from defects in workmanship and materials for up to 5 years from date of purchase. If it fails to do so, please contact the Customer Service Team at 1-844-584-3776 or visit www.HomeDepot.com.


Pre-Installation

TOOLS REQUIRED

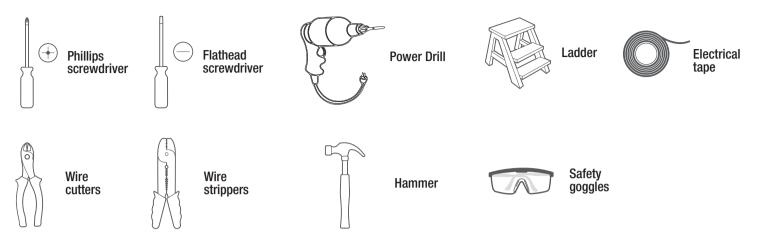

HARDWARE INCLUDED



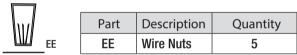


Before You Begin

- 1. Turn off the electricity at the circuit breaker or fuse box.
- 2. Choose your installation option:
 - Installation Option 1 Recessed Mount
 - Installation Option 2 Surface Mount Kit (Sold Separately)
 - Installation Option 3 Pendant/Suspension Mount Kit (Sold Separately)

0-10V Dimming Schematic

REMARK: Please reference the dimmers manufacturer wiring diagrams for correct wiring of 0-10 Volt Dimmer.

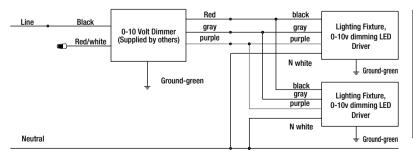

WARNING: Refer to Local and National Electrical codes for correctly sizing wire gauge and making the proper electrical connections and ground connections to prevent electrical shock and risk of fire. Installation requires knowledge of luminaires and electrical systems. If not qualified, do not attempt installation. Contact a qualified licensed electrician, to ensure wiring is correct and in compliance of local codes.

Specification

| Model No. | UPC | Volts (V) | Frequency (HZ) | Watts (W) | Current (mA) | Unique Identifier |
|--------------------------|--------------|-----------|----------------|-----------|--------------|-------------------|
| BLP-24-U-P-50-50K-80-D-1 | 850014987374 | 120V-277V | 50/60 | 50 | 0.6 | |
| BLP-24-U-P-50-40K-80-D-1 | 850014987367 | 120V-277V | 50/60 | 50 | 0.6 | |
| BLP-24-U-P-50-35K-80-D-1 | 850014987350 | 120V-277V | 50/60 | 50 | 0.6 | |
| BLP-24-U-P-40-40K-80-D-1 | 850014987343 | 120V-277V | 50/60 | 40 | 0.5 | |
| BLP-24-U-P-40-35K-80-D-1 | 850014987336 | 120V-277V | 50/60 | 40 | 0.5 | |
| BLP-22-U-P-36-50K-80-D-1 | 850014987329 | 120V-277V | 50/60 | 36 | 0.4 | |
| BLP-22-U-P-36-40K-80-D-1 | 850014987312 | 120V-277V | 50/60 | 36 | 0.4 | |
| BLP-22-U-P-36-35K-80-D-1 | 850014987305 | 120V-277V | 50/60 | 36 | 0.4 | |
| BLP-22-U-P-30-40K-80-D-1 | 850014987299 | 120V-277V | 50/60 | 30 | 0.35 | |
| BLP-14-U-P-30-40K-80-D-1 | 850014987275 | 120V-277V | 50/60 | 30 | 0.35 | |
| BLP-14-U-P-30-35K-80-D-1 | 850014987268 | 120V-277V | 50/60 | 30 | 0.35 | |
| BLP-22-U-P-30-35K-80-D-1 | 850014987282 | 120V-277V | 50/60 | 30 | 0.35 | |
| BLP-24-U-P-50-50K-80-D-2 | 850014987497 | 120V-277V | 50/60 | 50 | 0.6 | |
| BLP-24-U-P-50-40K-80-D-2 | 850014987480 | 120V-277V | 50/60 | 50 | 0.6 | |
| BLP-24-U-P-50-35K-80-D-2 | 850014987473 | 120V-277V | 50/60 | 50 | 0.6 | |
| BLP-24-U-P-40-40K-80-D-2 | 850014987466 | 120V-277V | 50/60 | 40 | 0.5 | |
| BLP-24-U-P-40-35K-80-D-2 | 850014987459 | 120V-277V | 50/60 | 40 | 0.5 | |
| BLP-22-U-P-36-50K-80-D-2 | 850014987442 | 120V-277V | 50/60 | 36 | 0.4 | |
| BLP-22-U-P-36-40K-80-D-2 | 850014987435 | 120V-277V | 50/60 | 36 | 0.4 | |
| BLP-22-U-P-36-35K-80-D-2 | 850014987428 | 120V-277V | 50/60 | 36 | 0.4 | |
| BLP-22-U-P-30-40K-80-D-2 | 850014987411 | 120V-277V | 50/60 | 30 | 0.35 | |
| BLP-22-U-P-30-35K-80-D-2 | 850014987404 | 120V-277V | 50/60 | 30 | 0.35 | |
| BLP-14-U-P-30-40K-80-D-2 | 850014987398 | 120V-277V | 50/60 | 30 | 0.35 | |
| BLP-14-U-P-30-35K-80-D-2 | 850014987381 | 120V-277V | 50/60 | 30 | 0.35 | |


Specification

| Model No. | UPC | Volts (V) | Frequency (HZ) | Watts (W) | Current (mA) | Unique Identifier |
|-----------------------------|--------------|-----------|----------------|-----------|--------------|-------------------|
| BLP-22-U-P-30-40K-80-D-6PK | 810061322870 | 120V-277V | 50/60 | 50 | 0.35 | |
| BLP-22-U-P-36-50K-80-D-6PK | 810061322887 | 120V-277V | 50/60 | 50 | 0.4 | |
| BLP-24-U-P-40-40K-80-D-6PK | 810061322894 | 120V-277V | 50/60 | 50 | 0.5 | |
| BLP-24-U-P-50-40K-80-D-6PK | 810061322900 | 120V-277V | 50/60 | 40 | 0.6 | |
| BLP-24-U-P-50-50K-80-D-6PK | 810061322917 | 120V-277V | 50/60 | 40 | 0.6 | |
| BLP-22-U-P-30-40K-80-D-12PK | 810061322825 | 120V-277V | 50/60 | 36 | 0.35 | |
| BLP-22-U-P-36-50K-80-D-12PK | 810061322832 | 120V-277V | 50/60 | 36 | 0.4 | |
| BLP-24-U-P-40-40K-80-D-12PK | 810061322849 | 120V-277V | 50/60 | 36 | 0.5 | |
| BLP-24-U-P-50-40K-80-D-12PK | 810061322849 | 120V-277V | 50/60 | 30 | 0.6 | |
| BLP-24-U-P-50-50K-80-D-12PK | 810061322863 | 120V-277V | 50/60 | 30 | 0.6 | |

Recessed Installation


1 Removing the ceiling panel

a. Remove the plasterboard panel from the ceiling.

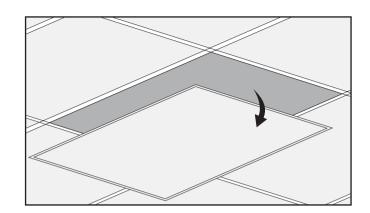


2 Connecting the wires


- a. Lift the fixture to the ceiling.
- Follow the steps in the Making the Electrical Connections section of this manual.

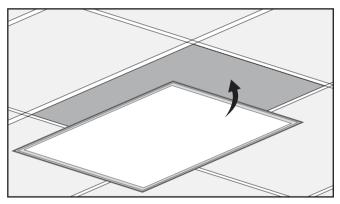

3 Completing the installation

- a. Slide the fixture into place in the ceiling.
- b. Restore power to the fixture.

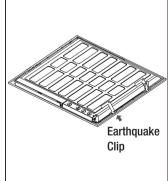


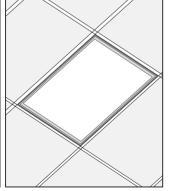

Making the Electrical Connections


Open the junction box

a. Unscrew and remove the junction box cover (1) from the fixture.

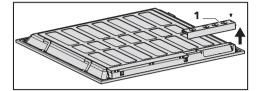


2 Connect the supply wires

- a. Connect the green ground wire from the fixture to the supply ground wire.
- b. Connect the white wire from the fixture to the supply white wire (neutral wire).
- c. Connect the black wire from the fixture to the supply black wire (live wire).
- d. Secure the three connections using three of the supplied wire nuts (AA).
- e. Wrap the three wire connections with electrical tape for a more secure connection(electrical tape not included).

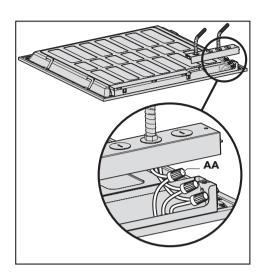


3 Connect the dimming wires

- a. Connect the purple wire from the fixture to the purple (DIM+) supply wire.
- Connect the gray wire from the fixture to the gray (DIM-) supply wire.
- c. Secure the two connections using the remaining two supplied wire nuts (AA).
- d. Wrap the two wire connections with electrical tape for a more secure connection(electrical type not included).

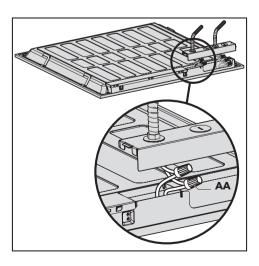

4 Reinstall the junction box cover

- a. Position the wires back inside the junction box.
- b. Reinstall the junction box cover (1).

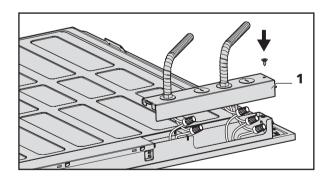



Questions, problems, missing parts? Before returning to the store, call Commercial Electric Customer Service 8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-844-584-3776

HOMEDEPOT.COM