 


USE AND CARE GUIDE

BRADSTONE BOOKCASE WITH GLASS DOORS

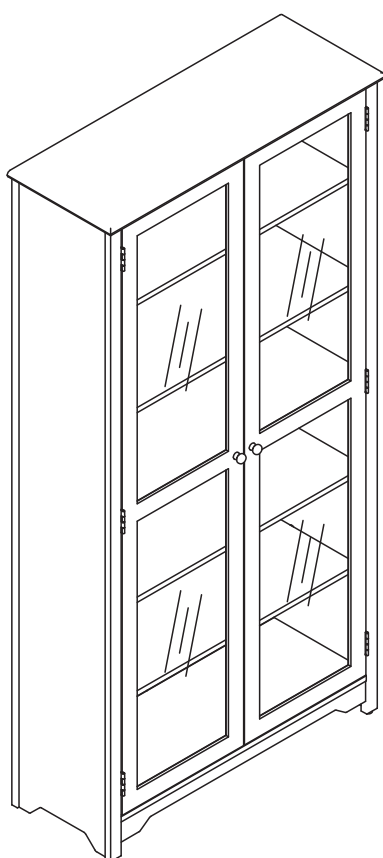

Questions, problems, missing parts? Before returning to the store,
call Home Decorators Collection Customer Service.
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

HOMEDEPOT.COM/HOMEDECORATORS

THANK YOU

We appreciate the trust and confidence you have placed in Home Decorators Collection through the purchase of this Bradstone Bookcase with Glass Doors. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Home Decorators Collection!

Table of Contents

Table of Contents	2	Notification	5
Safety Information	2	Assembly	6-11
Pre-assembly	3	Maintenance	12
Planning Assembly	3	Care and Cleaning	12
Tools Required	3	Troubleshooting	12
Hardware Included	3		
Pre-assembly (continued)	4		
Package Contents	4		

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.
- Do not stand, step or climb on unit.



CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not over tighten connectors (screws, bolts, etc.) Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Some assembly may involve attaching glass or mirrors.
- Be very careful handling the glass or mirrors, as server injury may result if glass or mirrors breaks.
- Never handle large piece of glass or mirrors by yourself.
- Assembly requires 2 people; assembly alone may cause injury.

Warranty

3 YEARS WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for three years.

WHAT IS NOT COVERED

 
This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly

PLANNING ASSEMBLY


Keep children and pets away from build area. Make sure your area is large enough to unpack,sort and assemble the unit.

TOOLS REQUIRED

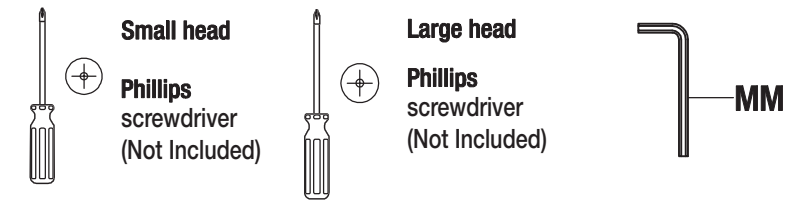

HARDWARE INCLUDED

 **NOTE:** Hardware not shown to actual size.

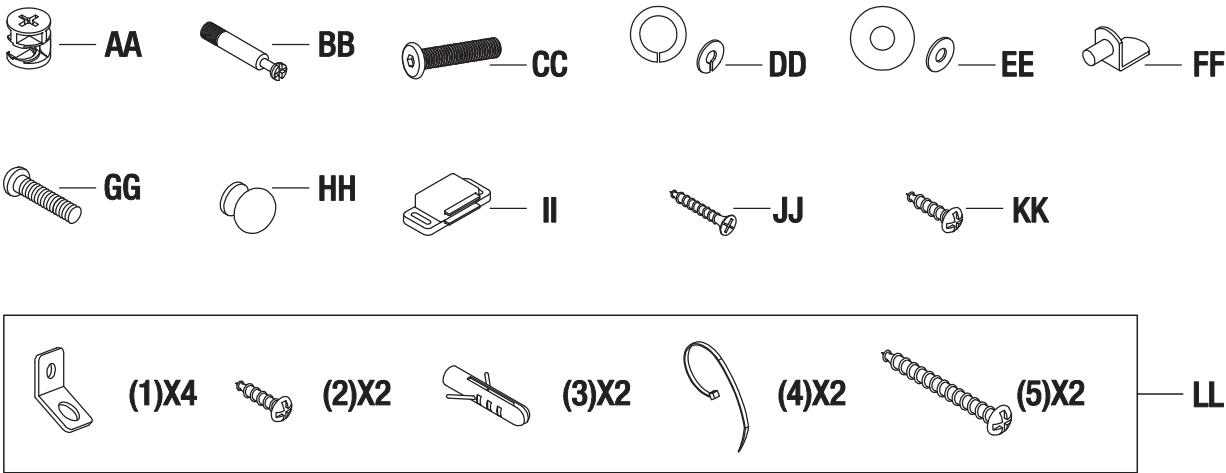


Part	Description	Quantity
AA	Cam lock	19+2
BB	Cam lock bolt	19+2
CC	Hexagon socket screw	12+2
DD	Spring washer	12+2
EE	Flat gasket	12+2
FF	Layer board support	8
GG	Cross round head bolt	2

Part	Description	Quantity
HH	Handle	2
II	Magnetic clamp	4
JJ	Flat head screw	26+2
KK	Round head screw	48+2
LL	Anti-tipping hardware package	1
MM	Spanner	1

Pre-assembly (continued)

 PACKAGE CONTENTS


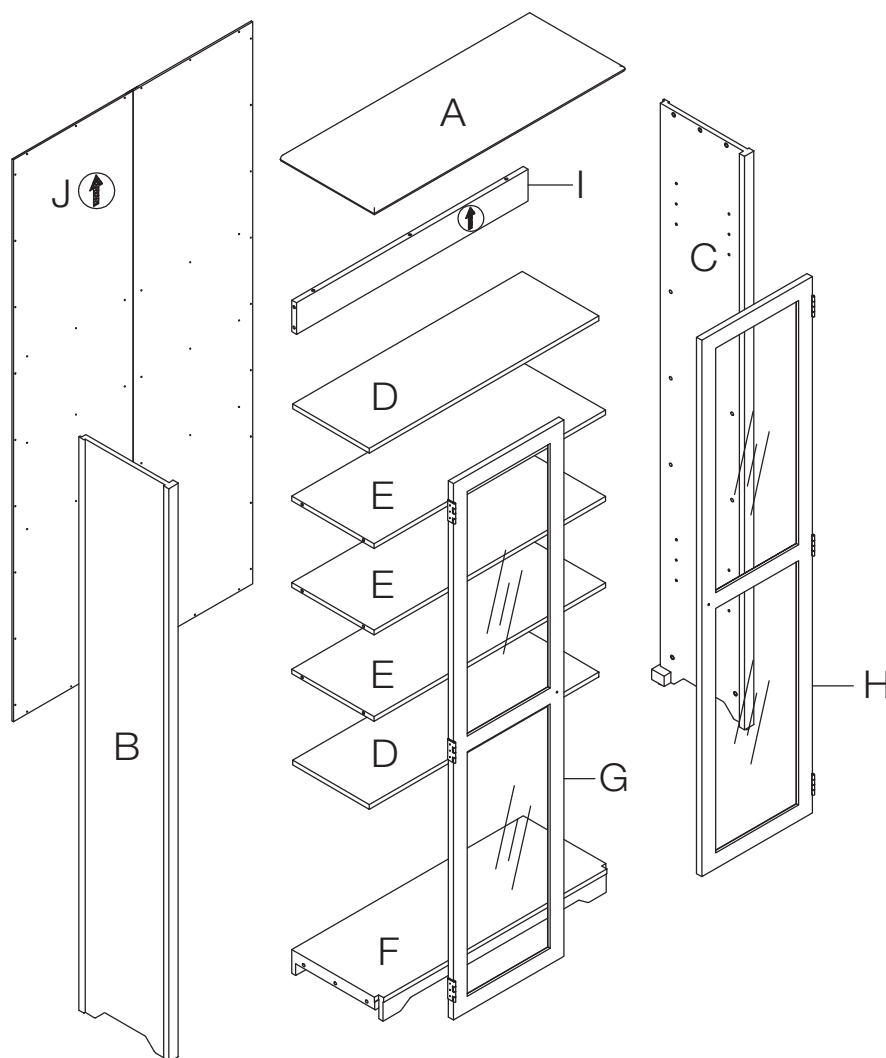


Part	Description	Quantity
A	Top panel	1
B	Left side panel	1
C	Right side panel	1
D	Shelf	2
E	Fixed Shelf	3
F	Bottom panel	1
G	Left door panel	1

Part	Description	Quantity
H	Right door panel	1
I	Damper	1
J	Back panel	1



Notification

  NOTE: UPON OPENING THOROUGHLY CLEAN ALL WOODS SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

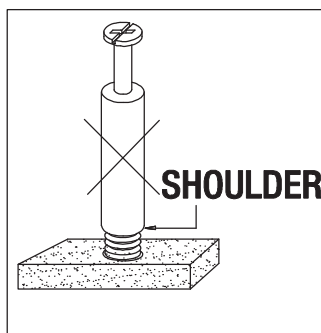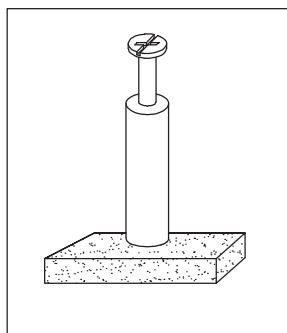

NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

  HOW TO USE THE CAM TOOL

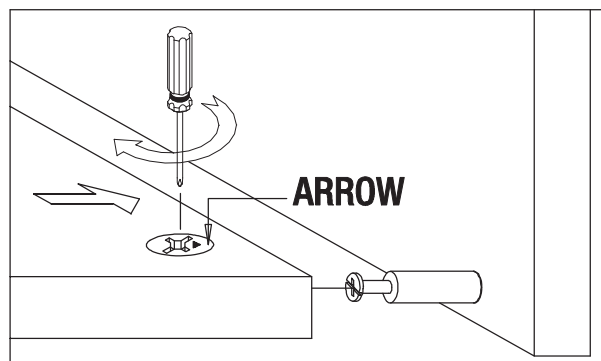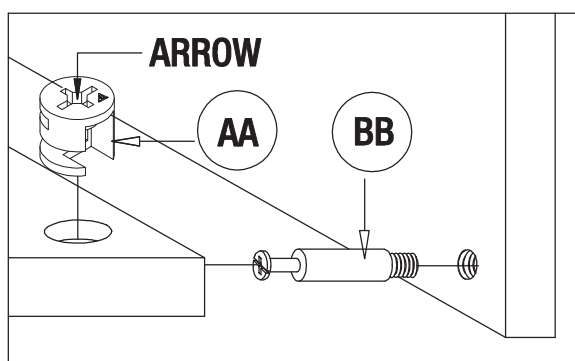


● **NOTE: THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS.**


Assembly

1 Assemble side panels

 
- a) Insert cam lock bolt(BB) to side panels(B/C)

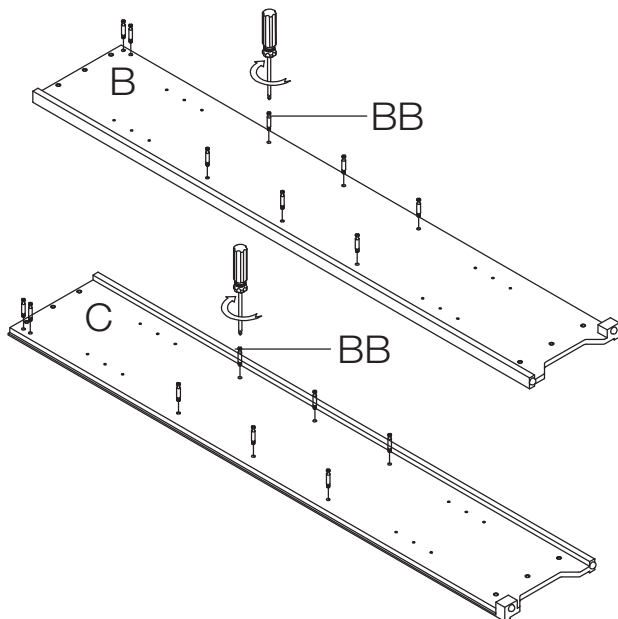

 
- b) Lock Magnetic clamp(II) on bottom panel(F)

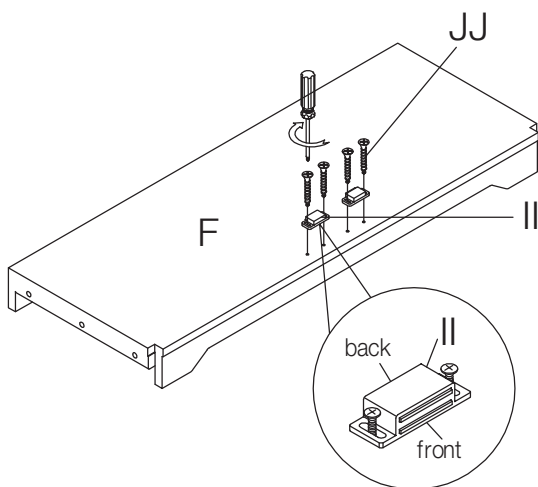

 - c) Connect side panels(B/C) with shelf (E) & Bottom panel (F)

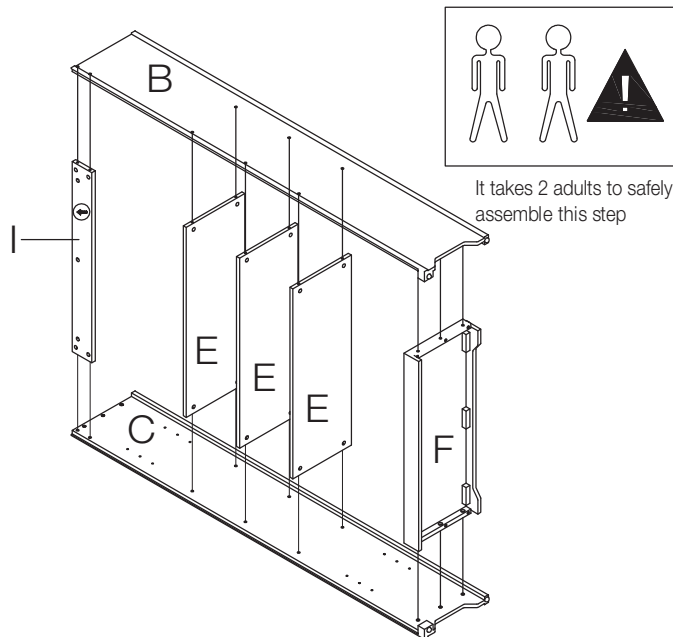

 - d) Use cam lock(AA) & hexagon socket screw(CC) for connection

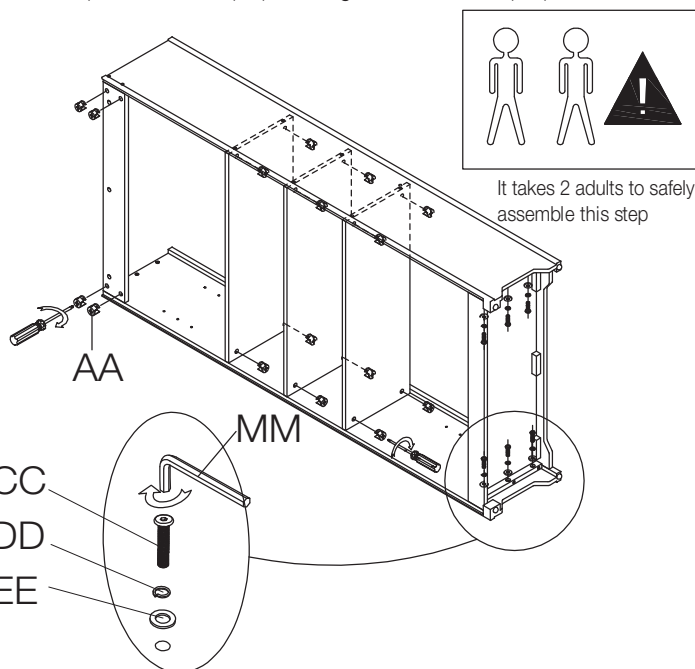


Cam lock (AA) x 16	Cam lock bolt (BB) x 16	Magnetic clamp (II) x 2	Flat head screw (JJ) x 4	Hexagon socket screw (CC) x 6	Spring washer (DD) x 6	Flat gasket (EE) x 6	Small head	Large head	Spanner (MM) x 1


Assembly

2 Assemble top panel

 
- a) Lock the Magnetic clamp (II) to the top panel (A)

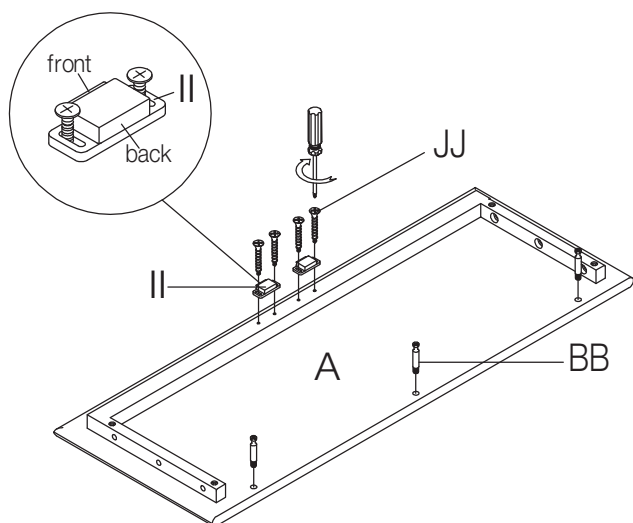

 
- b) Connect the top panel (A) on pre-drill holes

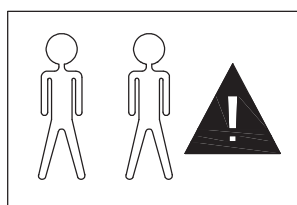

 It takes 2 adults to safely assemble this step

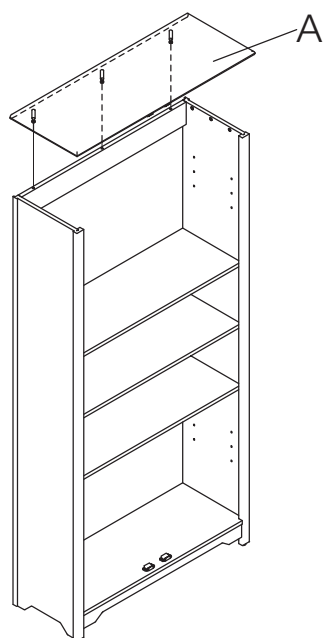

 - c) Use cam lock (AA) and Hexagon socket screw(CC) to lock the top panel (A)

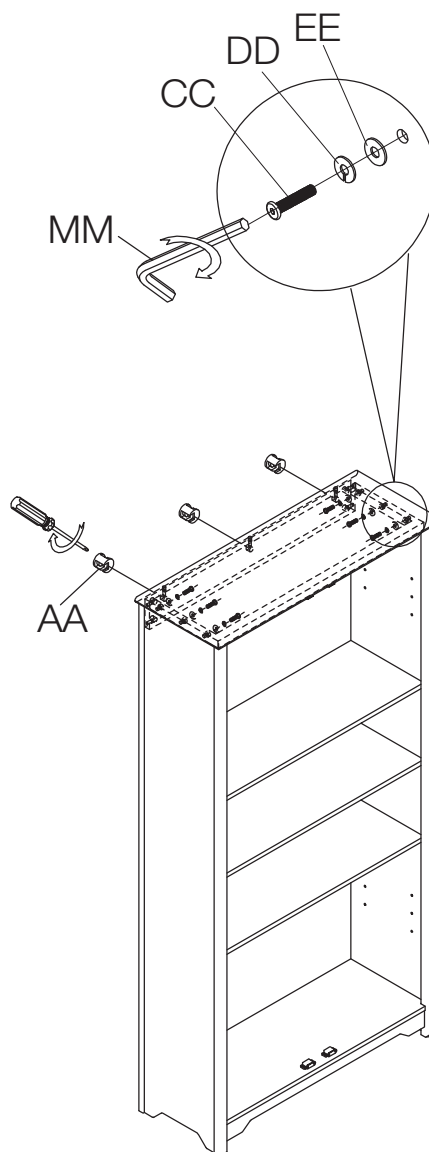


Cam lock	Cam lock bolt	Magnetic clamp	Flat head screw	Hexagon socket screw	Spring washer	Flat gasket	Small head	Large head	Spanner
(AA) x 3	(BB) x 3	(II) x 2	(JJ) x 4	(CC) x 6	(DD) x 6	(EE) x 6			(MM) x 1



Assembly

3 Assemble back panel (J)

 
- a) Open back panel(J)

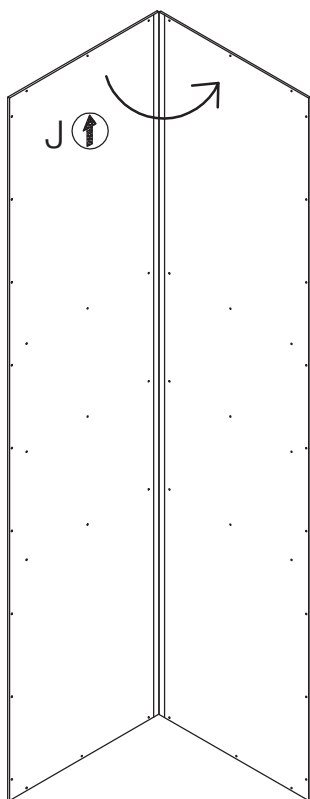

  - b) Centralizer the back panel(J) and then lock with round head screw(KK)

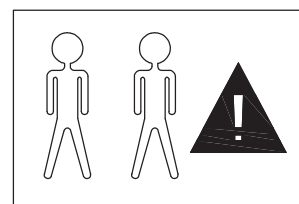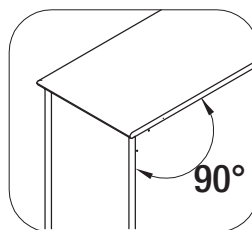

 It takes 2 adults to safely assemble this step

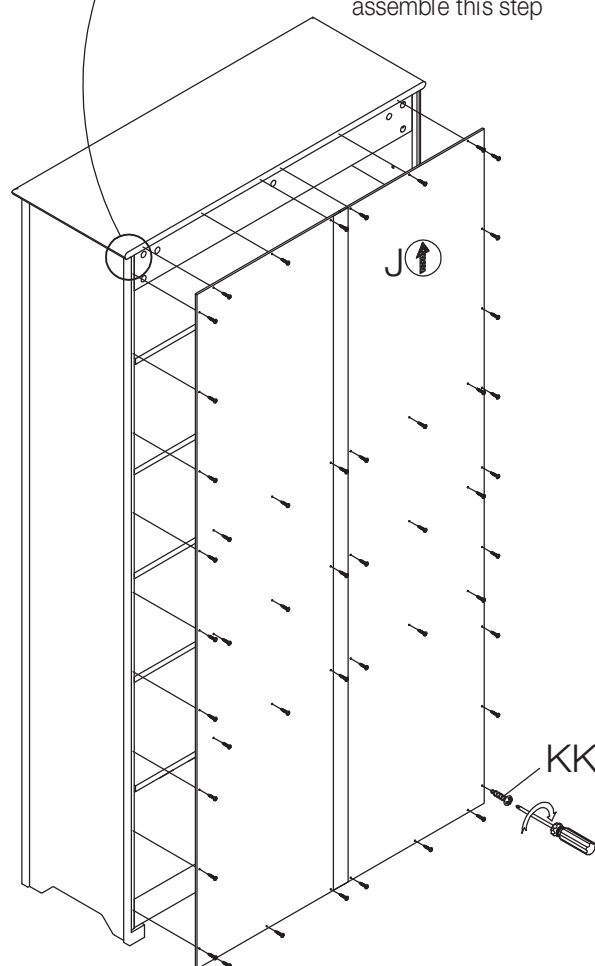


Round head screws

(KK) x 48



 
Small head




Assembly

4 Assemble door panels

 
- a) Lock the door panel(G/H) to the panel

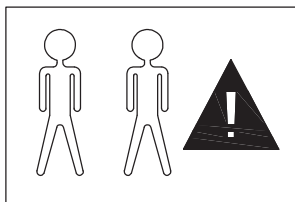

 It takes 2 adults to safely assemble this step

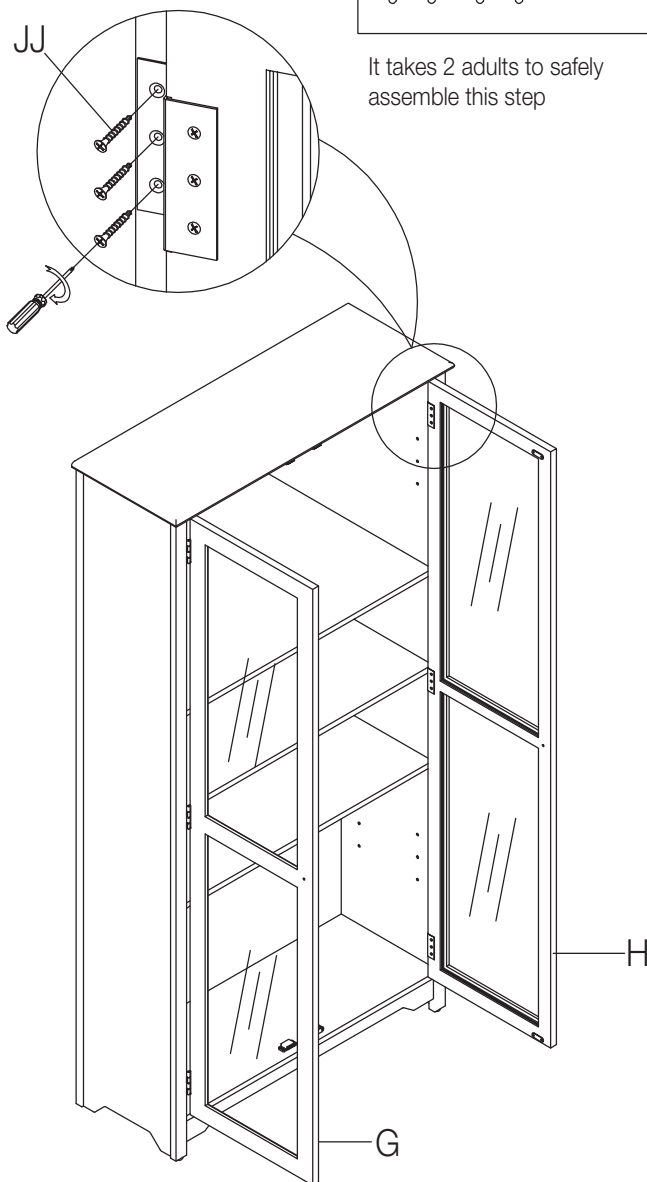

 - b) Assemble handles (HH)

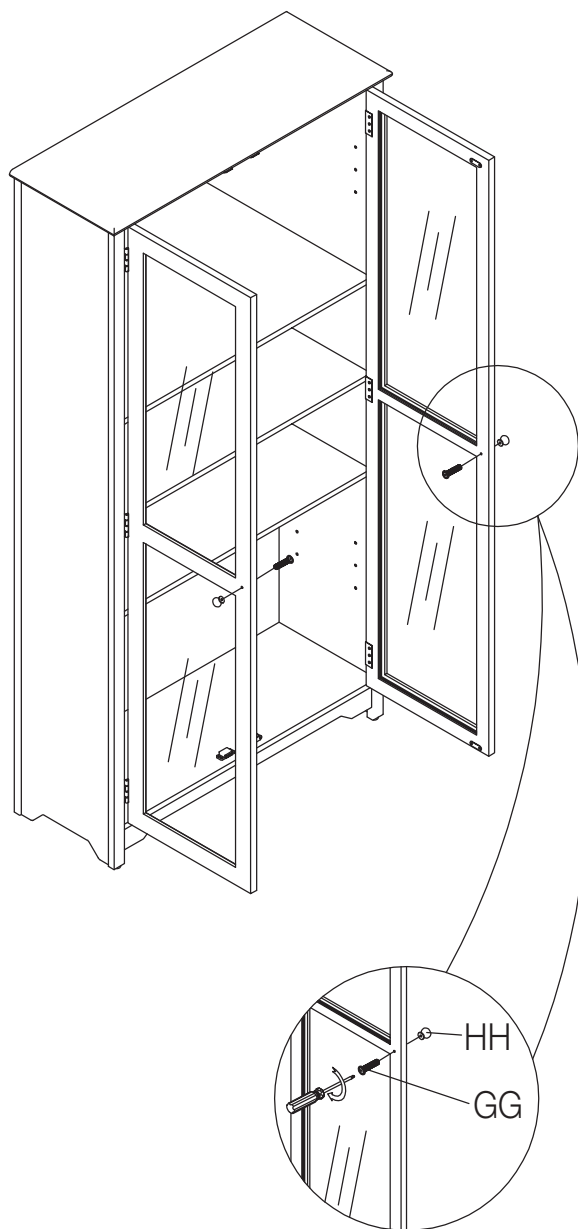

Cross round
head bolt
(GG) x 2



Handle
(HH) x 2



Flat
head screw
(JJ) x18

 
 


Small head




Assembly

5 Assemble the shelf (D) with layer board support (FF)

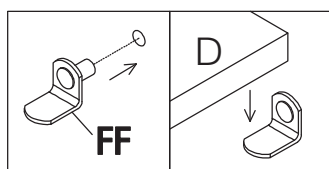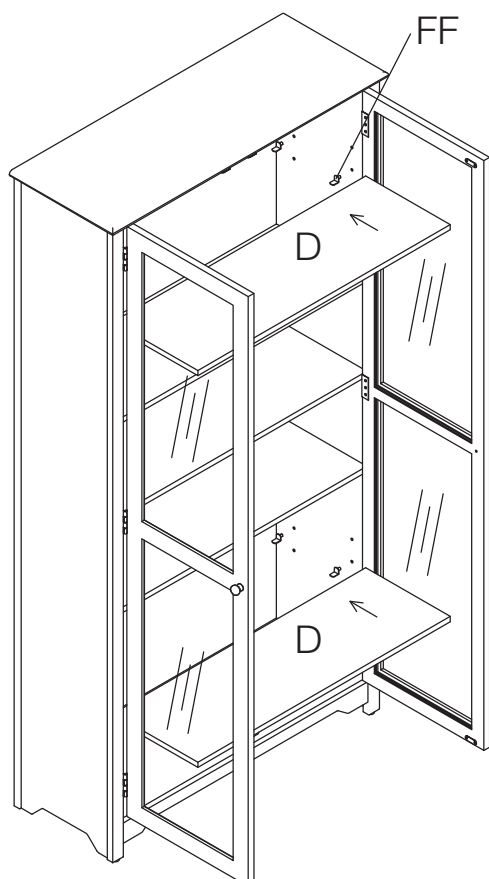

 6 Adjust the foot leveler and Magnetic clamp

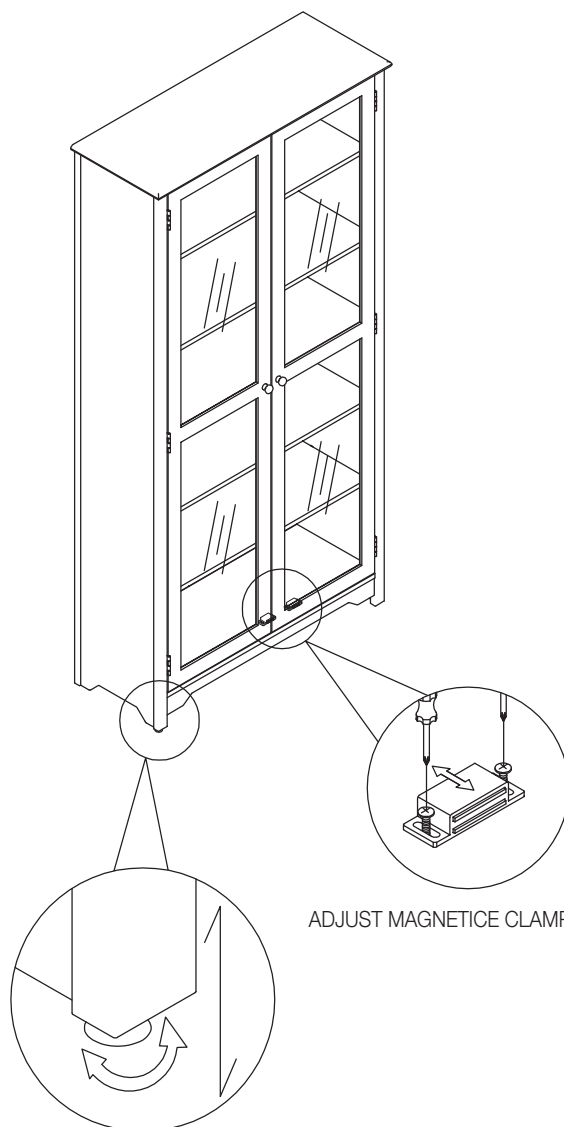

IF THE GROUND IS NOT EVEN THE SIDEBOARD WILL BE UNSTABLE OR THE DOORS UNSYMMETRICAL, YOU CAN ADJUST THE FOOT LEVELER UNDER THE LEG. TURN LEFT TO TIGHTEN, TURN RIGHT TO LOOSEN.

Layer board support

 
(FF) x 8




Assembly

7 Assemble the Anti-tipping hardware package (LL)

- a) Lock rectangle metal plate (1) with round head screw (2) on back panel, and lock plastic anchor (3) and rectangle metal plate (1) with round head screw (5) on the wall

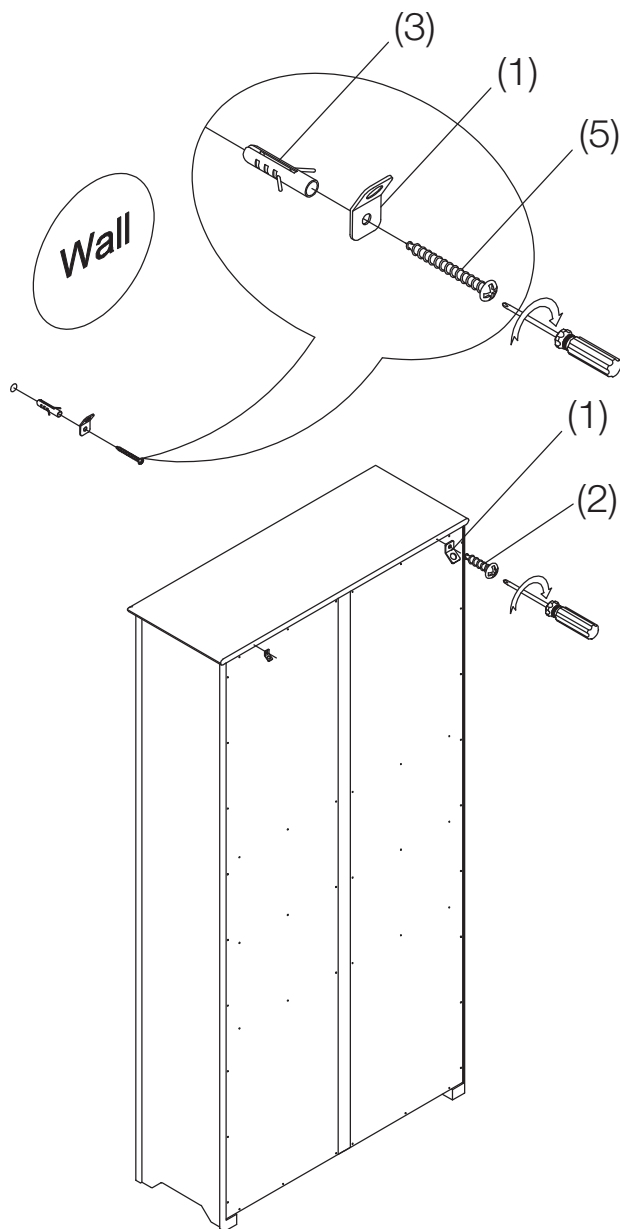

 - b) Use the plastic band (4) to tighten it.

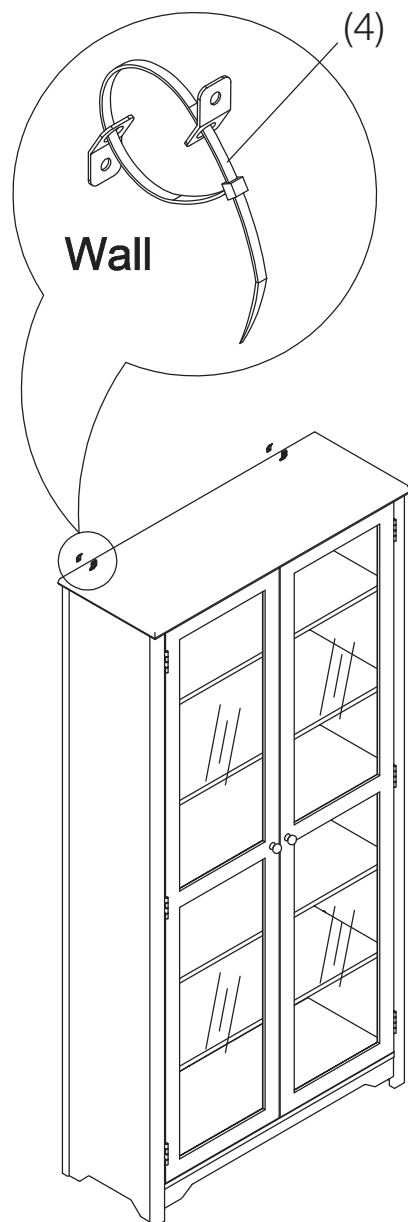

Rectangle
metal plate
(1)X4



0.63 in.Round
head screw
(2)X2



Plastic
anchor
(3)X2



 
Plastic
band
(4)X2



1.97 in.Round
head screw
(5)X2



Small head



LL

Maintenance

- If your furniture is stained or otherwise damaged during use, contact a professional for repairs.

Care and Cleaning

- Use a soft, clean cloth that will not scratch the surface when dusting.
- Use of furniture polishes is not necessary. Should you choose to use polishes, test the polish in an inconspicuous area before using over the entire surface of the product.
- Using solvents of any kind on your furniture may damage the finish.
- Never use water to clean your furniture as it may cause damage to the finish.
- Always use coasters under beverage glasses and flowerpots.
- Liquid spills should be removed immediately. Using a soft, clean cloth, blot the spill gently avoid rubbing.
- Always use protective pads under hot dishes and plates. Heat can cause chemical changes that may create spotting within the furniture finish.
- Use care as stains or marks from crayons or ink markers will be difficult to remove.
- Be sure to immediately clean red wine or soda stains within 30 minutes or the surface will stain.

Troubleshooting

PROBLEMS	SOLUTIONS
Not all of the product's legs touch the floor	Make sure adjustable center feet levelers are adjusted properly. The levelers are pre-assembled on the bottom of the legs
	The product is KD construction. You may need to loosen the bolts and place the product on a flat surface. Ensure that the legs all touch the flat surface and then re-tighten the bolts.
	Loosen all the bolts and apply some weight to the product to get all the feet to touch the floor. Then re-tighten the bolts in that position.
Panel cannot be assembled	Make sure panel is on right direction.
Door cannot be closed or without magnetic function	Adjust the magnetic clamp, make sure it is assembled on appropriate position.
Door is not flat	Adjust the hinge, make sure it is assembled on appropriate position.

The logo for Home Decorators Collection is centered within a dark gray rectangular box. The word "HOME" is in a large, white, serif font. Below it, "DECORATORS" is in a smaller, white, serif font. At the bottom, "COLLECTION®" is in an even smaller, white, sans-serif font.

HOME DECORATORS COLLECTION®

Questions, problems, missing parts?
Before returning to the store, call Home Decorators Collection Customer Service.
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-800-986-3460

[HOMEDEPOT.COM/HOMEDECORATORS](https://www.homedepot.com/homedecorators)

Retain this manual for future use.