




THIS QUICK START GUIDE IS NOT A SUBSTITUTE FOR THE INSTRUCTION MANUAL. PLEASE REFER TO THE INSTRUCTION MANUAL AND YOUR VEHICLE'S USER'S MANUAL BEFORE USE.

IF YOU HAVE ANY QUESTIONS, CALL CUSTOMER SERVICE AT 1-877-571-2391

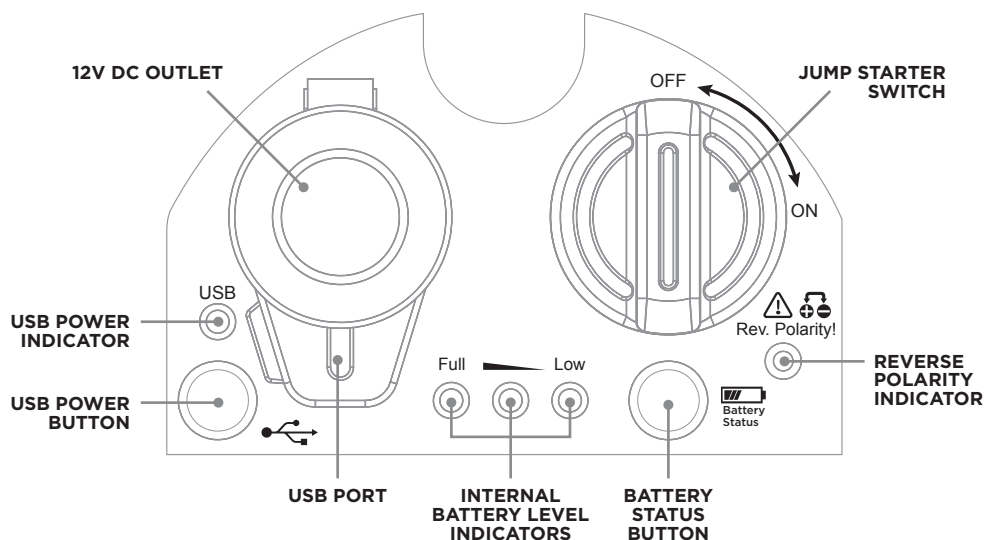

REVERSE POLARITY ALARM

When battery clamps are connected in reverse polarity, an audible alarm (continuous beep) will sound and the Reverse Polarity Indicator will illuminate. **DO NOT ACTIVATE THE UNIT.** If this happens carefully disconnect the clamps and re-connect with the proper polarity. Ensure that the grounded clamp has a firm and clean connection.

12V DC POWER

1. Insert the 12V DC Plug into the 12V DC Outlet
2. Operate Your device normally.

USB POWER

1. Press the USB Power Button on the control panel.
2. Plug the electronic device into the USB Port and operate normally.
3. To turn USB Port OFF, press the USB Power Button again.

BATTERY STATUS

To check the status of the internal battery, just press the Battery Status Button. One of the indicators will illuminate telling you if the unit is fully charged and ready to operate or if it needs to be recharged.