



Wheel Replacement

Instructions for Replacing 10" Flat Free and 10" Pneumatic Tires



1) Remove Retaining Ring



2) Remove Wheel from Axle



3) Place New Wheel and Washer onto Axle



4) Place Retaining Ring on a Cylindrical item such as a 3/4" Socket



5) Hammer Retaining Ring onto Axle



6) Completed Tire After Installation



For Hand Truck Tires Secured with Cotter Pins, such as the 10" Solid Puncture Proof Tire. Simply Remove the Pin and Slide the Tire off the Axle. Slide the New Tire into Place and Secure the Tire with the Cotter Pin.

Featuring Quality Products That Are Consumer-Driven and Competitively Priced



To Order, Call Us Toll-Free: 1 (877) 743-6556
www.milwaukeehandtrucks.com

GLEASON INDUSTRIAL PRODUCTS
8575 W. Forest Home Avenue • Suite 100
Greenfield, Wisconsin 53228