




Model No.: BB-1400R & BB-1400G



Operating and Safety Instructions

Instrucciones de Operación y Seguridad

-FOR OUTDOOR HOUSEHOLD USE ONLY -
SOLO PARA USO DOMESTICO

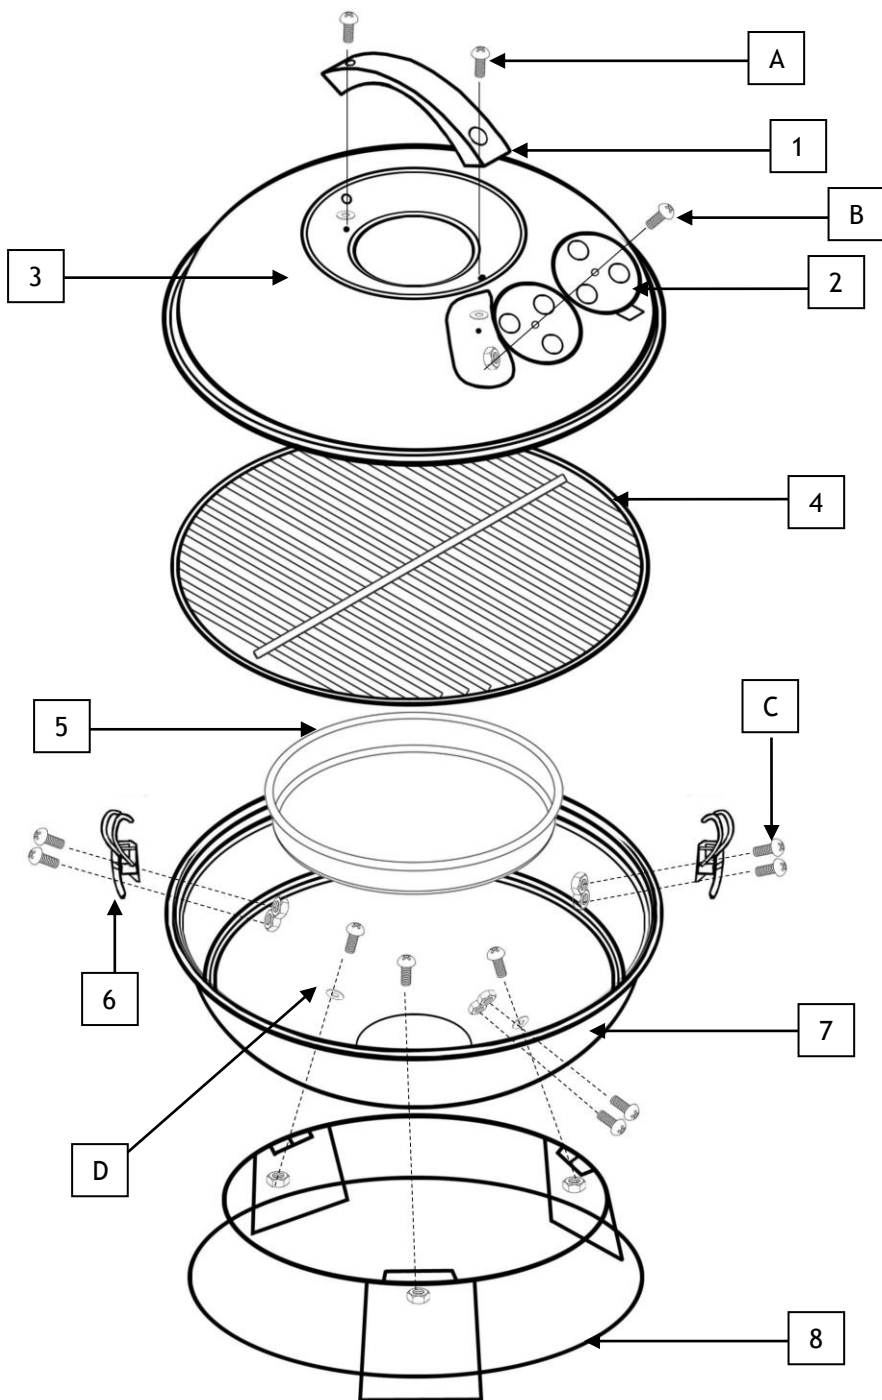

IMPORTANT SAFEGUARDS



When using this or any other electrical appliance, always follow these basic safety precautions, especially when children are present.

READ ALL INSTRUCTIONS BEFORE USE

- Take care when assembling the BBQ as some sharp edges may be present.
- The BBQ should only be assembled by an adult.
- Please discard or store all packing materials away from the reach of children.
- This product is not intended for use by children.
- Keep the product out of the reach of children and pets. Extra caution is necessary when using this appliance near children.
- Do not leave the product unattended while it is in use.
- Never insert finger or any type of objects in the grill especially while in use.
- Use the product in a well-ventilated area.
- This BBQ is for outdoor use only
- Use on a flat surface.
- Keep the product away from curtains, wall coverings, clothing, dishtowels, or flammable materials.
- This product has no user-serviceable parts.
- The grill can be extremely hot when in use. Use grill gloves when grilling.

Grilling Tips:

IMPORTANT: Please check all packaging material carefully before discarding as there may be accessory parts contained within the packaging material.

- Charcoal/briquettes quantity – MAX : 0.5kgs. / 1 lbs. / 17 oz.
- Do not overfill the grill with charcoal/briquettes. The grill can get too hot for cooking and the heat can represent a risk to people or animals in the vicinity.
- Using too much charcoal can also damage the grill surface and thus the paint/enamel.
- If flames should appear during use - due to fat, marinade or the like dripping on to the charcoal - we recommend using a spray bottle to spray a little water on the charcoal.
- When finished using the grill, **do not** douse the charcoal with large amounts of COLD water, as this can damage the paint/enamel. Use sand or spray small amounts of water gradually and repeatedly.
- **Always check that all embers are extinguished before removing used charcoal/briquettes. This can take up to 24 hours. Always dispose of ash and charcoal residue where they cannot cause fire.**

**SAVE THESE INSTRUCTIONS
FOR FUTURE REFERENCE**

ONE YEAR LIMITED WARRANTY

 Write down the following information about your appliance to better help you obtain assistance or service if you ever need it.

CUSTOMER RECORD

Date of Purchase _____ Store/Dealer _____

Model/Item No: _____

THIS WARRANTY APPLIES TO PRODUCTS PURCHASED AND USED IN THE U.S. ONLY. This is the only express warranty for this product and is in lieu of any other warranty or condition. This product is warranted to be free from defects in material and workmanship for a period of one (1) year from the date of original purchase. During this period, your exclusive remedy is repair or replacement of this product, at our option; however, you are responsible for all costs associated with returning the product to us and our returning a product or component under this warranty to you. If the product or component is no longer available, we will replace with a similar one of equal or greater value. This warranty does not cover glass, filters, wear from normal use, use not in conformity with the printed directions, or damage to the product resulting from accident, alteration, abuse, or misuse.

 **THIS WARRANTY EXTENDS ONLY TO THE ORIGINAL CONSUMER PURCHASER. KEEP THE ORIGINAL SALES RECEIPT, AS PROOF OF PURCHASE IS REQUIRED TO MAKE A WARRANTY CLAIM.**

This warranty is void if the product is used for other than single-family household use or subjected to any voltage and waveform other than that specified on the rating label (E.G., 120V~60Hz). We exclude all claims for special, incidental, and consequential damages caused by breach of express or implied warranty. All liability is limited to the amount of the purchase price. Every implied warranty, including any statutory warranty or condition of merchantability or fitness for a particular purpose, is disclaimed except to the extent prohibited by law, in which case such warranty or condition is limited to the duration of this written warranty. This warranty gives you specific legal rights. You may have other legal rights that vary depending on where you live. Some states do not allow limitations on implied warranties or special, incidental, or consequential damages, so the foregoing limitations may not apply to you. To make a warranty claim do not return this appliance to the store.

TO OBTAIN WARRANTY SERVICE AND/OR TROUBLESHOOTING INFORMATION:

 Call Customer Service at 1-888-903-0060 in the U.S.

 Monday through Friday: 9:00am – 5:00pm PST.

 Email at info@brentwoodus.com

 Go online at www.brentwoodus.com

MEDIDAS DE SEGURIDAD IMPORTANTES



Al usar este o cualquier otro, siga las precauciones básicas de seguridad, especialmente cuando niños están presentes.

LEA TODAS LAS INSTRUCCIONES ANTES DE USAR

- Tenga cuidado al montar la parrilla ya que algunos bordes afilados pueden estar presentes.
- La parrilla sólo debe ser montada por un adulto
- Deseche o guarde todos los materiales de embalaje lejos del alcance de los niños.
- Este producto no está diseñado para ser utilizado por niños.
- Mantenga el producto fuera del alcance de los niños y las mascotas. Se requiere mucha precaución cuando se utiliza este aparato cerca de niños.
- No deje el producto desatendido mientras esté en uso.
- Nunca inserte los dedos u objetos en la parrilla mientras esté en uso.
- Utilice el producto en un área bien ventilada.
- Esta parrilla es sólo para uso en exteriores
- Use sobre una superficie plana.
- Mantenga el producto alejado de materiales inflamables.
- Este producto no tiene piezas que el usuario pueda reparar.
- La parrilla puede estar extremadamente caliente cuando está en uso. Use guantes para asar al asar.

Instrucciones para asar

IMPORTANTE: Por favor, revise todo el material de empaque con cuidado antes de tirar ya que puede haber partes accesorias contenidas en el material de empaque.

- Cantidad de carbón / briquetas - MAX: 0.5kgs. / 1 lbs. / 17 oz.
- No llene en exceso la parrilla con carbón / briquetas. La parrilla puede calentarse demasiado para cocinar y el calor puede representar un riesgo para las personas o los animales de la vecindad.
- Usar demasiado carbón también puede dañar la superficie de la parrilla y, por lo tanto, la pintura / esmalte.
- Si aparecen llamas durante el uso, debido a la grasa, la marinada o algo similar que gotea sobre el carbón, le recomendamos que utilice un spray de agua sobre el carbón.
- Cuando termine de usar la parrilla, no apague el carbón con grandes cantidades de agua FRÍA, ya que esto puede dañar la pintura/esmalte. Use arena o rocíe pequeñas cantidades de agua de manera gradual y repetida.
- Siempre verifique que todas las brasas se hayan extinguido antes de retirar el carbón / briquetas usados. Esto puede llevar hasta 24 horas. Deseche siempre las cenizas y los residuos de carbón donde no puedan provocar un incendio.

GUARDE ESTAS INSTRUCCIONES

COMO



REFERENCIA