

INSTALLATION INSTRUCTIONS

VOLT PRO_{TM} LOW VOLTAGE LANDSCAPE LIGHTING

VOLT PRO_{TM} Low Voltage G4 Path Light

ITEM: NBPL-PROPATH2-BBZ

1-813-978-3700 • Mon-Fri 8am-8pm • Sat-Sun 10am - 6pm (ET)

**IMPORTANT: PLEASE READ BEFORE INSTALLATION**

This luminaire is intended for installation in accordance with local codes and the National Electric Code (NEC). Failure to adhere to these codes and instructions may result in serious injury, property damage and void the warranty.

These instructions do not intend to cover all variations in installation, operation maintenance or mounting situations.

1. Make sure that the power is turned OFF before installing or servicing this fixture.
2. Warning: this fixture is not intended to be installed within 10 feet [3 meters] of a pool, spa or fountain.
3. This fixture is intended to be used only with a power supply (transformer) rated maximum of 300 watts (25 AMPS) at 15 volts.
4. Underground Low Energy Cable must not be buried over 6" (15.2 cm) in order to connect to the main low voltage cable.
5. Wiring connections must be made with UL listed wire connectors that are suitable for outdoor use.
6. Position the wire connector so that it is located within 6 inches (15.2 cm) from a building structure, a luminaire, or fitting.

**IMPORTANT SAFETY INSTRUCTIONS****INSTRUCTIONS PERTAINING TO A RISK OF FIRE, OR INJURY TO PERSONS
LIGHTED LAMP IS HOT!**

WARNING – To reduce the risk of FIRE OR INJURY TO PERSONS.

1. Turn off/unplug and allow to cool before replacing lamp.
2. Lamp gets HOT quickly! Contact only switch/plug when turning on.
3. Do not touch the hot lens, guard or enclosure.
4. Keep lamp away from materials that may burn.
5. Do not operate the luminaire fitting with a missing or damaged shield.


SAVE THESE INSTRUCTIONS


PACKAGE CONTENTS

- A. (1) Path Light
- B. (1) G4 Bulb

- C. (1) Hat
- D. (1) Stake

PRODUCT DIMENSION

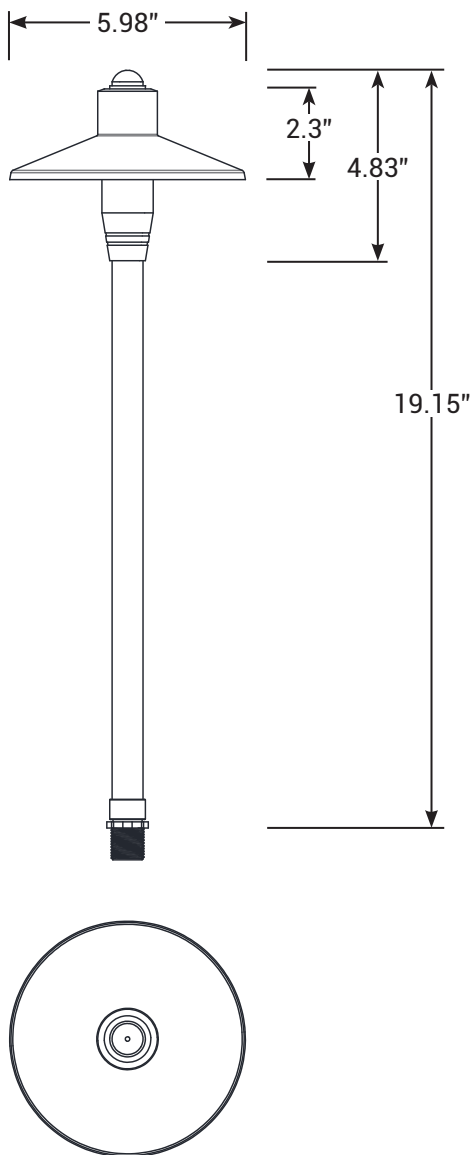

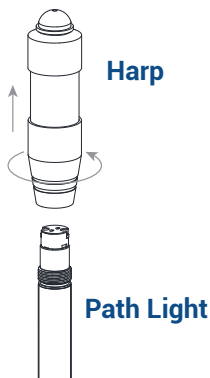
1 REMOVE HARP

Remove the harp from the top of the path light.

2 INSTALL G4 BULB


Insert G4 bulb with correct wattage and type marked on the fixture label.

CAUTION: Do not exceed maximum wattage marked on fixture label.

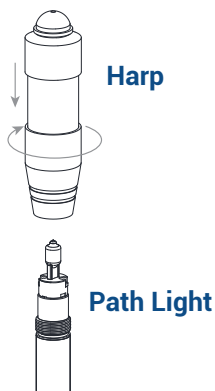3 INSTALL HARP

Thread the previously removed harp back onto the top of the path light.


4 INSTALL STAKE

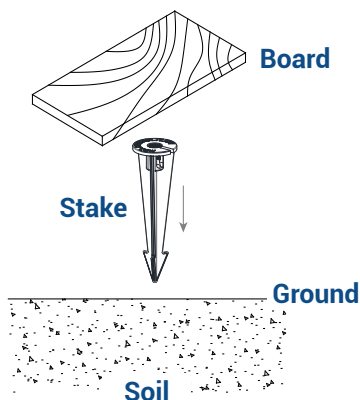

Determine the desired location for mounting the stake mount. Hammer the stake into the ground until the top of the stake is flush to the ground. To avoid damage to the stake, place a board on top of the stake while hammering.


Note: If the ground is hard and the stake is difficult to install, make a crosscut in the ground using a flat shovel.

5 INSTALL PATH LIGHT

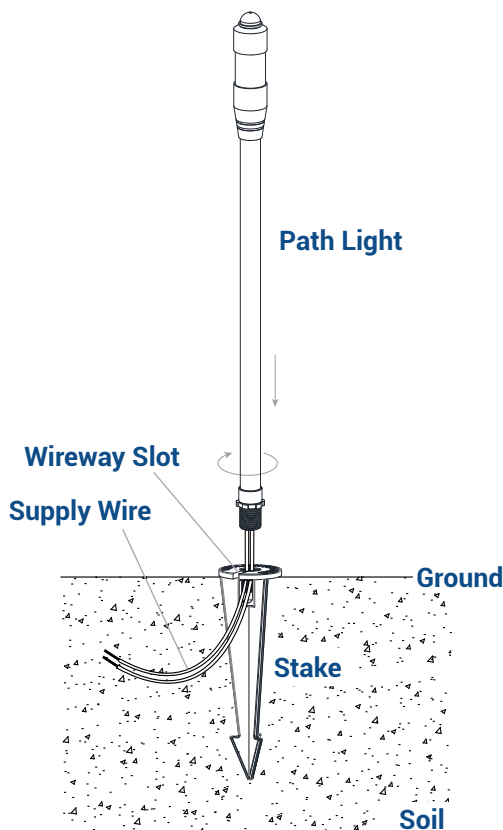


Pass supply wires through the center hole of the stake and thread the path light onto the stake. Clear away area in ground and lay supply wires into wireway slots.

6 WIRE CONNECTION

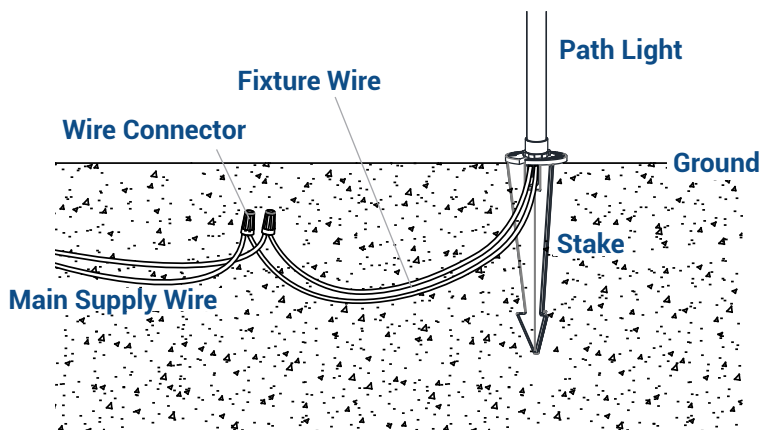


Strip both ends from the fixture wires. Using two UL listed wire connectors (sold separately), connect the fixture wires to the main supply wires.

7 REMOVE FINIAL NUT AND WATERPROOF WASHER

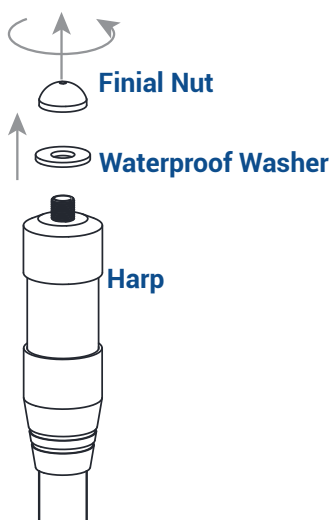

Remove the finial nut and waterproof washer from the top end of the harp


8 INSTALL HAT

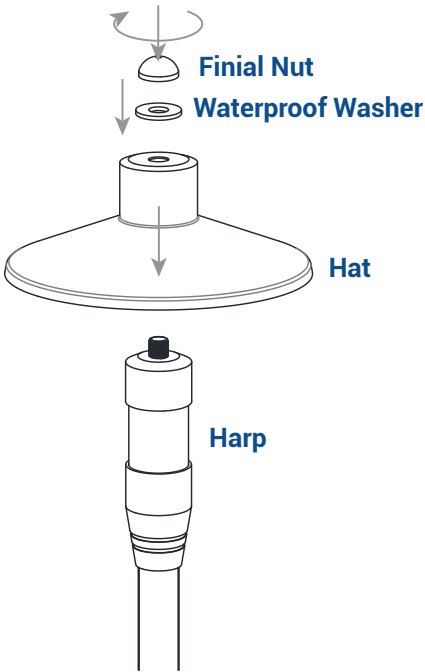

Place the hat and the waterproof washer onto the top end of the harp. Secure them by using the previously removed finial nut.

INSTALL/REPLACE G4 BULB

Remove the finial, waterproof washer, hat and harp to expose the G4 bulb and replace it with correct wattage and type marked on fixture label. Then reinstall the above parts back onto the fixture.
IMPORTANT: G4 bulb must be protected from moisture and dust at all times. Always reinstall harp and hat when removed.

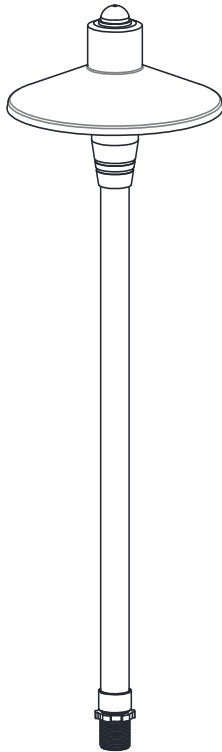

INSTALLATION INSTRUCTIONS

VOLT PROTM LOW VOLTAGE LANDSCAPE LIGHTING



VOLT PROTM Landscape Lighting

1-813-978-3700 • Mon - Fri 8am - 6pm • Sat - Sun 10am - 6pm (ET)

ITEM: NBPL-PROP-12-BBZ

Specifications and product details subject to change without notice.
© Copyright 2025, VOLT® Lighting, Lutz FL USA 33549 • All rights reserved.
1-813-978-3700 • Mon - Fri 8am - 6pm • Sat - Sun 10am - 6pm (ET)