


Model 41847NG Parts Diagram

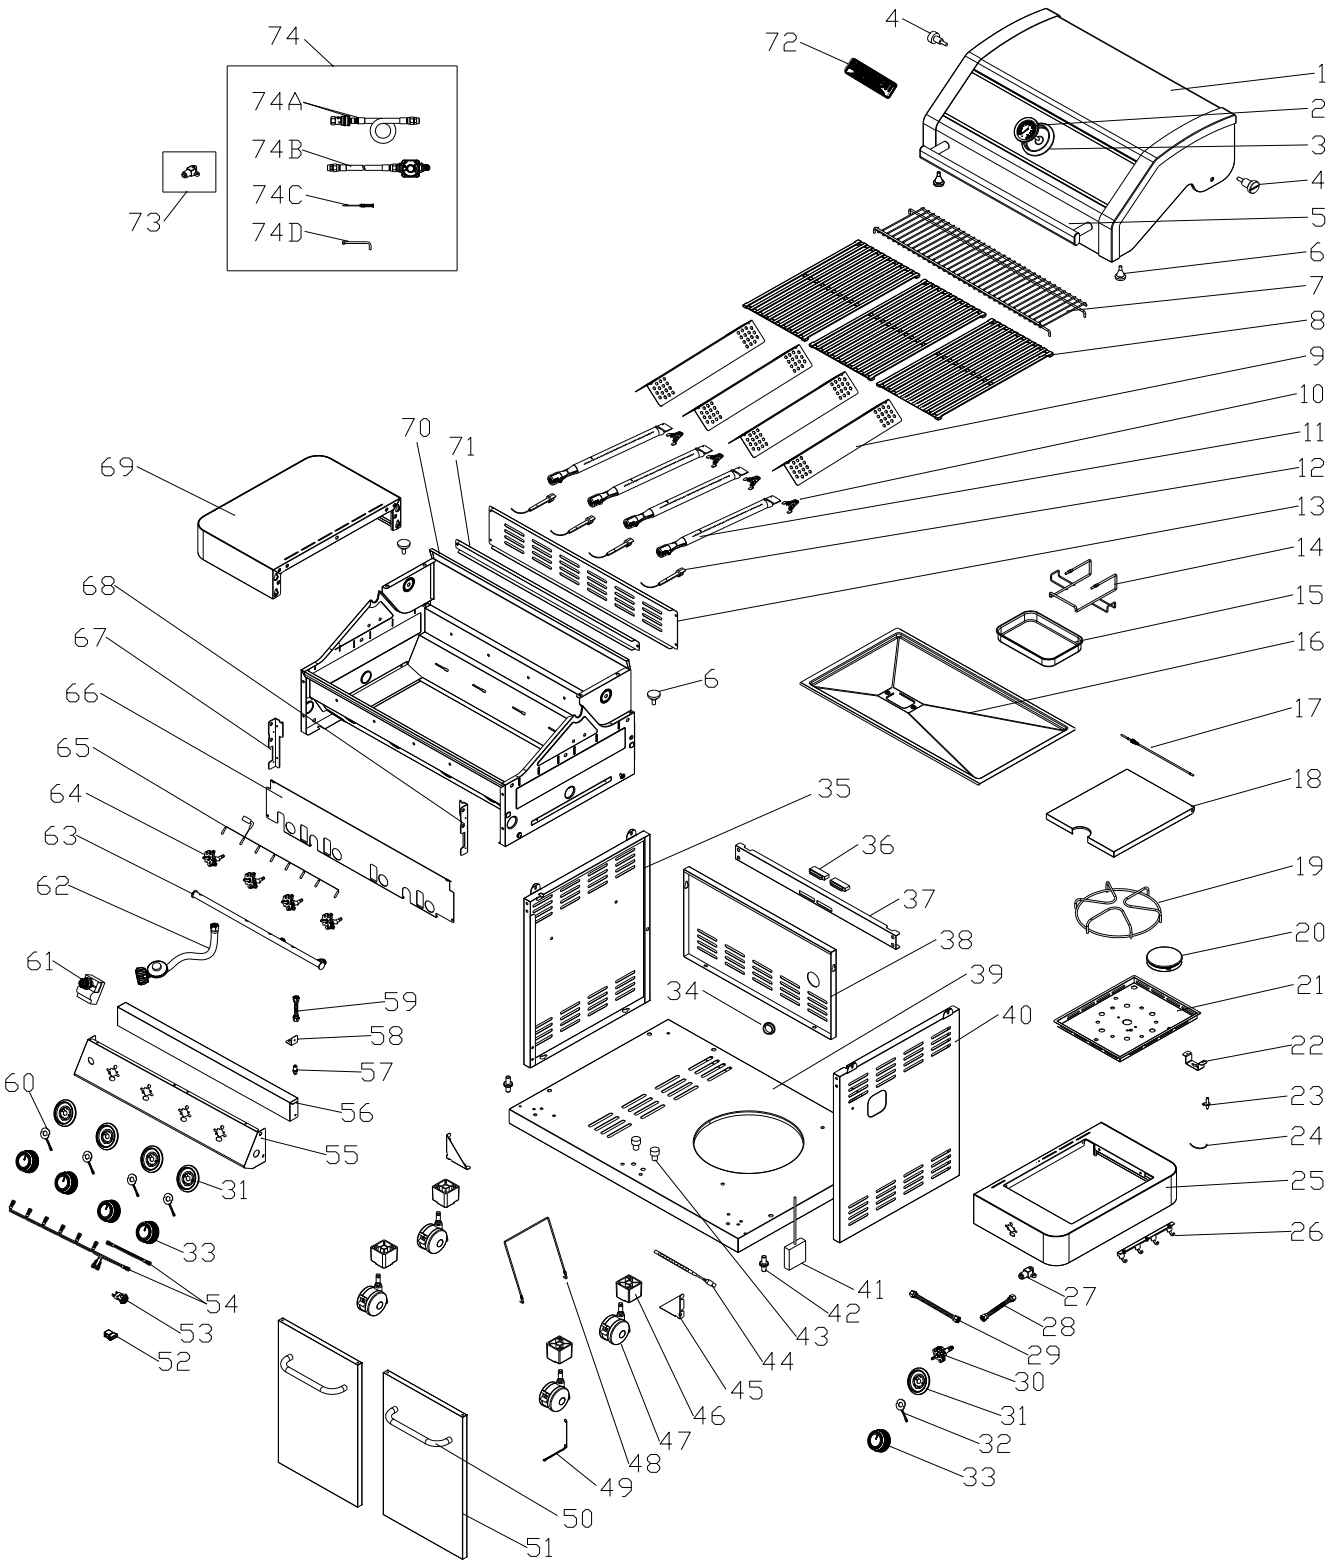

Model 41847NG Parts List

seq. NO.	appellation	qty	Material code	seq. NO.	appellation	qty	Material code
1	Main Lid	1	D010012906	41	Battery Box	1	A0212663
2	Temperature Gauge	1	A0212824	42	Spindle Below Door Panel	2	A0212557
3	Temperature Gauge Seat	1	A0212967	43	Spacing Screw Below Door Panel	2	A02120079
4	Main Lid Screw	2	A0407131	44	Cart Bottom Panel Front Cumberbund Strip	1	D010012063
5	Main Lid Handle	1	D010010251	45	Triangle Bracket, Left	2	D010012745
6	Hood Buffer	4	A0212666	46	Swivel Caster Fixing Plug	4	A0212805
7	Warming Rack	1	A02120877	47	Swivel Caster	4	A0211004
8	Cooking Grid With Hole	3	A0212804	48	Gas-jar Fixing Line	1	A0212837
9	Flame Tamer	4	D010012307	49	Lighting Rod	1	A0212835
10	Clamp Spring	4	A0212873	50	Door Handle	2	D010012747
11	Main Burner	4	A0212926	51	Front Door	2	D010012094
12	Main Burner Igniter Wire	4	D010012900	52	LED Lamp Seat-USB2.0	1	A02120032
13	Back Panel, Top	1	D010012737	53	LED Lamp Switch	1	A0212627
14	Grease Box Bracket	1	A0212838	54	LED Lamp Circuit	1	D010013690
15	Grease Box	1	D010012705	55	Main Control Panel	1	D010014390
16	Grease Tray	1	D010012072	56	Main Control Panel Frame	1	D010012108
17	Side Burner Lid Hinge Rod	1	A0212534	57	Gas Connector	1	A0212830
18	Side Burner Lid	1	D010007598	58	Gas Connector Fixing Panel	1	D010012298
19	Side Burner Cooking Grid, Right	1	A0212248	59	Main Burner Flex Gas Line	1	A0212829
20	Side Burner, Right	1	A0212533	60	LED Lamp Panel-B	4	A02120213
21	Side Burner Tray	1	D011006420	61	Pulse Igniter Module	1	A02120838
22	Side Burner Orifice Bracket	1	D019706920	62	Regulator, LP	1	A0212831
23	Side Burner Igniter, Right	1	A0212436	63	Main Manifold	1	A02120087
24	Side Burner Igniter Wire, Right	1	A0212869	64	Main Gas Valve	4	A02120914
25	Side Shelf, Right	1	D010014389	65	Gas Valve Circuit	1	A02120842
26	Hook	1	D010018023	66	Front Baffle	1	D010012052
27	Side Burner Orifice	1	A0212828	67	Control Panel Fixing Panel, Left	1	D010012050
28	Side Burner Flex Gas Line, 250	1	A020021	68	Control Panel Fixing Panel, Right	1	D010012051
29	Side Burner Flex Gas Line, 480	1	A02120090	69	Side Shelf, Left	1	D010012770
30	Side Burner Gas Valve, Right	1	A02120832	70	Firebox	1	D010012655
31	Control Knob Base	5	D010012905	71	Back Panel, A	1	D010015501
32	LED Lamp Panel-A	1	A02120804	72	Logo	1	A0212808
33	Control Knob	5	A02120817	73	NG Side Burner Orifice	1	A02120889
34	RUBBER GROMMET	1	A020064	74	NG Assembly		D010020645
35	Side Panel,Left	1	D010012742	74A	NG Hose		A02120849
36	Door Magnet	2	A0201249	74B	NG Regulator		A02120848
37	Cart Frame, Front	1	D010012721	74C	Slot Screwdriver		A02120843
38	Back Panel, Bottom	1	D010023163	74D	Orifice Sockets		A02120844
39	Bottom Panel	1	D010012098		Manual	1	C043481
40	Side Panel, Right	1	D010012903		Hardware Pack	1	D010012753

For assembly questions, call:
1-888-980-4933

To make sure you obtain the correct replacement parts for your gas grill, refer to the part numbers on this page.

Important: Keep this Owner's Manual for convenient reference and for part replacement.

Important: Use only parts listed above. When ordering parts, providing the following information:

1. Model #
2. Part Number (see PART# in chart)
3. Part Description
4. Quantity of parts needed
5. Grill serial number